
## INSTRUCTIONS FOR MODELS

S-2272-E2 S-2272-E15

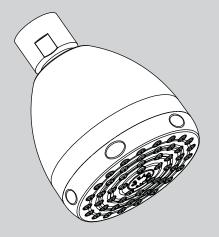

# TOOLS AND SUPPLIES

Thread Seal Tape Adjustable Wrench





# $\triangle$

## **IMPORTANT**



Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur.

#### SAFETY TIPS

•

Cover your drain to prevent loss of parts.

#### **MAINTENANCE**

0

Periodic cleaning using a mild soap and warm water will help keep your Showerhead's appearance in its original condition.

For best results, dry immediately with a soft, clean cloth. <u>DO NOT USE</u> harsh and/or abrasive cleaners.

To help restore the finish, occasionally apply a non-abrasive wax to your showerhead body (follow manufacturers' instructions).

On CHROME PLATED SHOWER HEADS, a two (2) part white vinegar, one (1) part water solution can be used to break down excessive mineral deposits on the sprays. Let the showerhead soak in the solution for about ½ hour then rinse thoroughly. Brush off any remaining mineral deposits if necessary.

<u>DO NOT USE</u> the vinegar/water treatment on any finish other than Chrome.


#### WARRANTY

0


Additional warranty information can be found at: www.speakman.com




Thread Shower head onto shower arm by turning it in a clockwise direction. Tighten with adjustable wrench. Turn water supply on and check for leaks.

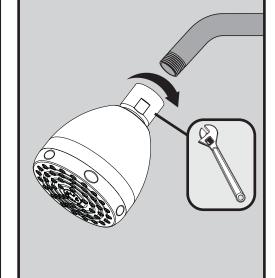

# **ROUGH IN DIMENSIONS**

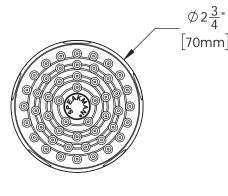

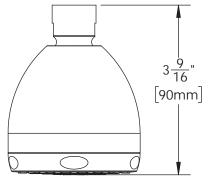

Model: S-2272-E2

Max. Flow Rate: 2.0 gpm (7.6 L/min)

Min. Flow Rate: 1.5 gpm (5.7 L/min) @ 45psi FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED

AT 6.6 L/MIN (1.75 GPM) OR LESS.

Model: S-2272-E15

Max. Flow Rate: 1.5 gpm (5.7 L/min)

Min. Flow Rate: 1.1 gpm (4.2 L/min) @ 45psi FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED

AT 5.2 L/MIN (1.37 GPM) OR LESS.

### **Specifications:**

Inlet: 1/2" NPSM FEMALE