SHARP | Simply Better Living





SMC1139FS 1.1 CU.FT. SMART MICROWAVE

Alexa Command List

SMC1139FS ALEXA COMMAND LIST

With the Amazon Alexa App or an Echo device you can enjoy hands-free cooking with over 30 Alexa voice commands.

| MENU ITEM | COMMAND | QUANTITY RANGE |
|---------------------------|--|--|
| + 30 Seconds | Alexa, add 30 seconds to the microwave. | 100% Power |
| Add Time | Alexa, add X minutes to the microwave. Alexa, add Y seconds to the microwave. | X = 01:00 - 60:00 Y = 00:01 - 00:59 |
| Pause Time | Alexa, pause the microwave. | - |
| Resume Time | Alexa, resume the microwave. | - |
| Stop Time | Alexa, stop the microwave. | - |
| Time Cook | Alexa, microwave for X minutes and Y seconds. Alexa, cook for X minutes and Y seconds. Alexa, reheat for X minutes and Y seconds. | X = 01:00 - 60:00 Y = 00:01 - 00:59 |
| Meat (Auto Defrost) | Alexa, defrost. Alexa, defrost meat. Alexa, defrost X pounds of meat. | X = 1.0 / 1.5 / 2.0 / 2.5 lb |
| Poultry (Auto Defrost) | Alexa, defrost poultry. Alexa, defrost X pounds of poultry. | X = 1.5 / 2.0 / 2.5 / 3.0 lb |
| Seafood (Auto Defrost) | Alexa, defrost seafood. Alexa, defrost X pounds of seafood. | X = 0.5 / 1.0 / 1.5 / 2.0 lb |
| Time Defrost | Alexa, defrost for X minutes. Alexa, defrost for Y seconds. | X = 01:00 - 60:00 Y = 00:01 - 00:59 |

SMC1139FS ALEXA COMMAND LIST CONT.

| MENU ITEM | COMMAND | QUANTITY RANGE |
|-------------------|---|---------------------------------|
| Time Cook | Alexa, microwave/cook for X minutes / seconds at power level Y. | X = 00:01 - 60:00 Y = 1 - 10 |
| Beverage | Alexa, microwave/cook beverage. Alexa, microwave/cook X cups of beverage. | X = 1 / 2 / 3 cups |
| Frozen Pizza | Alexa, microwave/cook frozen pizza. Alexa, microwave/cook X oz of frozen pizza. | X = 7 - 14 oz |
| Reheat | Alexa, reheat dinner plate/leftovers. | X = 12 - 15 oz |
| Popcorn | Alexa, microwave/cook popcorn. Alexa, microwave/cook X popcorn. | X = Single / Classic |
| Potato | Alexa, microwave/cook potato. Alexa, microwave/cook X potato(es). | X = 1 / 2 / 3 |
| Fresh Vegetables | Alexa, microwave/cook fresh vegetables. Alexa, microwave/cook X oz of fresh vegetables. | X = 4 - 16 oz |
| Frozen Vegetables | Alexa, microwave/cook frozen vegetables Alexa, microwave/cook X oz of frozen vegetables | X = 4 - 16 oz |
| | Amazon, Alexa and all related loaos are trademarks of Amazon.com, Inc. | |

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. and its affiliates

© 2020 Sharp Electronics Corporation. All rights reserved.

Sharp and all related trademarks are trademarks or registered trademarks of Sharp Corporation and/or its affiliated companies. All other trademarks are property of their respective owners.



SIMPLY BETTER LIVING

At Sharp Home Electronics Company of America, we are committed to Simply Better Living. Our innovative home appliance products are SIMPLE to use, BETTER than the competition, and encourage a HEALTHY LIFESTYLE.

SHARP ELECTRONICS CORPORATION 100 Paragon Drive, Montvale NJ, 07645 1.800.237.4277 • www.sharpusa.com



