

# ANZZI™


FR-AZ091CH  
FR-AZ091BN  
FR-AZ091ORB

FIVE HOLES BATHROOM BATH TUB Faucet

**SOLID BRASS  
CERAMIC CARTRIDGE**

HAND SPRAYER FLOW RATE: 2.0GPM

**LIMITED LIFETIME WARRANTY:**

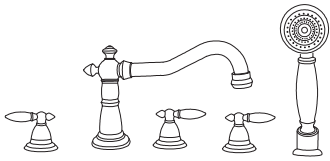

## PREPARATION


MAKE SURE TO SHUT OFF THE WATER FLOW FROM YOUR HOT AND COLD SUPPLY LINES.

MAKE SURE YOUR MOUNTING HOLE IS CUT TO SIZE.

Make sure your counter is no more than 1.18" thick.

The mounting holes should be 1.38" in diameter.

The center of each hole should be 7".

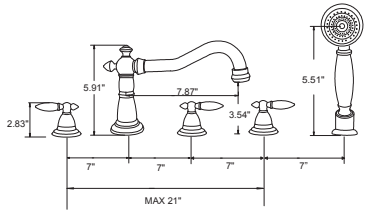

## STEP 1



### Handle installation

1. Disassemble the hot water handle.
2. From underneath, insert the hot water valve, rubber washer, metal washer and lock nut. From Top, install the handle and fixing nut.
3. Screw the nut to secure the valve.
4. Repeat steps to install cold water handle and cold water valve.

## STEP 2

### Spout installation


1. Disassemble the spout.
2. Place rubber washer, metal washer and secure the nut.

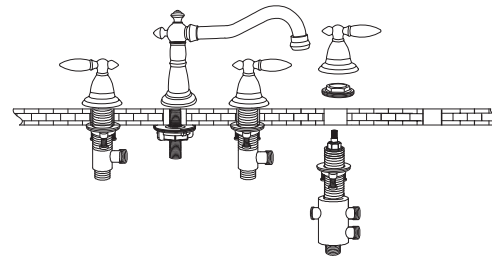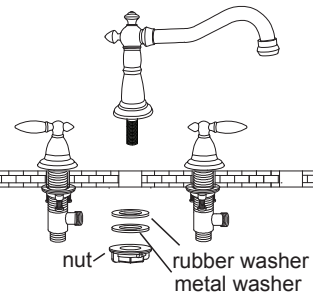

## STEP 3

### Diverter installation

1. Repeat steps to install the handle and diverter in the hole located on the right of the cold water handle.

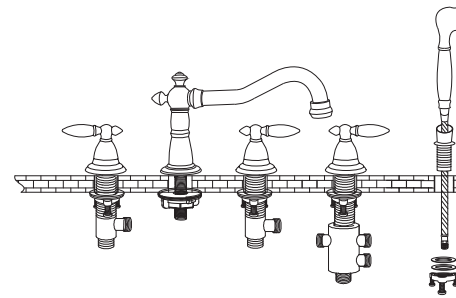

## STEP 4

### Hand shower holder installation

1. Put the base into the hole.
2. Put the hand shower holder through the base. secure it with the fixing kit as photo.

## STEP 1


### Handle installation

1. Disassemble the hot water handle.
2. From underneath, insert the hot water valve, rubber washer, metal washer and lock nut. From Top, install the handle and fixing nut.
3. Screw the nut to secure the valve.
4. Repeat steps to install cold water handle and cold water valve.

## STEP 2

### Spout installation

1. Disassemble the spout.
2. Place rubber washer, metal washer and secure the nut.

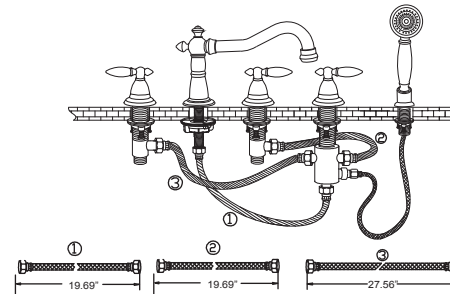

## STEP 5

### Valve and water supply connection

1. Connect the flexible hoses as the picture shows.

## STEP 6

1. Connect the flexible hose (not included) to water supply valve (not included), and tighten it with adjustable wrench.

**DON'T OVER TIGHTEN!**

Caution: make sure to connect the hot and cold flexible hoses to supply valves correctly.

Warning:

Supply valves and flex hoses not included. Purchased separately.

