




Type "B" Single Stage Centrifugal Pump Bearing Frame Mount

Section	FM
Page	Supplement A
Date	July 1, 2011
Supersedes 1/1/04	

Mechanical Shaft Seal Construction Packing Construction

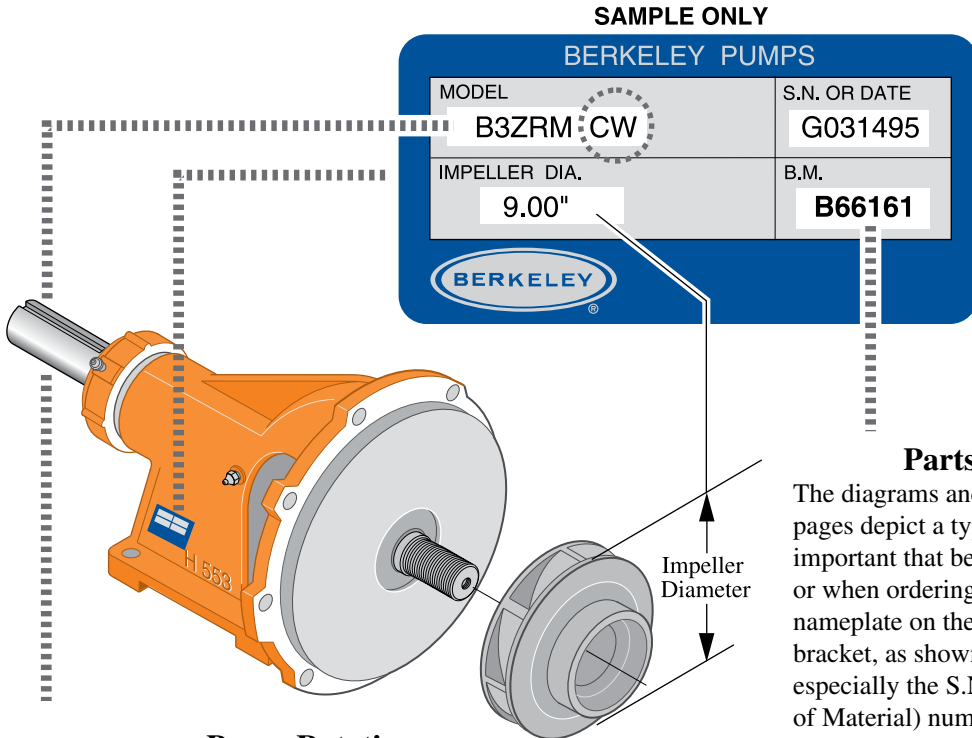

Parts Ordering Information

The diagrams and parts lists given on the following pages depict a typical pump configuration. It is most important that before calling in for repair instructions, or when ordering replacement parts, locate the Berkeley nameplate on the pump. It is affixed to the motor bracket, as shown here. Provide all nameplate data, especially the S.N. OR DATE number and the B.M. (Bill of Material) number to ensure receiving correct parts.

Pump Rotation

Pump operational rotation is sometimes stamped on the nameplate along with the Model Number and is indicated as CW or CCW. Refer to illustration to see how this rotational direction is determined.

Standard rotation for most models is CW.

CW – Clockwise
CCW – Counter-Clockwise

