


ASSEMBLY INSTRUCTION


SKU CODE: WF295299/WF295300

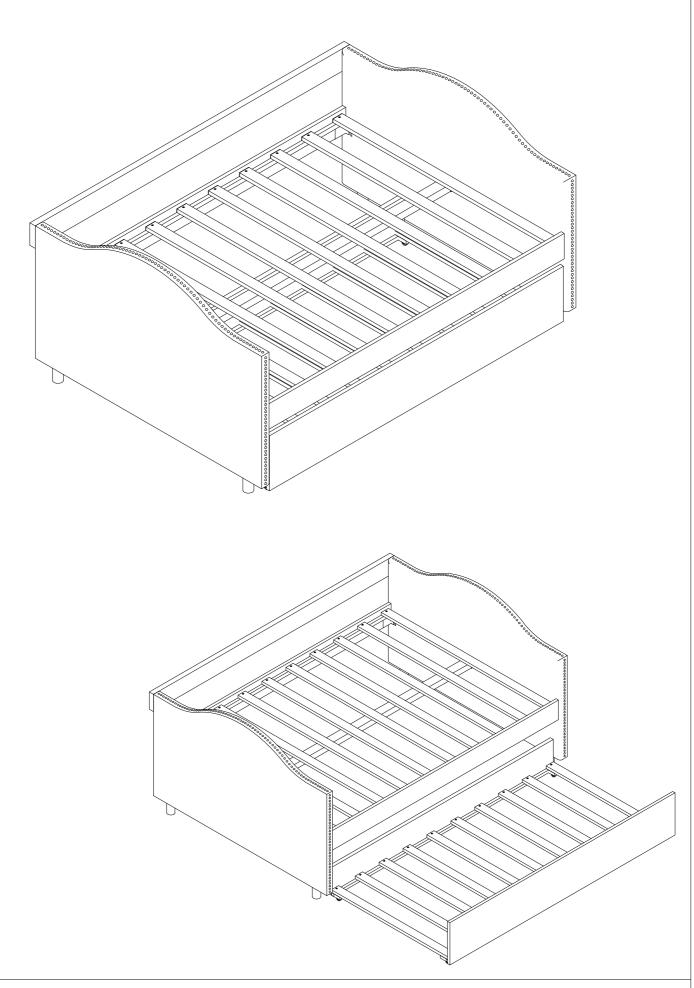

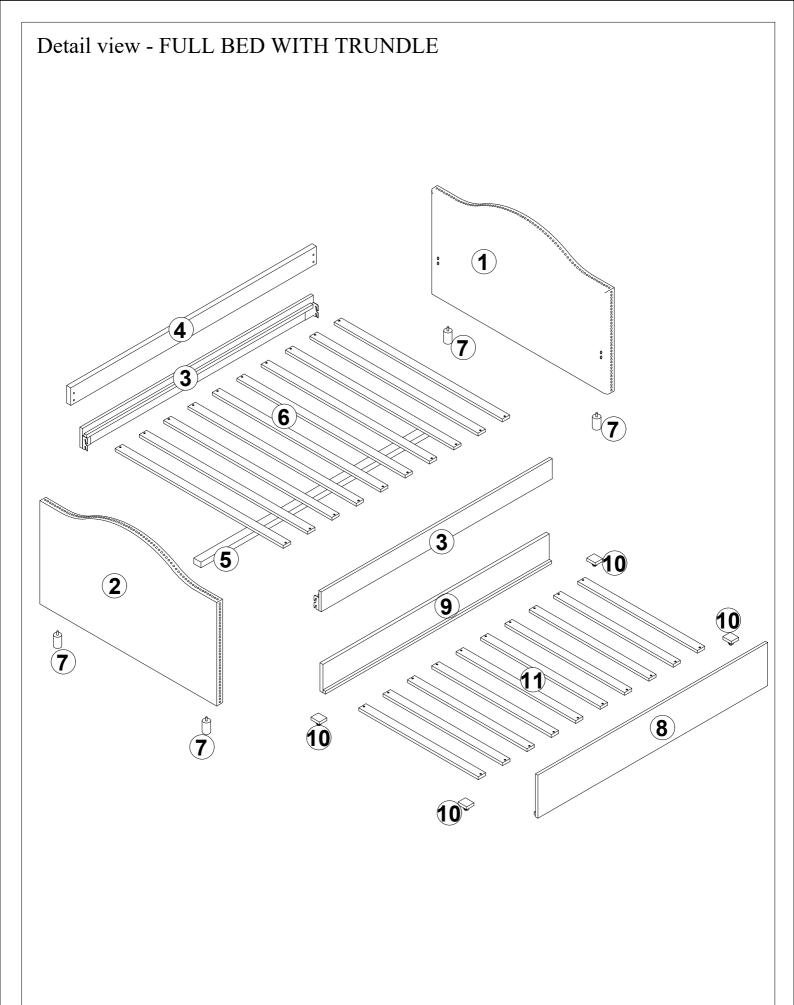

Identifying the Hardware - Indentify the hardware using the illustrations below.

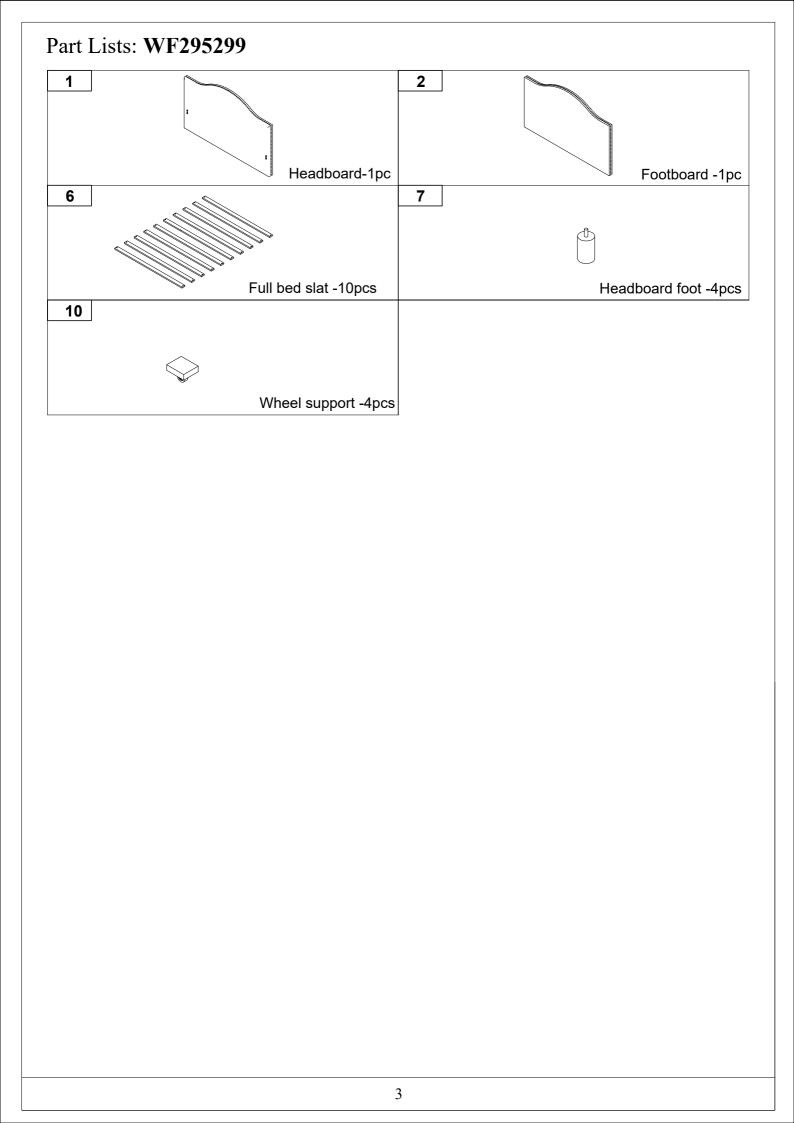

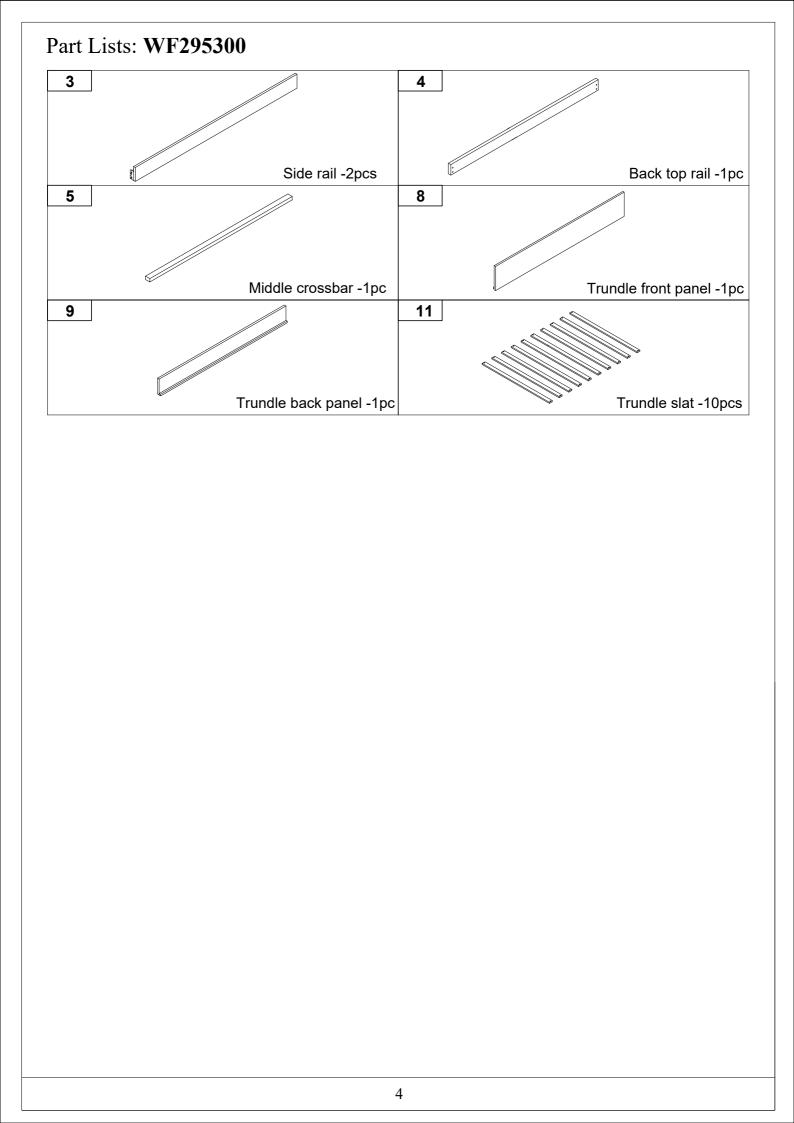

Hardware Lists: WF295299


A	B
4mm Allen key (1pc)	Ø5/16" x 25mm Hex-head bolt (8pcs)
C	
Ø5/16"	Ø5/16"
Spring washer (8pcs)	Flat washer(8pcs)
E	F
Ø1/4" x 40mm	Ø1/4"
Hex-head bolt (4pcs)	Spring washer (4pcs)
G	H
Ø1/4"	Ø4 x 30mm
Flat washer(4pcs)	Wood screw (48pcs)
	J Ø4 x 20mm
N. ()	
Metal support(2pcs)	Wood screw (16pcs)
ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)	
` '	


Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.


CAUTIONS:


- 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.


NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

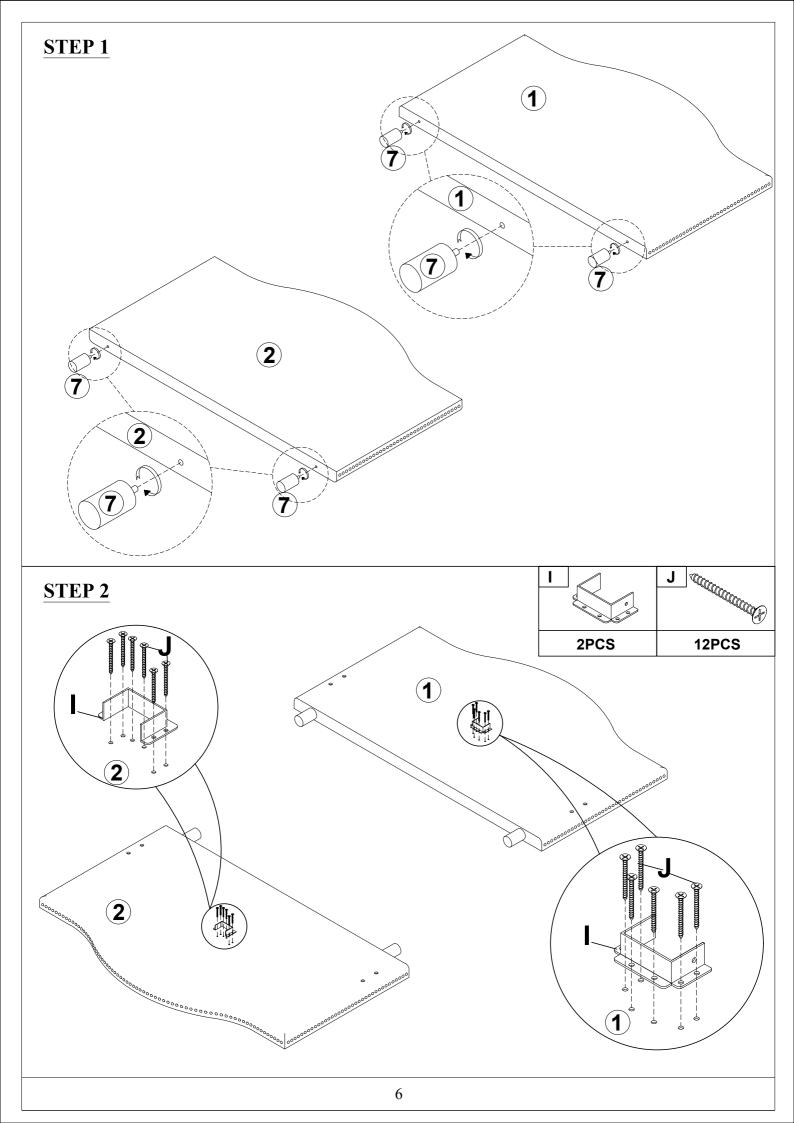


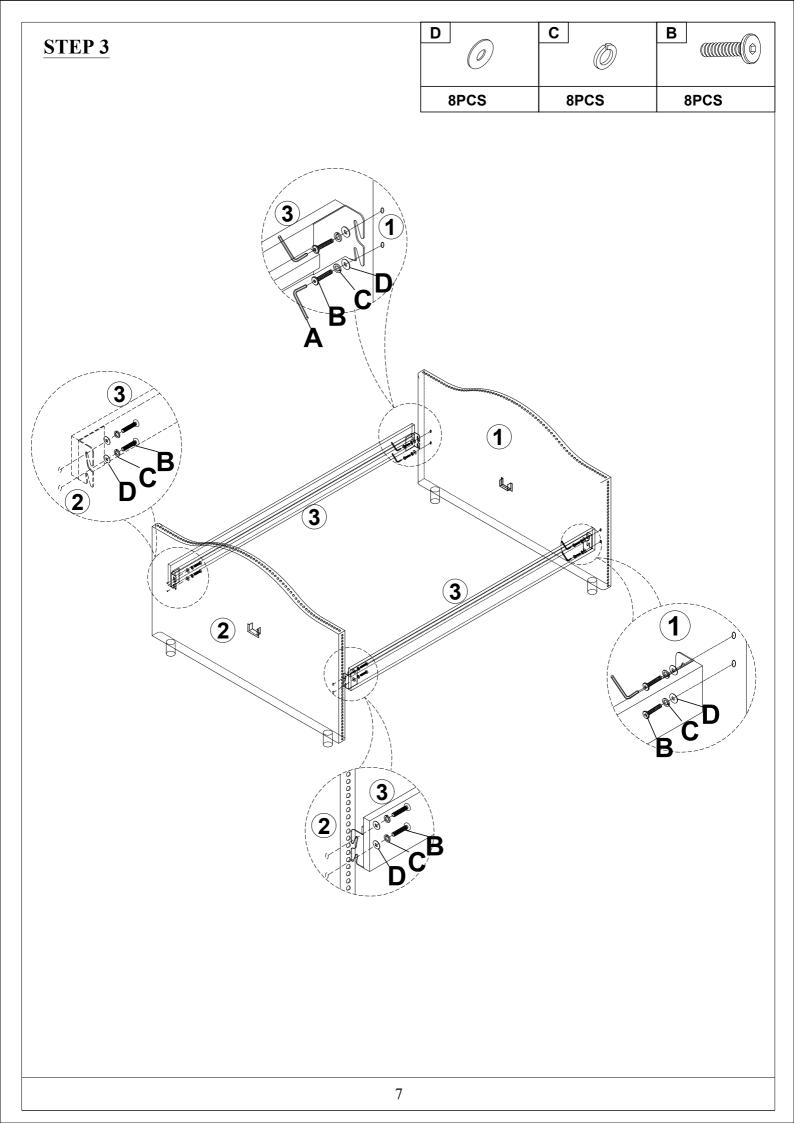

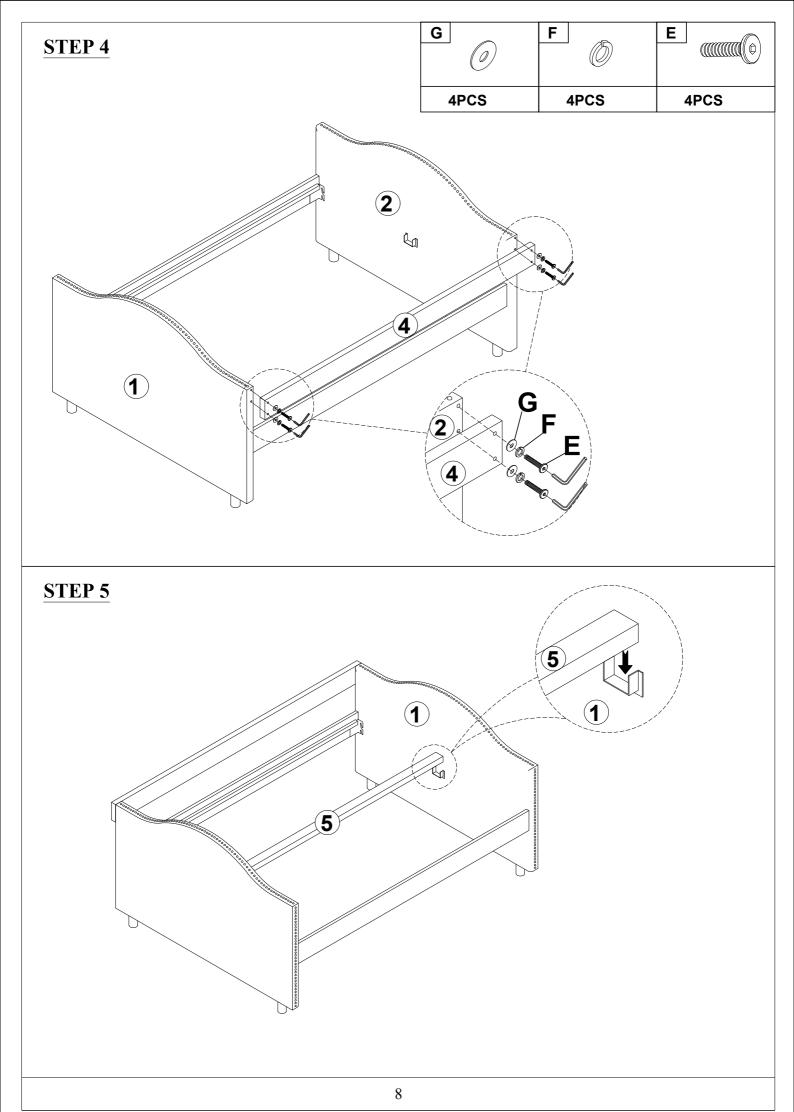

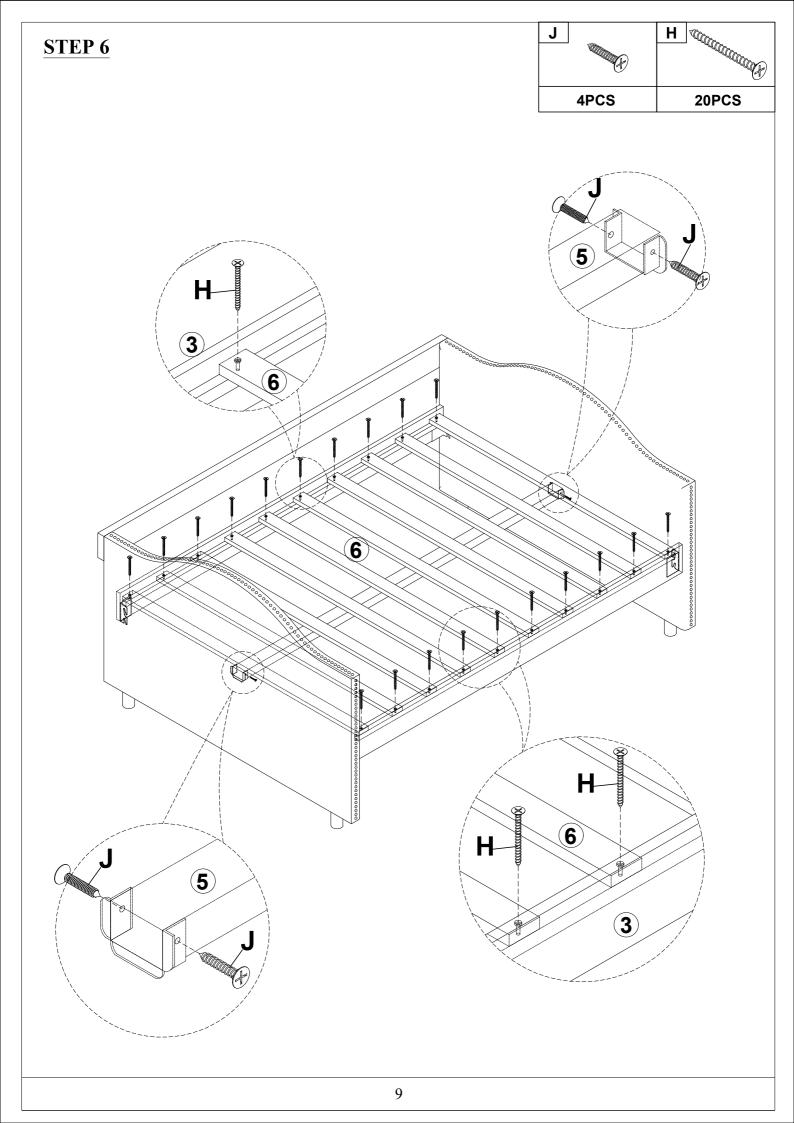

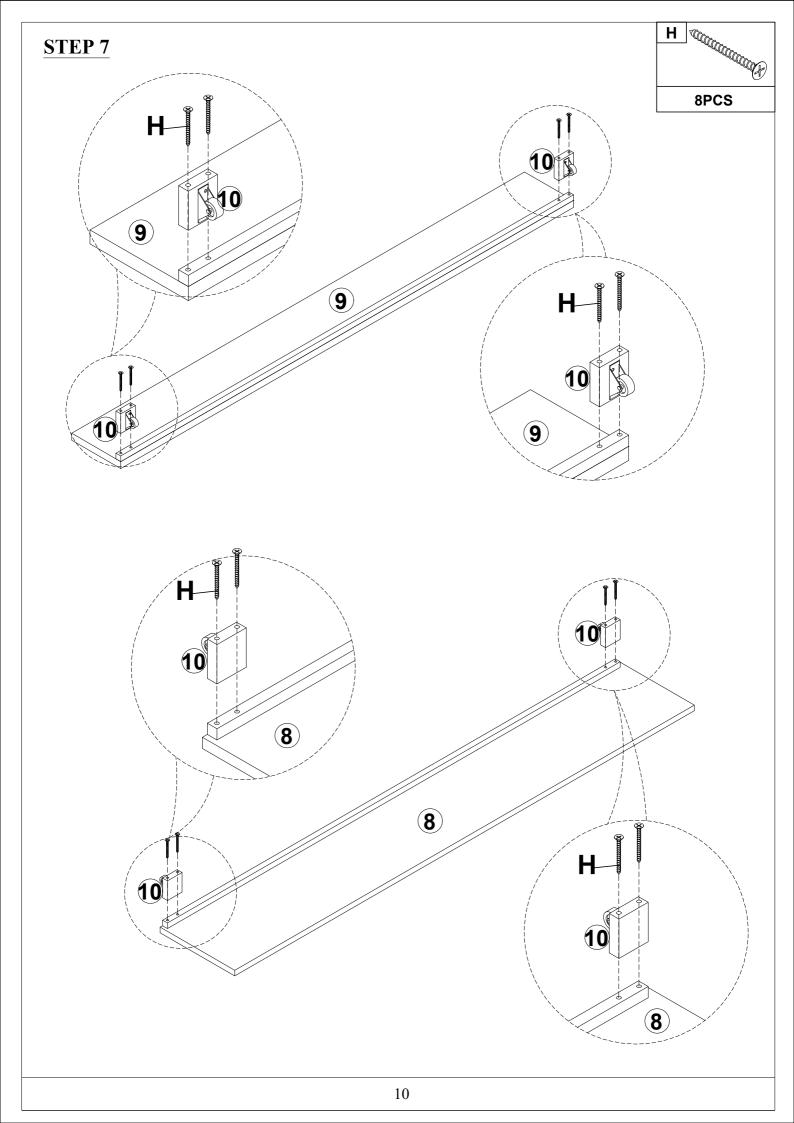

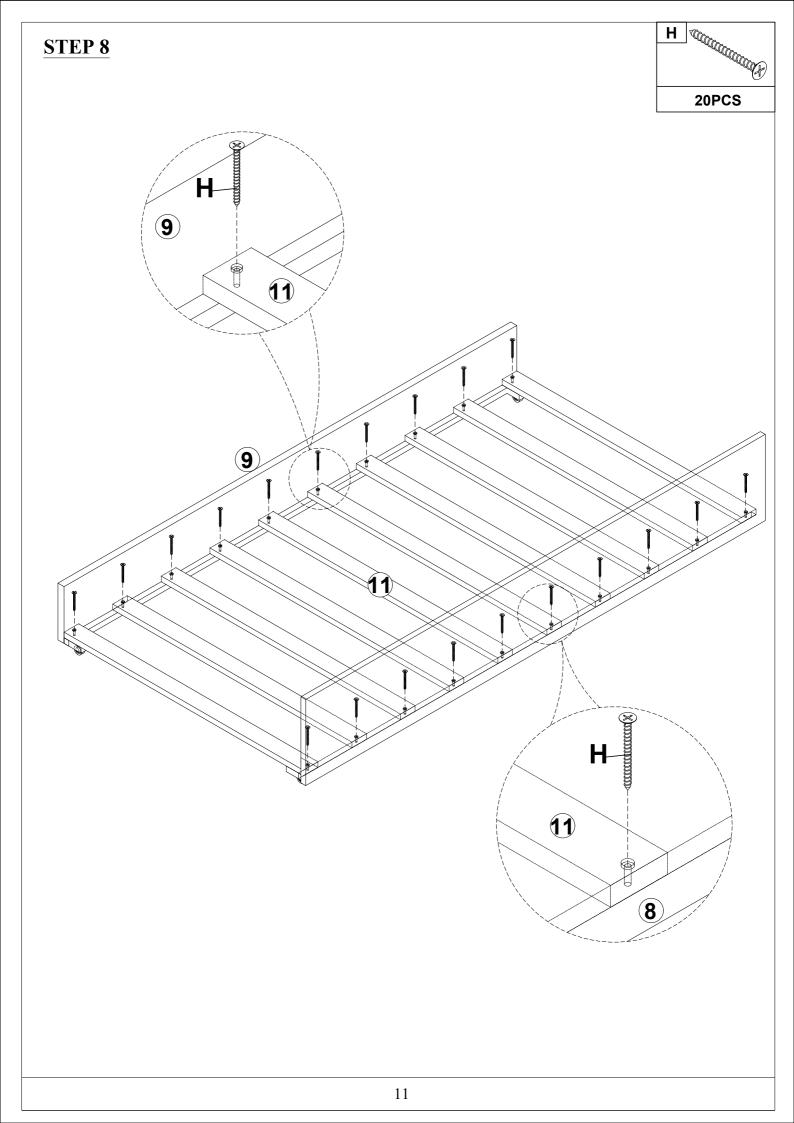

STEP 9 12