



MODEL: CB-02  
**Electric Spin Scrubber**  
PRODUCT INSTRUCTIONS



**Every scrub should be a delight!**

**Dovety Service Team**

- amazonservice@dovety.com
- tiktokservice@dovety.com
- www.dovety.com

Thank you for your purchase! Please read the instructions carefully before use and keep them for future reference.

**PRODUCT STRUCTURE**



- |                         |                            |                      |
|-------------------------|----------------------------|----------------------|
| 1. Sponge Brush         | 8. Tip Brush               | 15. Main Body        |
| 2. Cloth Brush          | 9. Small Brush             | 16. Indicator Light  |
| 3. Large Cloth Brush    | 10. Wall Mount             | 17. Control Panel    |
| 4. Fiber Brush Disc     | 11. Small Mesh Bag Storage | 18. Switch Button    |
| 5. Imitation Wool Brush | 12. USB Cable              | 19. Anti-Slip Handle |
| 6. Brush Head Holder    | 13. Telescopic Pole        | 20. Silicone Stopper |
| 7. Big Brush            | 14. Connect Head           |                      |

**ATTENTION**

- When using the telescopic rod, rotate the handle to loosen it before pulling out the telescopic rod normally; do not retract it directly.
- If external force is used to press the brush head, it may cause the machine to overload and stop working. In this case, hold for 3-5 seconds, then turn on the switch again, and it should function normally.
- The main body of the cleaning brush is not waterproof. Please do not immerse the main body in water to prevent water from entering the charging port and causing the product to fail to charge.
- Please check the fittings carefully before use.
- Do not place the charger in wet conditions.
- Ensure that the charging hole is sealed when cleaning.
- Dry the surface promptly after cleaning to ensure the product is dry.
- Do not use hot water to clean the product. When using warm water, ensure that the temperature is not too high to prevent scalding.
- Please ensure to use the standard charger provided for this product.
- Avoid touching the rotating parts with your hands or clothing during use.
- This product must not be used by persons (including children) who are not sound feel, or mentally handicapped or lack relevant experience and knowledge, unless there are persons responsible for their safety who supervise or direct their use of the product. Children should be taken care of to ensure that they do not play with these products.

**MAIN BODY PANEL FUNCTION**


Switch icon: Press the "switch button" by hand, and then the machine turns on and enters the rotating working mode, the working indicator light will be steady on, and the current remaining power will be displayed. When the machine is working, press the "switch button" button by hand, then the machine will enter the low-speed state, and then press the "icon" button again, the machine will stop working and the instructions will be put out.

When the power is too low, the bottom light of the switch panel flashes, indicating that the machine is about to shut down, please charge it in time before use.

When operated improperly, overloaded, or blocked for a long time, the machine will automatically shut down.

When charging, the 5 indicator lights on the panel turn on in a cycle. When the cycle lights do not circulate, it indicates the charging has been completed.

**HOW TO USE TELESCOPIC POLE**

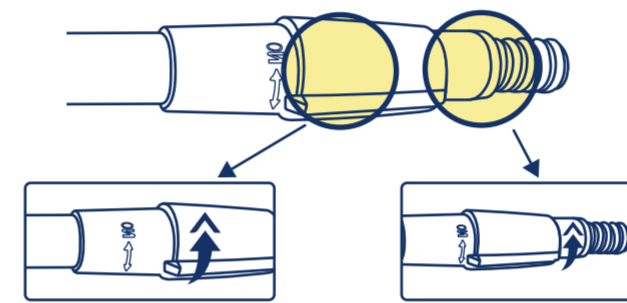

- STEP 1:** Open the outer lock to the "ON" position, as shown in Figure 1
- STEP 2:** Loosen the inner lock of the rotating telescopic rod, as shown in Figure 2

**HOW TO USE**

- Please fully charge the product before use!
- Install the appropriate brush head on the host according to the requirements of the place of use.
- Press the button once for High speed and twice for Low speed.
- During operation, the number of indicator lights on represents the current proportion of remaining power.
- After cleaning, turn off the machine in time, continue to replace the brush head, or clean the product and place the brush head properly.

**HOW TO REPLACE THE BRUSH HEAD**

- When replacing the brush head, the product should be closed and the fingers should be away from the switch button.
- Hold the brush head and pull it out vertically. When pulling the brush head, you can gently swing the brush head while pulling, so it is easier to pull it out.
- Installing the brush head, align the semicircular groove of the brush head with the convex groove of the brush head connector, and mount it vertically.

**CLEANING AND MAINTENANCE**

- Please check if the charging port is sealed when cleaning.
- You can wash the product under the tap or drive the product to high-end, and automatically clean the brush into the water.
- Do not use metal such as steel wire, abrasive cleaner or corrosive liquid (such as gasoline or acetone) to clean brush heads and fuselage.
- After the cleaning is finished, it is necessary to shake the moisture on the dry product and wipe it with a dry cloth.

**WATERPROOF CLEANING FUNCTION**



**Please note:** The main body is not completely waterproof, pay special attention to avoid water entering the charging port.

**HOW TO CHARGE**

- When the power of the machine is low, the light on the control panel starts flashing.
- Open the sealing plug of the charging port, insert the charging plug into the charging hole using the charging cable matched with the product, and the indicator light on the switch panel flashes alternately.
- The charging time of the product is about 4-5 hours.
- When all the indicator lights are on, it means that the power is sufficient.
- Pull out the charger and install the sealing plug.

**WARNING:** When charging, ensure that you use the provided charging cable with a DC5V/1A USB charger, and check to ensure that both the charger and charging cable are dry.

**ENVIRONMENT PROTECTION**

- Do not use more than 60° of hot water to clean the brush head and products.
- When disposing of products, please do not pile them up with general domestic waste; they should be handed over to the manufacturer's designated recycling center. This is good for environment protection.
- Built-in rechargeable batteries contain substances that may contaminate the environment. When products are discarded, make sure the battery is removed and properly handled.

**WARRANTY FOR ELECTRIC SPIN SCRUBBER**



- Do not use water hotter than 60°C to clean the brush head and products.
- Please remember or write down your order number or keep your other proof of purchase. We will use these documents to verify your order information and provide you with efficient and convenient after-sales service.
- Dovety is responsible for all quality issues of the product itself. Corrosion and artificial damage are not covered under warranty.
- The customer service team will carry out relevant verification based on the photos provided by the customers. Dovety will either repair or replace due to non-conformities or manufacture defects.