



## Changing the Strap

This Hazard 4® timepiece incorporates modularity like the rest of the brand's gear. Here, it is *fast-change straps* providing the customization. Most watches use hard to remove and breakable spring-pins. Spring-pin tools often scratch the watch case. We use much thicker and easier to use custom screw-in pins so there is less risk of scratching, and changing a strap/bracelet can be done more often.

- 1 Use your finger to hold the 4-sided pin in place.
- 2 Loosen the screw with the correct size driver bit. Carefully remove and retain the screw.
- 3 Slide the pin out from the case lugs and strap. Then, place the new strap between the lug ends, and carefully slide the pin back in place through the strap and lug-end openings. *If replacing with a nylon nato strap, simply reassemble the pin back in place without the strap - It will slide in later.*
- 4 While holding the pin in place with your finger, tighten the screw using the driver through the other lug-end. Do not overtighten, you may break the screwhead off. *Loctite® 243 compound or equivalent must be applied to the screw threads to ensure they do not vibrate loose over time. This may result in the watch falling off and will void the warranty.*