

P.O.D. Pressure On Demand



OWNERS MANUAL & INSTRUCTIONS



STOP AND READ THIS

**Please! Read all these instruction carefully before use
and save these instructions for future reference.**


SAFETY INSTRUCTIONS

 STOP AND READ THIS	USE DISTILLED WATER ONLY Do Not Overfill – Do Not Run Dry or you will void warranty!	 STOP AND READ THIS
---	---	---


**NEVER open the Pressure Cap during use or when unit is hot.
The Pressure Cap gets hot in use; handle it with care.**

Please read carefully!

- Do not direct steam at people, animals or at electrical devices.
- Do not operate machine without **Distilled Water** in the tank.
- Always purge machine (depress trigger and hold for 3 seconds) before use and after idle for 3-minutes or more.
- Do not allow machine to run unattended at any time.
- Close supervision is necessary when this machine is used near children. Do not allow it to be used as a toy.
- The machine is designed for TRAINED PERSONEL only, do not expose to rain.
- Do not overfill the water tank. The machine contains a maximum of 1500ml of **Distilled Water only**. Overfilling of the water tank may cause damage or injury.
- Never turn the machine over or tilt more than 45 degrees when it is switched on or if it's still producing steam.
- Never use this machine to clean electronic devices or installed electronics.
- Do not run UNIT for more than 1 hour at a time.
- Use extra care when cleaning on Dash Boards. Some dashboards cannot be exposed to moisture whatsoever.
- Do not immerse cord, plug or machine in water or any other liquid.
- Do not operate with a damaged cord, if the power cord is damaged or any improper performance of this machine occurs it should be repaired by a qualified electrician only.
- Keep hair, loose clothing, fingers, feet and all parts of body away from the jet of steam. Do not operate machine in bare feet or when wearing open toe shoes or sandals.
- Do not pull or carry by cord, use cord as a handle, close door on cord or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Unplug steamer when not in use. Turn all controls off before unplugging from outlet.
- Do not unplug by pulling on cord. Always grasp the plug, not the cord. Never handle plug or appliance with wet hands.
- Store in a dry place. Do not expose machine to freezing temperatures.
- Do not try to repair the Pressure On Demand Steamer unit yourself. Contact a qualified technician. To avoid danger, a defective cable should be replaced only with an equivalent cable and by the manufacturer, our after sales service or someone with a similar qualification.
- Use only original accessories.
- Regularly check the appliance and the cable. Do not switch the appliance on if it is damaged.

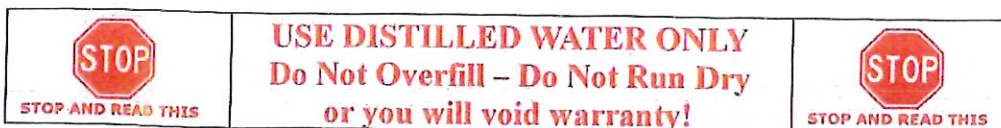

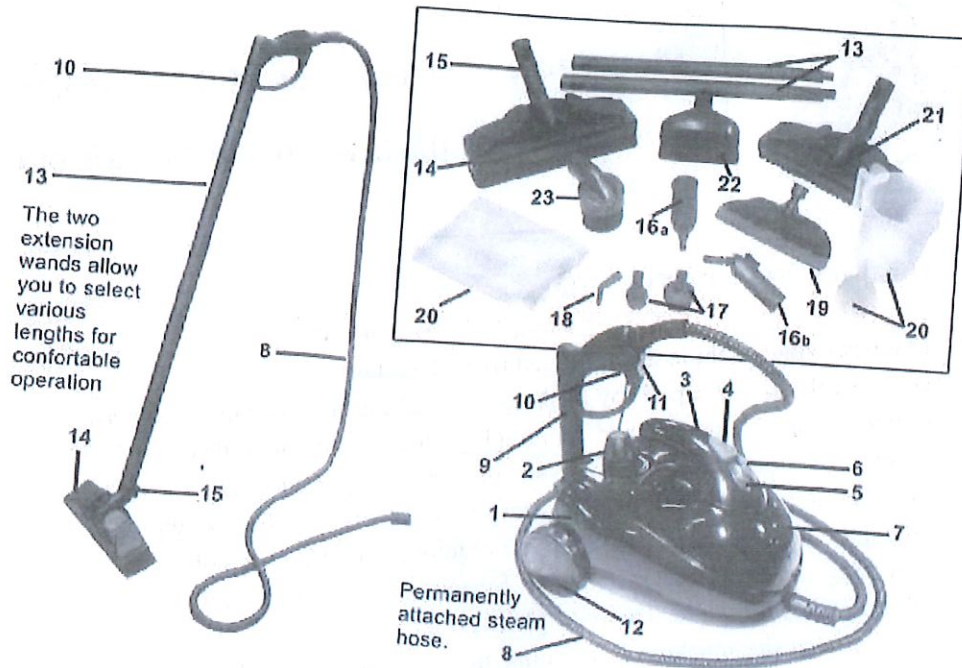

P.O.D. Pressure On Demand Accessories and Parts Description



- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Water tank 2. Pressure Fill Cap 3. Carry handle 4. On/off switch 5. Operating indicator Light 6. Steam indicator Light 7. Accessories storage Compartment 8. Fixed steam hose 9. Steam Gun 10. Steam trigger 11. Red Safety/Locking button 12. Wheels | <ol style="list-style-type: none"> 13. Extension wands 14. 12" Large Foam Head 15. Large Sponge Holder adaptor 16a. Straight Adaptor for accessories 16b. Angled Adaptor for accessories 17. Multi-purpose round brushes 18. High pressure nozzle 19. Pre Tint Cleaning Squeegee head 20. Measuring jug, funnel and cleaning cloth 21. Upholstery Brush 22. 5.5" Half Moon Foam Head 23. 3" Round Foam Head |
|---|---|

US Version Technical data: Main supply: 110-120V-60Hz, Power: 1500W, Tank capacity: 1.5 liters
Euro Version Technical data: Main supply: 230V-50Hz, Power: 1500W, Tank capacity: 1.5 liters.

 STOP AND READ THIS	USE DISTILLED WATER ONLY Do Not Overfill – Do Not Run Dry or you will void warranty!	 STOP AND READ THIS
--	---	--




Please note the front hood of this machine opens and some parts are packed inside of it.

USING UNIT FOR THE FIRST TIME

RUNNING MACHINE DRY WILL VOID WARRANTY!

- Make sure the machine is unplugged from the outlet.
- Unscrew the safety cap (2) by pushing down and turning counter clockwise.
- Using the measuring jug and funnel (15) fill the machine with up to 1500ml of water. This should be sufficient to steam clean for approximately one hour.
- Once full, replace the safety cap by turning clockwise and fasten tightly.
- Attach the desired attachment tool you require to the P.O.D. handle.
- Now plug the Pressure On Demand System into the outlet and switch on. Two lights should illuminate. The red light (5) is a power indicator. The orange light (6) indicates that the machine is building up steam pressure. When the machine is first turned on this light will illuminate and the Pressure On Demand System can take up to 12 minutes to reach the correct pressure level depending on the amount of water in the tank.
- Once the orange light has gone out the Pressure On Demand System is ready to use. The orange light may come back on when the machine is in use. If this happens, release the safety trigger and allow the steam pressure to build up once again. This should take no longer than 40 seconds. If the safety trigger is pressed when the orange light is on hot water may come out of the machine.

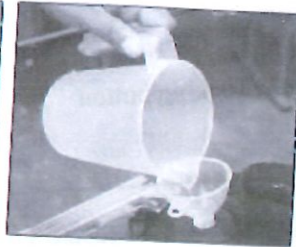

REFILLING THE WATER TANK

- Switch the machine off using the on/off button(4)
- Disconnect the power cable from the outlet. Wait 5 minutes before removing cap.
- Squeeze the handles trigger to make sure that the machine is no longer under pressure before unscrewing the safety cap. DO NOT unscrew the safety cap until the steam has stopped.
- Fill the water tank with DISTILLED WATER ONLY as necessary using the



USE DISTILLED WATER ONLY
Do Not Overfill – Do Not Run Dry
or you will void warranty!



- funnel provided.
- DO NOT exceed 1500ml of DISTILLED WATER ONLY before replacing the safety cap by turning clockwise. Fasten cap tightly.
- You are now ready to switch the Pressure On Demand System on and resume steaming

You must use DISTILLED WATER ONLY (this prevents internal lime scale that may damage the steam system)



Warning – risk of injury! Warning! This cap gets hot in use; handle with care.

CLEANING FLAT SURFACES

Attach the Large Sponge Holder to extension wands, which snap together. Then attach the extension wand to the steam gun. Ensure the extension wands are firmly connected. To release the extension wands press the button on the hose connection.

Cleaning flat surfaces with the cleaning cloth.

While the machine is switched off attach the cleaning cloth to the large sponge holder adaptor via the spring loaded clips, make sure the edges of the cleaning cloth are secure. DO NOT attempt to do this while the machine is still hot. Never remove the cleaning cloth when the safety trigger is released or the machine is warm to the touch.



Warning – risk of injury!



ATTACHING THE ACCESSORIES

The accessories may be attached to the steam gun (9) using one or both adaptors 16a and 16b. When using the round brushes or high-pressure nozzle, Squeegee head, adaptors 16a and 16b are both usable. One adaptor must be used with small brush accessories.

CLEANING AND MAINTENANCE

- Cleaning and maintenance operations should be carried out with the appliance



USE DISTILLED WATER ONLY
Do Not Overfill – Do Not Run Dry
or you will void warranty!



disconnected from the power supply.

- The machine should be allowed to completely cool down before it is stored away or cleaned.
- Clean the machine and its accessories with a slightly damp cloth only. Never use a cleaning product or detergent.
- To ensure that your machine operates correctly over a long period, rinse out the water tank once a month to remove lime-scale deposits.
- Never use vinegar or a lime-scale remover.

POWERING ON THE P. O. D. STEAMER SYSTEM

Before powering on the POD unit, check that the mains voltage that you want to use is suitable for the appliance. The information you need for this is shown on the identification plate located on the bottom of the steamer unit.



Photo 1



Photo 2

Operation of the steam gun

First: Know your steam gun.

You will find the Steam trigger & Red Safety/Locking button on steam gun.



You will find that Red safety button is imprinted with "off/lock on ". (See photo 1)

Second: Operation.

a) Steam spray on demand

When the P. O. D. is warmed up. First, press Red Safety button to the "ON" position, after that pull the steam trigger.

See photo (No.2)

 STOP AND READ THIS	USE DISTILLED WATER ONLY Do Not Overfill – Do Not Run Dry or you will void warranty!	 STOP AND READ THIS
---	---	---

b) Continuous steam spray.

If you want the P. O. D. Steamer to produce continuous steam without pressing and holding steam trigger multiple times, press red safety button to "Off/Lock" position until no longer needed.

Purge hose before initial or idle use.

Upon first use or when steamer has been idle for more than a few minutes, water will build up in the hose (due to temperature fluctuation from the tank to the nozzle). Therefore, it may be necessary to PURGE (pull the trigger pointing away from the job, perhaps into a trash can or towards the ground, to dispense any water built up in the hose prior to steam coming out again. It only takes a few seconds to PURGE the hose. Once only steam is coming out again, the unit is ready for install and removal use again.

Note: Water in hose can be used for pre and post vehicle cleaning. Use the water if you need it or can use it in your vehicle cleaning process.

ACCESSORIES

The accessories provided allow you to use the power of steam to blast away grease, grime, mildew, scum, all with minimum effort, from difficult to reach and clean places - all without the use of chemicals.

Cleaning Cloth (15)

Machine washable when dirty. Easily fits to the Upholstery brush (21) and 12" Large Foam Head (14) via spring loaded clips. The cloth is designed to lift, trap and absorb dirt from sensitive cleaning surfaces, leaving surfaces clean and sanitized.

12" Large Foam Head (14) and Upholstery Brush (21)


These tool only works with the Medium Pressure Angled adaptor (16b)
Use with extension wands for flat surface cleaning. It has spring loaded clips to hold the cleaning cloth. Upholstery Brush bristles loosen dirt and open fibers for steam to penetrate. Foam Head offers a wide steam spread.

Extension wands (13)

Two extension wands allow you to select various lengths for comfortable operation, reducing the need to bend while enabling you to reach high places. Wand and accessories snap-lock into place for leak free operation.

Round Brushes (17)

Essential for cleaning small hard to reach areas. Must be used with high-pressure straight adaptor only (16a).

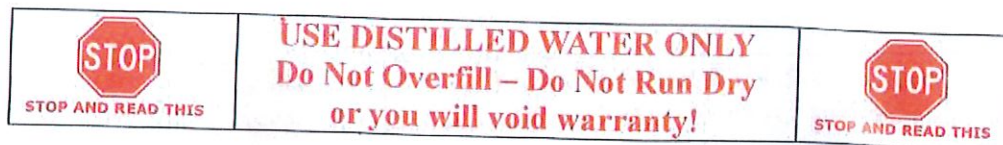

Squeegee (19)


Use on mirrors, windows or other smooth surfaces. Steam loosens surface dirt and the rubber blade of the squeegee scrapes it clean. Attaches directly to the steam gun using High-Pressure Angled Adaptor (16b).

High Pressure Nozzle (18)

Allows for concentrated high pressure steam flow. Connects directly to steam gun using both 16a and 16b adaptors.

Water Funnel and Measuring Jug (15)

Use the measuring jug to ensure you fill the machine with the correct amounts of water. The funnel ensures no mess when filling the tank!

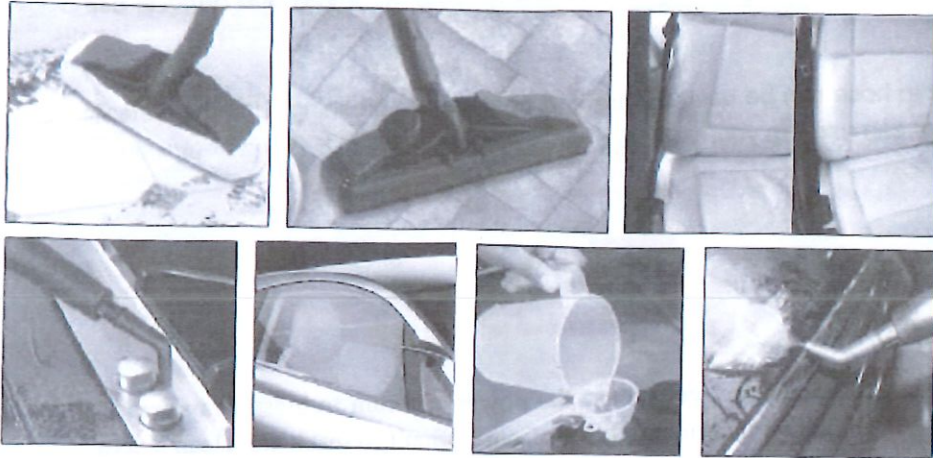



WARNING!

Please read carefully. Important safety instructions!
DO NOT switch this machine on or attempt to use it without water in the tank.
NEVER operate without the safety cap screwed tightly in place.
Read the attached safety instructions carefully before proceeding.



CAUTION!

Cleaning Fabrics:

	<p>USE DISTILLED WATER ONLY Do Not Overfill – Do Not Run Dry or you will void warranty!</p>	
---	--	---

A number of materials and fabrics are NOT suitable to be cleaned by steam for example: Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet, Dralon or other delicate, steam sensitive materials.



CAUTION!

We recommend:

You test in a hidden area before cleaning for color fastness and fabric sensitivity. If color or appearance is affected DO NOT proceed to steam clean.

Cleaning Glass/Mirrors:

Thermal shock can also shatter glass. Before cleaning glass surfaces, carefully warm the surface by directing the steam jet on the glass from a distance of no less than 6" or 15cm.

TROUBLESHOOTING (Before you call us!)

Water comes out of the nozzle

The P. O. D. Steamer develops a massive amount of steam. *The P.O.D. Steamer needs to be purged before each first use and after idle for 3-minutes. Steam may condense inside and turn into water or water droplets in the steam hose and tools and nozzle, which are then expelled when used after a period of cooling. This is normal and not a cause for concern.*

No power or steam comes out



Check in case the hose has become kinked or blocked, or that you have run out of water or power!

I can't get the pressure cap off

Use caution before making sure that you have completely de-pressurized the boiler-See the section REFILLING WITH WATER IN USE.

Steam flow is erratic; sometimes it works really well, sometimes not so well

If you have not used DISTILLED WATER ONLY, you may have a small blockage inside your unit. Your warranty is void and you may need to replace your machine.

 STOP AND READ THIS	USE DISTILLED WATER ONLY Do Not Overfill – Do Not Run Dry or you will void warranty!	 STOP AND READ THIS
---	---	---

I have hard water and use boiled water from the kettle, or water that I left in the boiler, now my Steam Cleaner doesn't work well at all.

Use DISTILLED WATER ONLY! You may have made matters worse-boiled water concentrates the minerals that form lime scale. Water left in the boiler will go bad if sitting for long periods of time. So, ALWAYS empty the machine after use and NEVER use boiled water.

Do Not Return To Store

Contact Warranty and Service Department

All Returns and Claims must be sent to:

Pressure On Demand

21617 Marilla Street

Chatsworth, CA 91311

818-766-8291

**Please note: We are not responsible for shipping costs.
All shipments must be at owner's expense.**

PLEASE RETAIN IN A SAFE PLACE FOR FUTURE REFERENCE!

End of Instruction Manual

