



# INSTRUCTIONS FOR USE

## SAFETY REQUIREMENTS

Wear appropriate hearing and eye protection. Use in well ventilated area. Do not exceed 90 psi. Do not use with acidic, flammable or combustible products; "USE ONLY WITH TORNADOR® PRODUCTS." Do not point cleaning tool at face or body. KEEP OUT OF REACH OF CHILDREN.

## AIR REQUIREMENTS

The TORNADOR® cleaning tool requires a minimum air pressure of 75 to 90 psi, constant, for optimum performance. DO NOT EXCEED 90 psi.

**NOTE:** Constant air supply may vary depending on compressor size and capabilities. Always make sure tank and air lines are free from oil and water contamination.

**Z-010**  
**TORNADOR®**  
*Classic*



## INSTRUCTIONS FOR USE



### Cleaning Fabric

1. Remove large debris and vacuum area to be cleaned.
2. Turn liquid air valve to upright position to deliver cleaning solution.
3. Hold cleaning nozzle 1 to 3 inches from area to be cleaned. Fully depress trigger. Begin with overlapping motion over area to be cleaned.
4. Next turn valve to down position using just air and dry the area.



### Cleaning Dashboard and Hard Surfaces.

1. Recommended air pressure set at 75 psi
2. Turn liquid valve to straight up vertical position, using an overlapping motion, spray area to be cleaned.
3. Allow cleaning liquid to remain on surface for 10 -15 seconds.
4. Follow with air only by turning valve to the horizontal down position. Begin drying with overlapping motion followed with a soft dry towel.

## CARE & MAINTENANCE

1. Avoid dropping the gun on the floor, disconnect when not being used.
2. Turn liquid valve to the horizontal position after use to avoid dripping from tip.
3. Tighten the jar while holding the lid to avoid loosening or stripping gun assembly.
4. Keep the cone of the gun clean by removing the cone and rinsing frequently.



**NOTE:** After every use, place nozzle 2-3 inches into a bucket of soapy water while depressing the trigger once or twice to quickly remove dirt buildup in the cone. This will prevent premature wear.

## TROUBLESHOOTING

### PROBLEM:

- Tip will not oscillate
- Tip moves slowly
- Tip drips fluid
- Will not dispense liquid

### SOLUTION:

- Check for low air pressure
- Check for dirt build-up and clean
- Keep liquid valve in the horizontal position when not in use
- Check pickup tube for debris and rinse out

## LIMITED WARRANTY

“90 day limited manufacturer’s warranty against manufacturing & part defects.” Warranty will be voided, if it is used for anything other than the intended use of the Tornado® cleaning tool. Use of any products, other the Tornado® products, with or in the Tornado® cleaning tool, voids warranty.