

ADULT ASSEMBLY REQUIRED



WARNING: Small Parts

Product contains small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.



WARNING: Tipping Hazard

This toy is **not meant** to be climbed on. Serious injury can occur with improper use.

- Place product on flat, level surface only
- Do not place heavy objects on top of this product

Assembly Instructions

1. Upon opening package, please inspect contents to make sure all parts and components are accounted for.
2. Place contents on padded or carpeted surface to avoid damage.
3. Please read assembly instructions carefully.

Use and Care

Use on level surfaces only, and routinely check hardware and tighten as necessary. Failure to maintain your new product may result in unsafe conditions for children.

We build our toys with years of future play in mind, so to ensure a long lifespan for your product, surface clean only with a dry soft cloth. To clean small stains, use a slightly damp cloth and if necessary, a mild detergent. Wipe all spills immediately and avoid using any abrasive cleaning agents or scrubs, including ammonia or alcohol based formulas.

For more information on how to care for your new toy, please visit www.miltonandgoose.com.


How to Assemble

Use ½" wrench to attach 4 legs (B) to table top (A) with nuts (C). Turn nuts clockwise until tight and securely attached.



 MILTON & GOOSE

Crescent Table

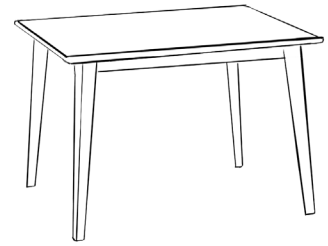


Tools Required

½" wrench

Parts

1 table top (A)
4 legs (B)
4 nuts (C)

A

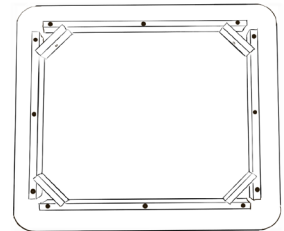

B
Qty 4



C
Qty 4

