


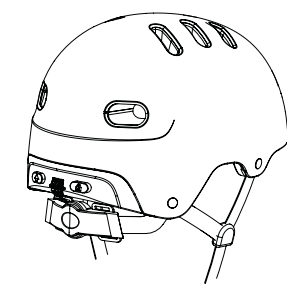

One Lock Helmet Owner's Manual

Keep it together with Headlokt.



EN1078:2012+A1:2012 certificate issued by: Kiwa Nederland B.V., Wilmsdorst 50, 7327 AC Apeldoorn, The Netherlands. Notified Body No. 0063

Declaration of conformity can be found at: <http://www.headlokt.com>

Thank you for choosing Headlokt!

Your new helmet has been created through careful design and meticulous manufacturing procedures. It has been designed for pedal cyclists, skateboarders and roller skaters. This helmet is NOT intended for use in motor sports or by motor cyclists.

Manufactured by:
Shunde Moon Helmet Co. Ltd.
Floor 11, Building 4, Jicheng Technology Innovation Park, No.25 East Sangle Road, Shunjiang Neighbourhood Committee, Beijiao Town, Shunde District, Foshan City, Guangdong Province, China

For:
Headlok Pty. Ltd.
Level 5, North Tower, 485 La Trobe St, Melbourne, Victoria 3000, Australia

Instructions For Sizing And Fitting Helmet

To protect you properly, your helmet must be the right size, fit correctly and be worn correctly. Do not use this product until you have read this Owner's Manual completely, and understand the limitations of the helmet.







Please follow these guidelines for a correct fit of the helmet:

1. Place the helmet on your head so that it sits straight and covers your forehead while not sitting too far forward to block your vision (see Fig. 1). Ensure the helmet doesn't sit too low on the back of your head/neck to expose your forehead (see Fig. 2).

2. Open the Cam-Lock adjusters (see Fig. 3). Put the helmet on and slide the straps through the adjusters as necessary to create an even "Y" shape, on both sides of the head. Close and lock the Cam-Lock adjusters. Ensure there is no slack in any of the straps and that adjusters are positioned just below your ears (see Fig. 4).

3. Always wear the helmet with the chin strap buckle fastened and the strap pulled tight. Fig. 5 and Fig. 6 show how to fasten and release the buckle. Make sure the strap is a firm yet comfortable fit under the lower jaw not on the point of the chin. The helmet should not rotate to the front or rear. Pull down on the strap to tighten. To loosen the strap, place your thumb under the chin buckle at point (A) (see Fig. 6) and lift out from the face, to slide the buckle along the strap.

Check to ensure the chinstrap is secure each time you put on your helmet: grab the helmet and try to remove it by rolling the helmet forward and backward, while the chinstrap buckle is fastened. If the helmet moves excessively, re-adjust the chinstrap. It should not be possible to remove the helmet without unfastening the chinstrap buckle.

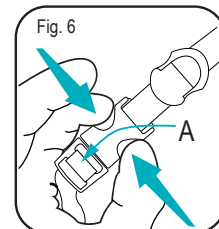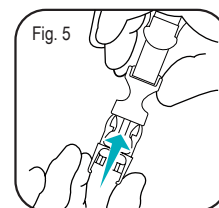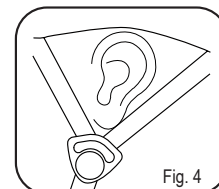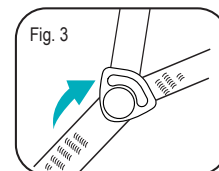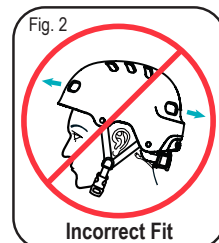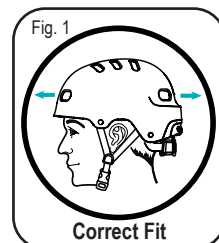

Instructions For Sizing And Fitting Helmet (cont'd)

4. Adjust the rear retention dial for a firm yet comfortable fit to your head (see Fig. 8).

5. The helmet should fit comfortably, so that it does not move as you tilt your head forward and backward, as well as side to side. The comfort pads inside the helmet should exert firm and comfortable pressure against your head. A helmet that fits well also fits comfortably, without being too tight. Your helmet may come with additional comfort pads that have a different thickness. Adjust the size and fitment of the helmet by using some or all of these additional pads in place of the pads fitted to the helmet.

WARNING! If it is not possible to adjust the helmet strap, retention dial and pads so that the helmet fits properly, do not buy this helmet. Please always buy a helmet that fits correctly and fits you properly.



Cleaning and Care of your Helmet

To clean the helmet, use only a soft towel and warm soapy water. The use of solvents, petroleum and petroleum products, cleaning agents, paints, adhesives and the like can damage the helmet.

Do not change anything about the helmet after you have purchased it, that is not detailed in this Owner's Manual. The addition of stickers or painting the surface is not recommended.

Store your helmet in a cool, dry place. The helmet can be damaged if exposed to excessive heat or very low temperatures.

Helmet has a lifespan of 3 years. After this time, it is recommended to replace helmet.

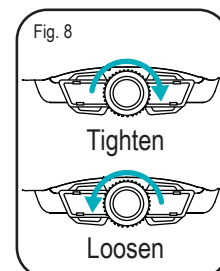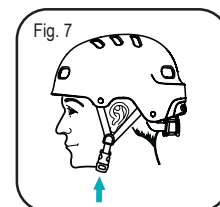

WARNING!

(a) No helmet can protect the wearer against all possible impacts, and serious injury or death could occur.

(b) The helmet is designed to be retained by a strap under the lower jaw.

(c) To be effective, a helmet must fit and be worn correctly. Different sizes should be test-fitted to choose the size that feels secure and comfortable on the head. To check for correct fit, place helmet on head and adjust buckle and rear fitment dial. Buckle should be positioned away from the jawbone and the straps, buckle and rear fitment dial should be adjusted to be both comfortable and firm. Securely fasten retention system. Grasp the helmet and try to rotate it to the front and rear. A correctly fitted helmet should be comfortable and should not move forward to obscure vision or rearward to expose the forehead.

(d) Tracking devices may be inserted as shown within this Headlokt Owner's Manual. No further attachments or modifications should be made to the helmet – any modifications made to the helmet that are not detailed within this Headlokt Owner's Manual may put the wearer at greater risk of serious injury or death.

(e) The helmet is designed to absorb shock by partial destruction of the shell and liner. This damage may not be visible. Therefore, if subjected to a severe blow, the helmet should be destroyed and replaced even if it appears undamaged.

(f) The helmet may be damaged and rendered ineffective by petroleum and petroleum products, cleaning agents, paints, adhesives and the like, without the damage being visible to the user. Refer to Cleaning and Care section of this Owner's Manual for correct procedures.

(g) A helmet has a limited lifespan of 3 years in use. After this time it is recommended to replace helmet. Helmet should also be replaced when it shows obvious signs of wear.

(h) Warning! This helmet should not be used by children while climbing or doing other activities where there is a risk of hanging or strangulation if the child gets trapped while wearing the helmet.

Instructions For Use of Lock

The lock on the rear of the helmet has been designed as a deterrent to theft. It is intended for temporary attachment of bicycles, scooters and other equipment - to bike racks, poles and other fixed infrastructure to deter and minimise potential theft of equipment. Headlokt and the manufacturers/suppliers will not accept any liability for personal injury, property damage, or loss.

Ensure these guidelines are followed for correct use of the lock:

1. To extend the cable, ensure combination dials (B) are displaying the correct number combination (see Fig. 9). Press and hold the Retract button (C) while gripping the Cable Head (D) and pulling away from the helmet to extend the cable.

2. Thread the cable through equipment and the fixed infrastructure item, as required and insert the Cable Head into Lock Port (E). The Cable Head should 'click' into place in the Port (see Fig. 10). Scramble the combination dials to leave locked and unattended.

3. To unlock, ensure combination dials (B) are displaying the correct number combination. Press Release Button (F) to pop out the Cable Head from the lock Port. Unthread the cable through equipment as required. To retract the cable, press and hold the Retract button (C) while holding the Cable Head and slowly allowing the cable to retract inside the helmet, until fully retracted. **Caution!** The cable retract mechanism is spring-loaded. For safety, do not let go of the Cable Head while retracting and avoid any possible cable rebound.

4. When the lock is not in use, and before wearing the helmet, ensure the cable is fully retracted as shown in Fig. 12. If required, press the Retract button (C) while gently pushing the Cable Head, until the Head protrudes from the hole 3-5mm.





Setting/Resetting Lock Combination:

1. To set or reset the lock combination, first ensure combination dials are displaying the correct number combination - small dots on either side of the dials indicate the line of numbers used for the lock combination (see Fig. 12, displaying combination '1-1-3'). If the Lock combination has not yet been set, this default number will be '0-0-0'.

2. Press and hold down the Cable Retract button (C) while pushing the Cable Head inside the helmet, until you hear a small 'click'.

3. Rotate the Combination dials to set your personal number combination.

4. Press and hold down the Cable Retract button while pulling out the Cable Head from the hole. Your personal combination number is now set.

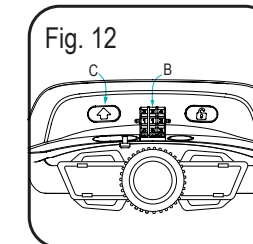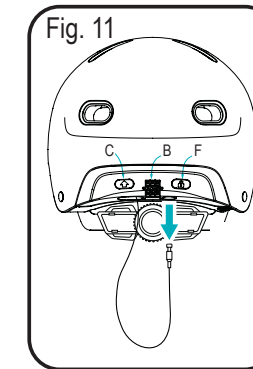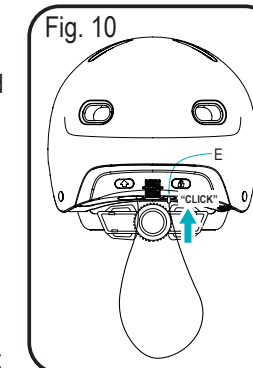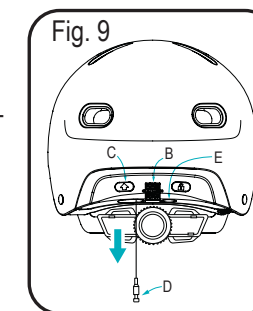

Instructions For Use of Tracker Holder

The Tracker Holder fitted with your helmet has the capability of storing some tracking devices available on the market. This can assist you in tracking your helmet's location, or aiding to track a loved one (e.g. your child.) Fitting a tracking device to the helmet is not required for regular use of the helmet.

Headlokt and the manufacturers/suppliers will not accept any liability for personal injury, property damage, or loss.

Ensure these guidelines are followed for correct use of the Tracker Holder:

1. To release the Tracker Holder, simultaneously hold the Fixed-Arm (G), squeeze the Flex-Arm (H) and pull the Holder out of the slot in the helmet (see Fig.13 and Fig. 14.)

2. Insert the tracking device into Tracker Holder (see Fig.15)

3. Hold the tracking device in place, in the Tracker Holder, while re-inserting the Tracker Holder into the helmet slot. Ensure the Tracker Holder 'clicks' in to place to ensure it is properly inserted (see Fig.16)





Warranty Information

Headlokt helmets have a 1-year warranty from the date of purchase. We will cover defective locks, adjustment dials, buckles and other hardware. We won't cover regular wear and tear or damage caused by improper use or accidents.

If you believe you have purchased a faulty helmet, please complete the Warranty Form located on the Headlokt website (www.headlokt.com). If we can't resolve the problem, we will arrange for a replacement product to be sent to you.

Enjoy your Headlokt Helmet.

Keep it together with Headlokt.

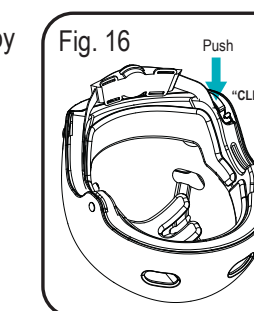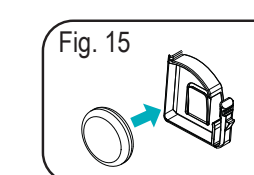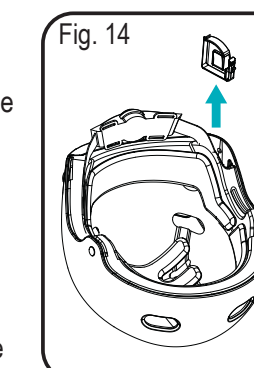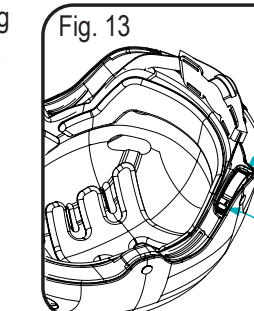

REV.	STATUS	DESCRIPTION	DATE	DRAWN	CHECK
0	DRAFT	DRAFT RELEASE FOR STANDARDS VERIFICATION - AUS STANDARDS ONLY	24 MAR 2023	MMF	
1	DRAFT	HELMET SECTION RELEASED FOR STANDARDS SUBMISSION - AS, CPSC, EN	31 MAR 2023	MMF	
2	DRAFT	COMPLETE MANUAL RELEASE FOR SUPPLIER, MARKETING CHECKS	4 APR 2023	MMF	
3	SUBMISS.	COMPLETE MANUAL RELEASE FOR STANDARDS SUBMISSION - AS, CPSC, EN	13 APR 2023	MMF	MW
4	SUBMISS.	TEXT UPDATE: P4, (h) "WHILST" CHANGED TO "WHILE"	21 APR 2023	MMF	
5	PROD'N PREP.	INSURANCE ADVICE: P4, (a) ADD "AND SERIOUS INJURY OR DEATH CAN OCCUR"	22 MAY 2023	MMF	
6	PROD'N PREP.	CIRCLE DIAGRAMS FIG.1 AND FIG.2: INCREASED TO DIAMETER 25MM	23 MAY 2023	MMF	
7	PROD'N PREP.	TEXT CHANGES AND ADDITIONS FOR EN1078 CERTIFICATION	4 AUG 2023	MMF	

Key + Colours	
	PMS 7466 C
	30% PMS 7466 C
	PMS 032 C
	PMS BLACK 3C
	Foldine (DO NOT PRINT)
	Dieline (DO NOT PRINT)

TITLE		Helmet Owner's Manual	
PROJECT	TETHER	CLIENT	HEADLOKT
ARTWORK NO.	TETH-ART-006	DRAWN BY	MMF
REFERENCED BY	-	CHECKED BY	-
REVISION	7	DRAWN DATE	24 MAR 2023

Cobalt Design Pty Ltd
17 Little Dryburgh St. Nth
North Melbourne 3051
Victoria, Australia
Ph: +61 3 9320 2200
Fax: +61 3 9326 4399

SCALE: 1:1 SIZE SHEET: 1 OF 1