

SteamWhistle manual - read before use!

Product overview



The SteamWhistle can be operated with or without a glass piece.

(14mm or 18mm joint)

If you don't use external cooling like a glass bong you need to add either cooling pads or glass beads (not included) to get the vapor cool enough.

Assembly options

18mm:

The SteamWhistle comes fully assembled to use with an 18mm accessory of your choice. Just push the heat intake out of the chimney and remove the stir/tamp tool.

14mm:

Add the 14mm adapter with the o-ring.


native use:

Add the cooling pad first, then add the 14mm adapter with the o-ring as a mouthpiece.



Get started

1. Load the ground herbs into your herb chamber.
2. Set the heat intake to the maximum setting. (Twist and push/pull for better use)

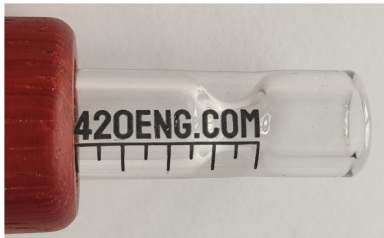

3. Aim the jet torch flame so it is angled rather than straight down the heat intake. The tip of the flame should be where the rim of the intake is.



4. Inhale slowly and continuously.
5. When no more vapor is being produced, let the intake cool down and adjust the flame intake step by step till your herbs are roasted to your preferences.
6. Now you can use your device without worrying about combustion too much.

Keep in mind that altering any factor

shown below can alter the outcome

- draw speed
- flame position
- flame angle
- flame intensity
- herb grind size and quality
- size of your load
- different accessories
- ambient temperature

Caution

Only use highly clean butane for your jet lighter.
Be cautious with the flame to avoid charring the wood.
The Flame Intake and the jet lighter can get very hot.
Keep that always in mind and be very cautious to prevent yourself from burnings.

Contact

mail@420eng.com

