CRAFTSMAN®

PROJECT PLANS



Valve Cover Gasket Replacement



MATERIALS

ITEM	QUANTITY
Breather Cover Screws	5
Chemical Gasket Maker	1
Engine Air Distribution Piece	1
Engine Crankcase Breather Hose Connector	1
Breather Hose	2
Valve Cover Gasket (left and right side)	2
Engine Crankcase Breather Hose Connector	1
Engine Oil Separator Hose	1
Degreaser	1

TOOLS USED



CRAFTSMAN® V20* Compact Task Light (CMCL005B)



CRAFTSMAN® V-Series™ Screwdriver Set (8 pc.) (CMHT65618V)



CRAFTSMAN® V-Series™ TORX® Screwdriver Set (5 pc.) (CMHT65630V)



CRAFTSMAN®
V-Series™ 3/8 in.
Drive Metric
Deep 6-Point
Socket Set
(12 pc.)
(CMMT17560V)



CRAFTSMAN®
V-Series™ 1/4 in.,
3/8 in., and 1/2 in.
Drive Comfort Grip
Long Flex
Head Ratchet
(3 pc.)

(CMMT86506V)



CRAFTSMAN® 28 oz. Dead Blow Hammer (CMHT54166)

*20V MAX battery, maximum initial battery voltage (measured without a workload) is 20 volts. Nominal voltage is 18.

CONTINUED



TOOLS USED



CRAFTSMAN® 24 oz. Steel Ball Peen Hammer (CMHT54183)



CRAFTSMAN® Precision Hook Bi-Material **Screwdriver Set** (4 pc.) (CMHT65073)



CRAFTSMAN® Pliers Master Set (25 pc.) (CMHT82625)



CRAFTSMAN® Rechargeable **Articulating Work Light** (CMMT25165)



CRAFTSMAN® 3/8 in. Drive **Extension Bar Set** (4 pc.) (CMMT43282)



CRAFTSMAN® 1/2 in. Drive **Extension Bar Set** (3 pc.) (CMMT43283)



CRAFTSMAN® 1/4 in. Drive **Extension Bar Set** (4 pc.) (CMMT43394)



CRAFTSMAN® Bristle Brush Set (3 pc.)(CMMT98312)



CRAFTSMAN® Pry Bar Set (3 pc.) (CMMT98347)



CRAFTSMAN® Bit Socket and **External TORX®** Socket Set (25 pc.) (CMMT99258)



CRAFTSMAN® Universal Joint Set (3 pc.) (CMMT99277)



CRAFTSMAN® 3/8 in. Drive Digital **Torque Wrench** (CMMT99435)



CRAFTSMAN® Mechanic **Touch Gloves** (CMMT14194)



CRAFTSMAN® Retrieval Tool Kit (CMMT98276)



CRAFTSMAN® Gasket Scraper (CMMT98354)



CRAFTSMAN® Razor Blade **Gasket Scraper** (CMMT98329)



1/4 in. Drive Round-Head Micro-Adjustable **Torque Wrench** (TWM200A)

PERSONAL PROTECTIVE EQUIPMENT

Eye Protection | Respiratory Protection | Hearing Protection | Gloves

Torx® is a trademark of Acument Intellectual Properties, LLC, used under license.



STEP 1

Identify the oil leak and its original point of failure. Using a <u>CRAFTSMAN®</u>

<u>V-SERIES™ Flex Head Ratchet</u>, remove the vehicle belly pan bolts and visually inspect with a <u>CRAFTSMAN® 280 Lumen Articulating Light</u>.

Additional CRAFTSMAN® tools used: V-SERIES™ 3/8 in. Socket Set and Extension Bar Set

STEP 2

Remove the rear seat and fold back the sound deadening mat.

STEP 3

Using a <u>CRAFTSMAN® V-SERIES™ Flex Head Ratchet</u>, disconnect the battery and tuck the negative terminal down to avoid accidental reconnection.

Additional CRAFTSMAN® tools used: <u>V-SERIES™ 3/8 in. Socket Set</u>

STEP 4

Using a <u>CRAFTSMAN® V-SERIES™ Flex Head Ratchet</u>, remove the oil drain plug and drain oil from the vehicle.

Additional CRAFTSMAN® tools used: V-SERIES™ 3/8 in. Socket Set

STEP 5

Reinstall the drain plug using a <u>CRAFTSMAN® V-SERIES™ Flex Head Ratchet</u> and torque the drain plug to manufacturer specifications.

Additional CRAFTSMAN® tools used: <u>3/8 in. Drive Digital Torque Wrench</u> and <u>V-SERIES™ 3/8 in.</u> <u>Socket Set</u>

STEP 6

Remove the air box and air ducting by first removing the left and right air inlets by hand and then removing the main airbox by hand.



STEP 7

Using <u>CRAFTSMAN® Pliers</u>, remove the ignition coil wires from each ignition coil.

STEP 8

Remove bolts that hold the ignition coils to valve covers by using a CRAFTSMAN® V-SERIES™ Flex Head Ratchet.

Additional CRAFTSMAN® tools used: External TORX® Socket Set

STEP 9

Remove ignition coils by hand.

STEP 10

Using <u>CRAFTSMAN® Pliers</u> and a <u>Precision Hook Bi-Material Screwdriver</u>, remove breather lines that connect to the valve cover.

Additional CRAFTSMAN® tools used: V-SERIES™ Screwdriver Set

STEP 11

Remove inverted bolts that secure the valve cover with a <u>CRAFTSMAN®</u>
<u>V-SERIES™ Flex Head Ratchet</u>. Use a <u>CRAFTSMAN® 28 oz. Dead Blow</u>
Hammer to remove the valve cover.

Additional CRAFTSMAN® tools used: <u>V-SERIES™ 3/8 in. Socket Set</u>, <u>External TORX® Socket Set</u>, <u>24 oz. Steel Ball Peen Hammer</u>, and <u>Pry Bar Set</u>

STEP 12

Clean parts with degreaser using a CRAFTSMAN® Bristle Brush.



STEP 13

Separate breather cover from valve cover. Clean valve cover and breather cover mating surfaces using a <u>CRAFTSMAN® Bristle Brush</u> and <u>CRAFTSMAN® Precision Hook Bi-Material Screwdriver.</u>

Additional CRAFTSMAN® tools used: Gasket Scraper and Razor Blade Gasket Scraper

STEP 14

Seal breather cover with liquid silicone gasket.

STEP 15

Replace breather cover bolts. Install breather cover to valve cover and torque bolts using a 1/4 in. Drive Round-Head Micro-Adjustable Torque Wrench.

Additional CRAFTSMAN® tools used: External TORX® Socket Set

STEP 16

Fit gasket and prep mating surfaces on the engine.

STEP 17

Install valve cover and torque bolts to manufacturer specifications using a 1/4 in. Drive Round-Head Micro-Adjustable Torque Wrench.

Additional CRAFTSMAN® tools used: External TORX® Socket Set

STEP **18**

Install ignition coils and torque bolts to manufacturer specifications using a 1/4 in. Drive Round-Head Micro-Adjustable Torque Wrench and <u>CRAFTSMAN®</u> 3/8 in. and 1/2 in. <u>Drive Extension Bar Sets</u>.

Additional CRAFTSMAN® tools used: External TORX® Socket Set



STEP 19

Install airbox and air ducting.

STEP 20

Fill engine with oil.

STEP **21**

Reconnect the battery using a <u>CRAFTSMAN® V-SERIES™ Flex Head Ratchet</u>. Install the rear seat.

Additional CRAFTSMAN® tools used: V-SERIES™ 3/8 in. Socket Set

STEP 22

Test drive vehicle and reinspect work.