

Safety Precautions

- Always read the manual and these precautions thoroughly before use.
- Use the product only for its intended purpose.
- Do not disassemble or modify the product.
- Use only the correct, specified disposable gas canisters.
- Keep the product out of reach of children.
- This product is for outdoor use only. Do not use it in poorly ventilated indoor areas or sealed spaces like tents or cars.
- Never use the product inside a box or any similar enclosed space.
- When igniting, keep your face and hands away from the burner to avoid burns.
- Do not move the product while it's in use. This can lead to incomplete combustion and a risk of fire.
- Do not use in strong winds. The flame may go out, causing unburned gas to leak and creating an explosion hazard.
- Never use the product with the wind blowing directly into the burner.
- Always place the product on a stable, level surface. Using it on an uneven surface may cause it to tip over.
- A "popping" sound may occur when you turn the unit off. This is the sound of leftover gas burning inside the burner and is normal.
- When storing the product, ensure it has cooled down completely. Always separate the gas canister and store it separately from the appliance.



Do not use this product inside a box or any similar enclosed space.



Never use the product with the wind blowing directly into the burner.