

# Midi Message Map

## Midi CC Messages

Parameter	CC	Range	Description
Bypass	0	0-3	0: Bypass effect pedal 1: Engage effect pedal 2: Toggle Bypass
Mix	1	0-127	Mix control
Rate	2	0-127	Rate Control
Depth	3	0-127	Depth Control
Algorithm	4	0-2	0: Harmonic Tremolo 1: Chorus 2: Phaser
Midi Channel	5	0-16	Sets MIDI channel

## MIDI PC Messages

Parameter	PC	Description
Bypass Toggle	0	Toggles the bypass
Change Preset	1-6	PC1 = Preset 1, PC2 = Preset 2, etc