# Wireless Credit Card System Installation Instructions PART NUMBER AC1067-SUW-KIT

# Your kit should include the following parts:

- 1. 1 Modem Processing Unit Part Number AC7777-MODEM
- 2. 1 SMA External Stub Antenna Part Number AC7777-STBANT
- 3. 1 External Credit Card Reader/Display Unit with Harnesses Part Number AC7777-CCRDR
- 4. 1 Translator Board with Harnesses Part Number AC7777-ND
- 5. 1 Super-U Board with Wireless Software Part Number AC1067-SUB
- 6. 1 Retro-board with Wireless Software Part Number AC7021
- 7. 1 Template for Credit Card Reader/Display Unit

#### **Step 1:**

Remove the main logic board that is installed in your machine.

#### Step 2:

Remove the Coin Hopper(s) from the machine.

# Step 3:

Drill a hole in the top of the machine to mount the antenna using a 5/8<sup>th</sup> inch steel hole saw.

# <u>Step 4:</u>

Use the template to drill the 5 holes required to mount the Credit Card Reader/Display Unit using a 3/16<sup>th</sup> inch steel drill bit for the 4 mounting holes and a 5/8<sup>th</sup> inch steel hole saw for the wire harness opening. See picture for mounting location of unit. Center the unit above the left bill validator.

#### **Step 5:**


Mount the Credit Card Reader/Display Unit and the antenna to the machine using the hardware included.

# Step 6:


Install the new logic board assembly where the old board was removed. The board assembly will have the Retro-board, the Translator board, the modem processing unit and the Super-U board all mounted on one bracket.

#### Step 7:


Connect the wire harnesses according to the accompanying picture.

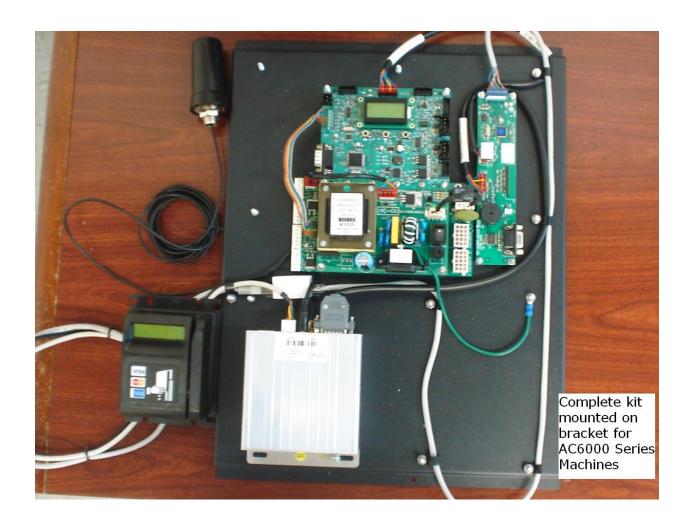



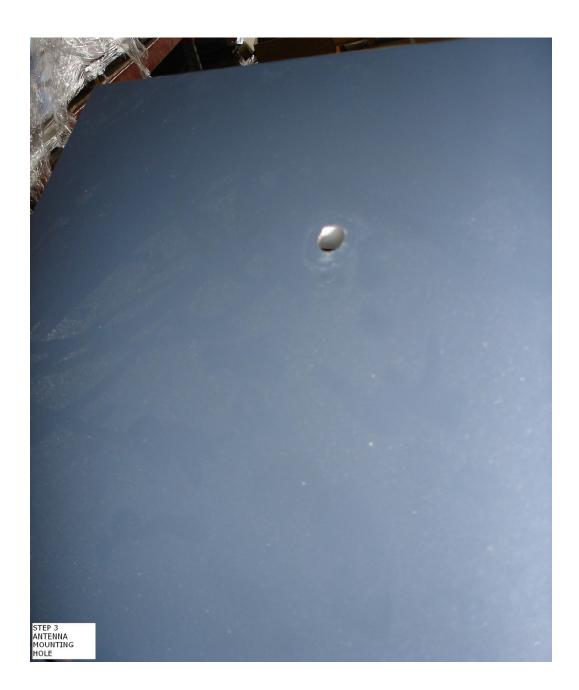



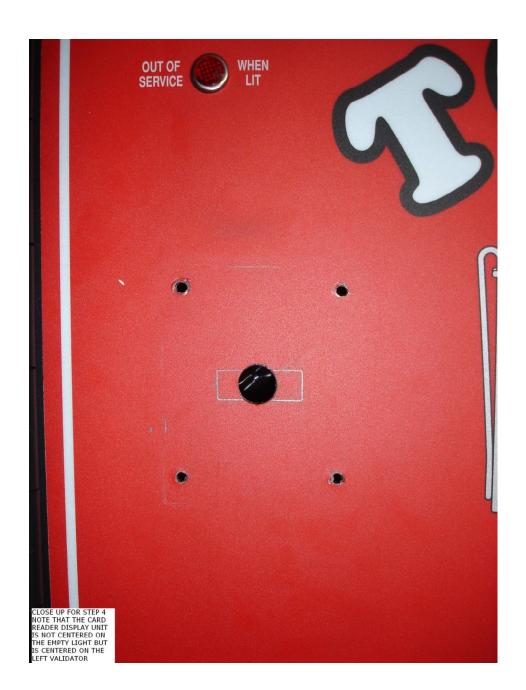



# TORENS







