


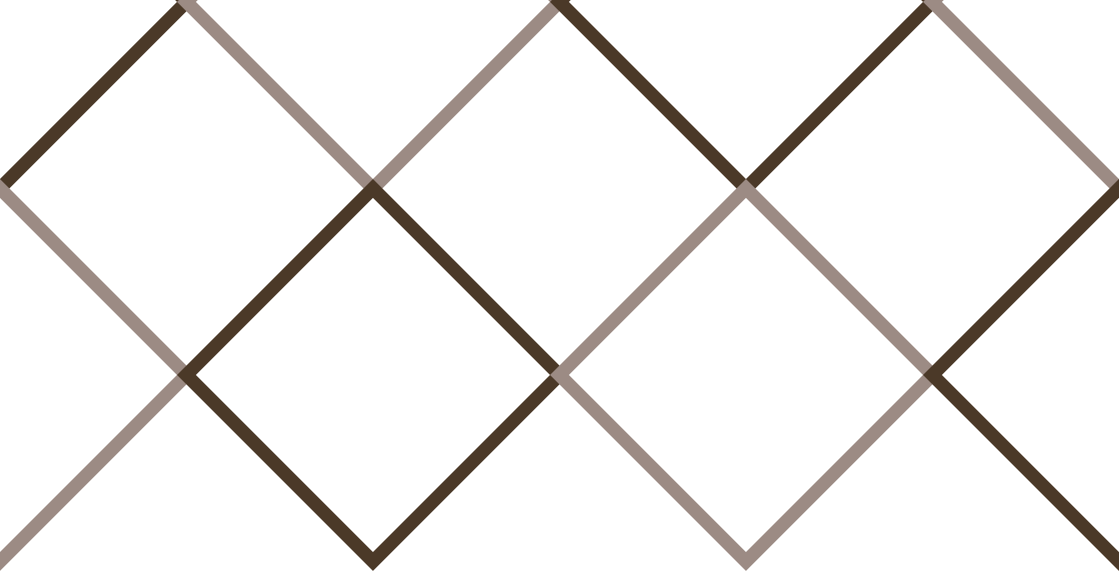


CANISTEO


MOTORIZED WAND SHADES



Deco Bar

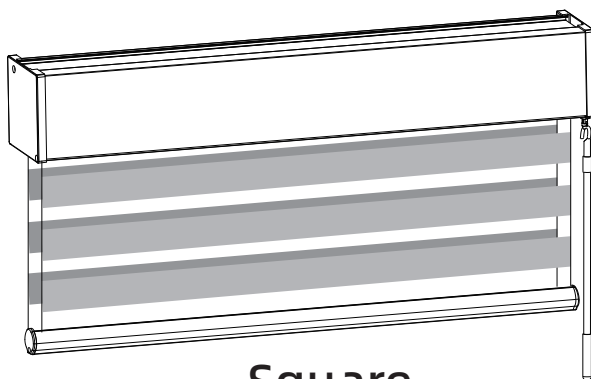


Square

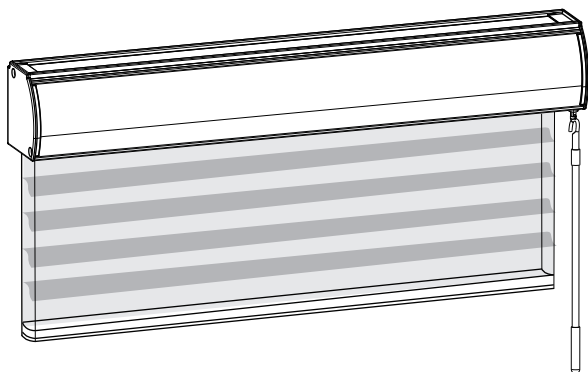


Cassette with Fabric Insert

Inside Mount

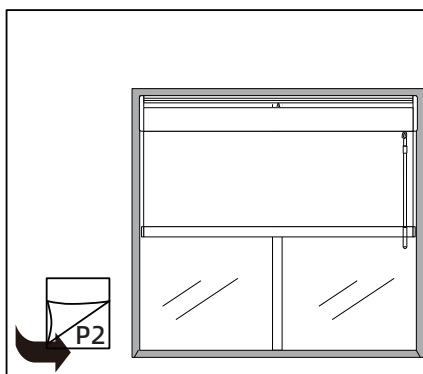

Outside Mount

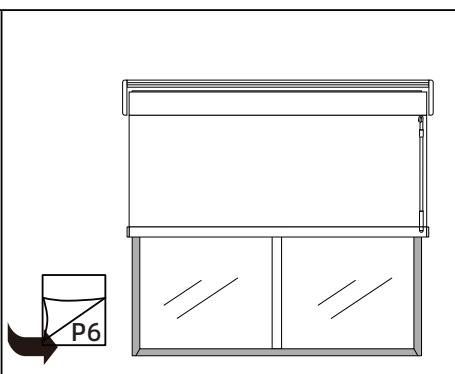

The following operations use the shade with a deco bar as an example.

TABLE OF CONTENTS

1. Preparation.....1

2. Shade Installation.....2


 2.1 Inside Mount.....2

 2.2 Outside Mount.....6


3. Shade Charging.....11

4. Quick Start.....13


Required Tools for Installation:

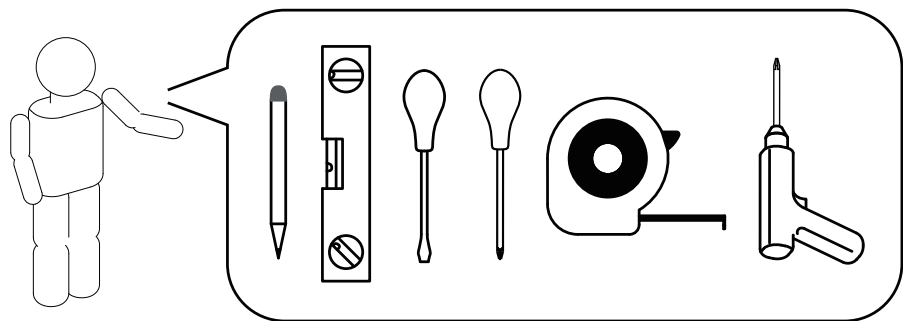


Included In the package:

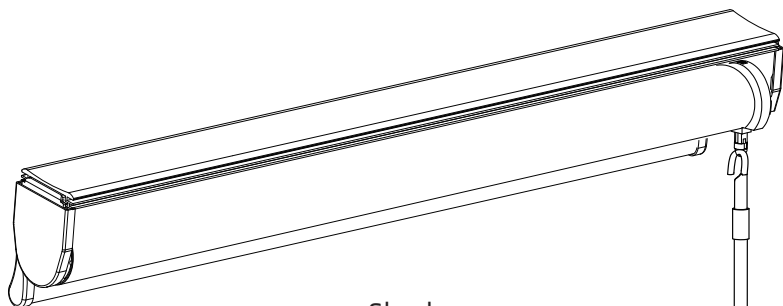


Shade

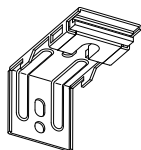

Brackets

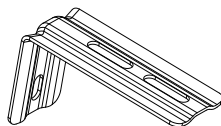

Extension
Brackets (optional)

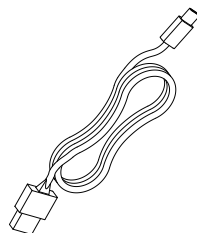


Charging Cable

Shade Installation

Detailed instructions for installation are vary. If you prefer an inside mount, proceed to Page 2. For an outside mount, go to Page 6. Before installing the shade, it is necessary to install the brackets to the shade and position them correctly to determine where the brackets will be mounted on the wall.

2.1 Inside Mount

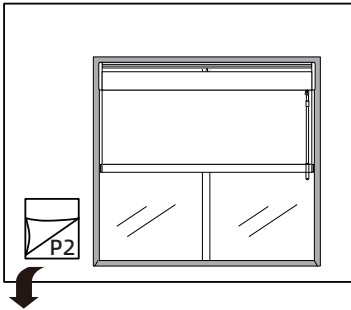


Top Mount


If you opt for an inside mount and your window frame width allows, top mounting is the optimal choice.

Step 1 Mark position

After installing the brackets at the correct position on the shade, determine the position for the brackets on the wall and the shade, then mark it on them.

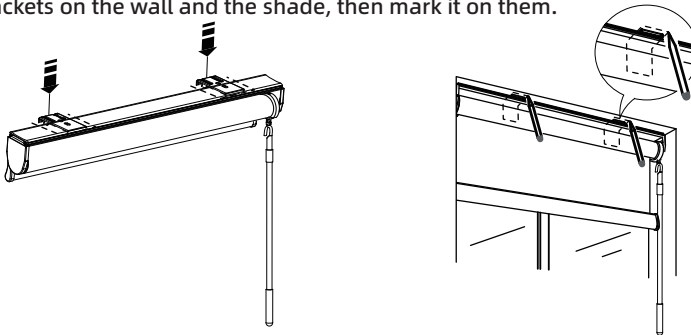


Note: The optimal position for the side caps on both sides to the center of the brackets is 10cm(4").

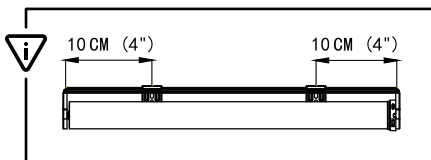


Shade Installation

Step 2 Install the brackets

Detach the installation brackets from the Deco bar. Then install the brackets on the wall at the pre-marked locations and secure them in place with screws.

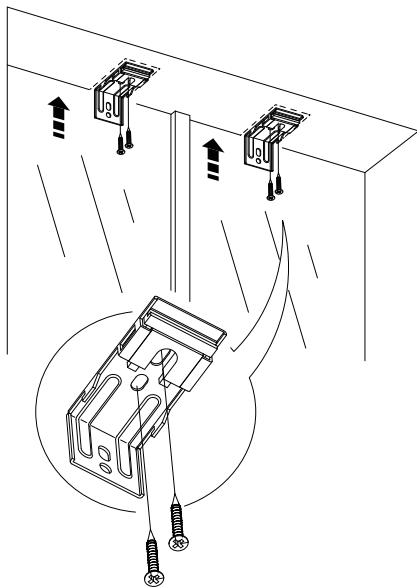

Step 3 Install the shade

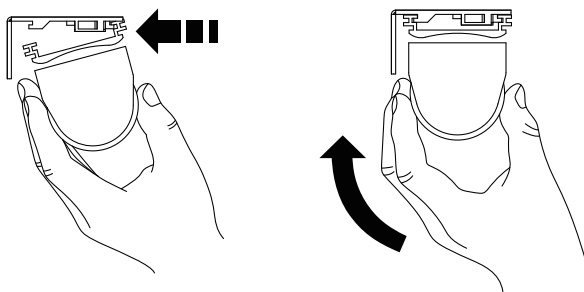


Shade Installation

Side Mount

If you choose an inside mount but find that the window frame depth is insufficient for bracket installation, consider opting for a side mount.

Step 1 Install brackets


Determine the position for the extension brackets on the wall and install the extended brackets on both sides of the wall. Then fix the installation brackets and extension brackets with screws.

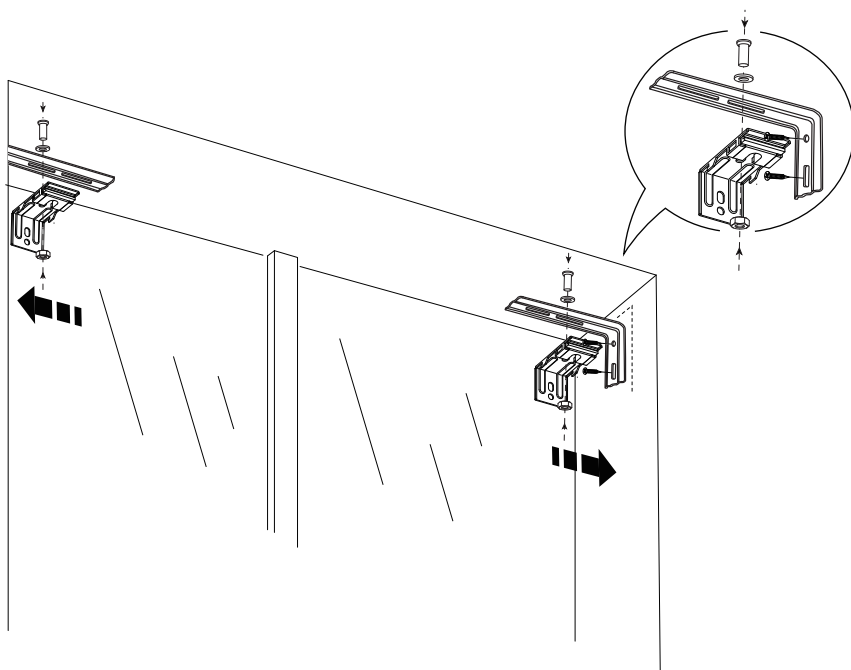

Note: To prevent light leakage at the top of the shades after installation, ensure that the extended brackets are installed as close to the top of the window frame as possible. Also, ensure that the brackets on both the left and right sides are positioned horizontally.


Shade Installation

Step 2 Install the shade

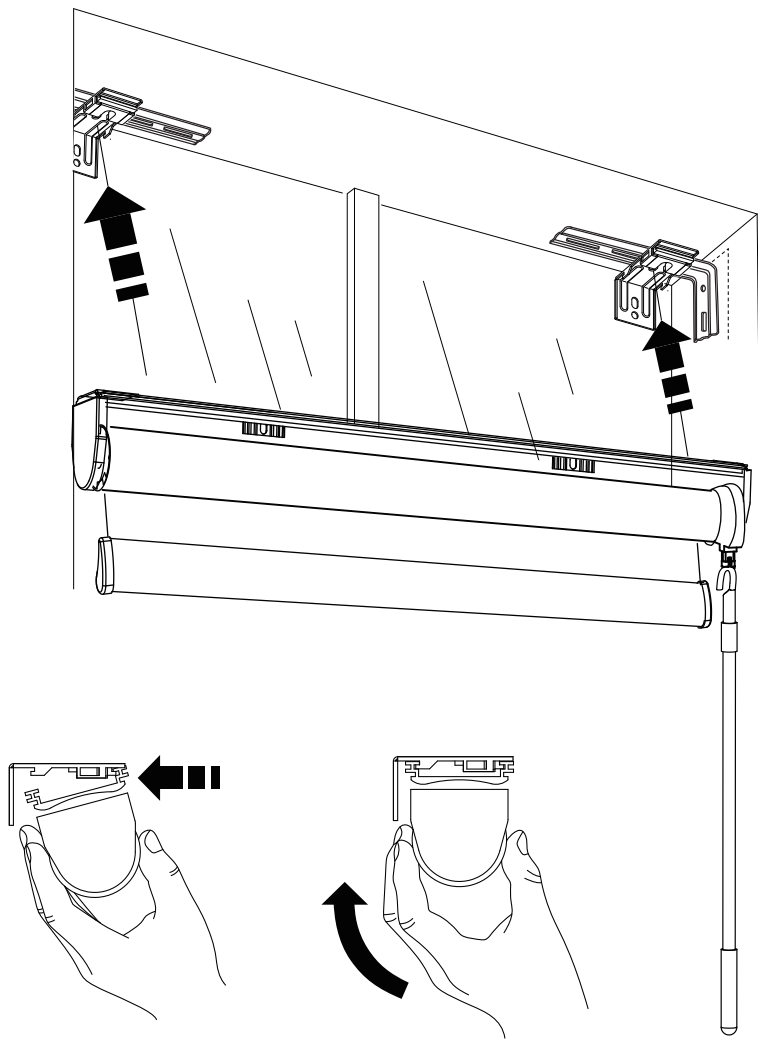


Shade Installation

2.2 Outside Mount

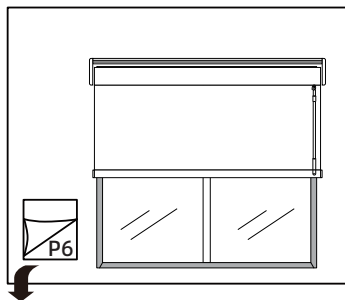

Wall Mount

If you opt for an outside mount and the space allows, top mounting is the optimal choice.

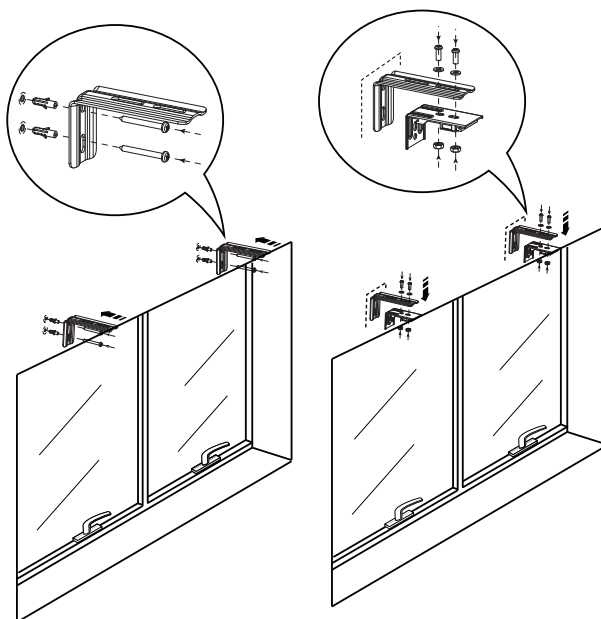


Note: If your window has handles or other special features, you may need to use extension brackets.


Shade Installation

Step 1 Mark the position

After installing the brackets at the correct position on the shade, place the shade above the window frame. Use a level to check if the shade is horizontally aligned. Finally, mark on the wall the position where the brackets will be installed.

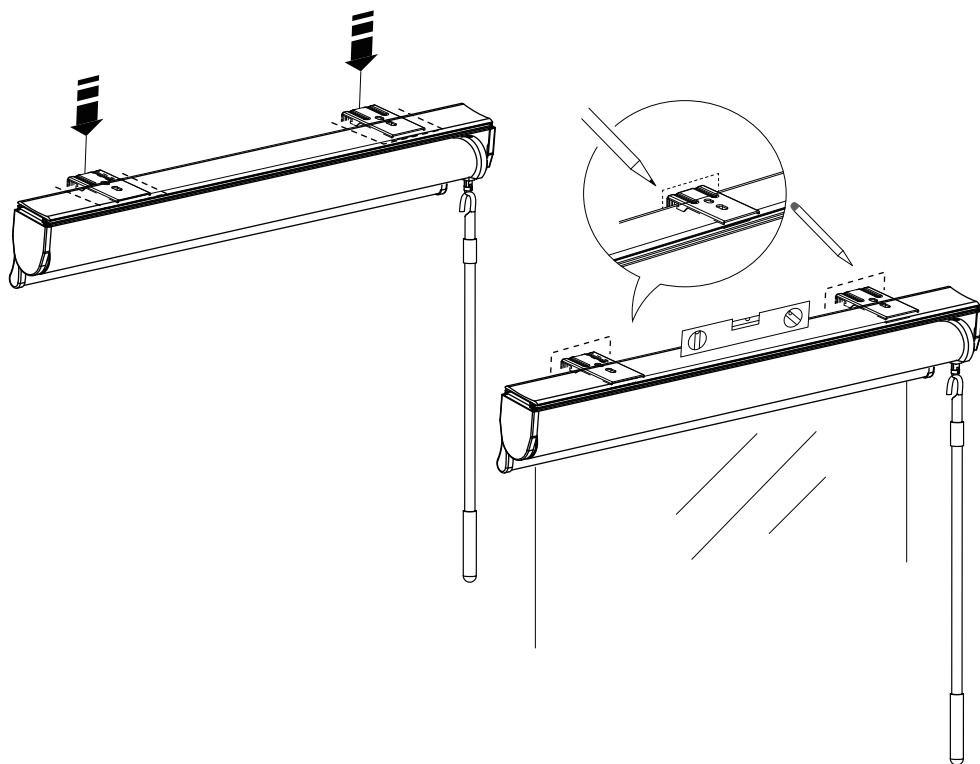


Note: The optimal position for the side caps on both sides to the center of the brackets is 10cm(4").

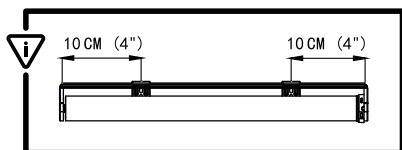


Shade Installation

Step 2 Install the brackets on the wall

Remove the brackets on the Deco bar and secure them in place using screws at the marked locations before.

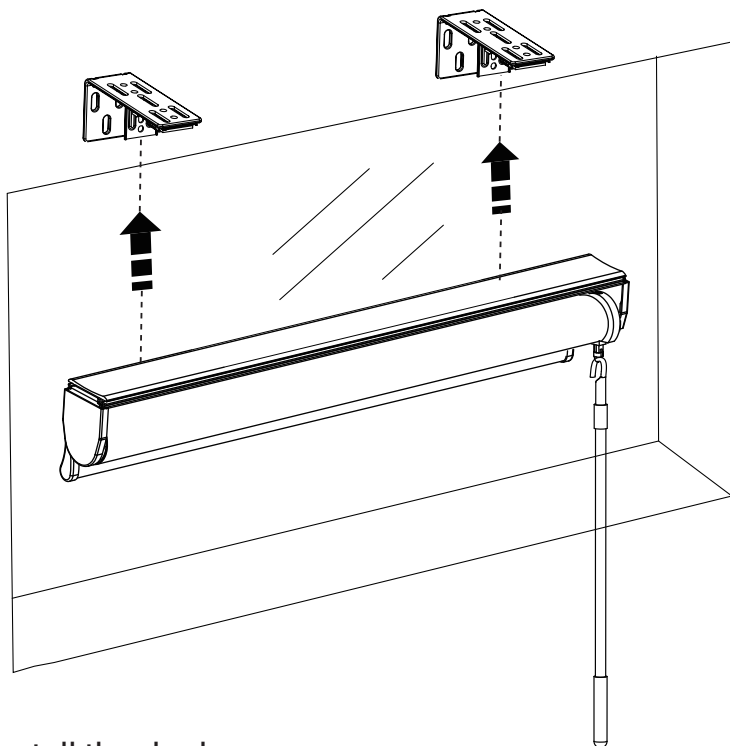

Step 3 Install the shade

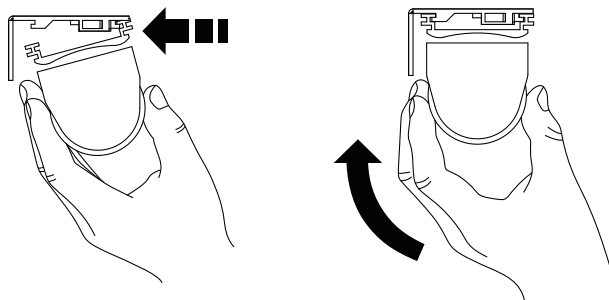


Shade Installation

Ceiling mount

If you opt for an outside mount and the space is insufficient for bracket installation, top mounting is the optimal choice.


Step 1 Mark position

After installing the brackets at the correct position on the shade, place the shade on the ceiling, mark on the ceiling the position where the brackets will be installed.

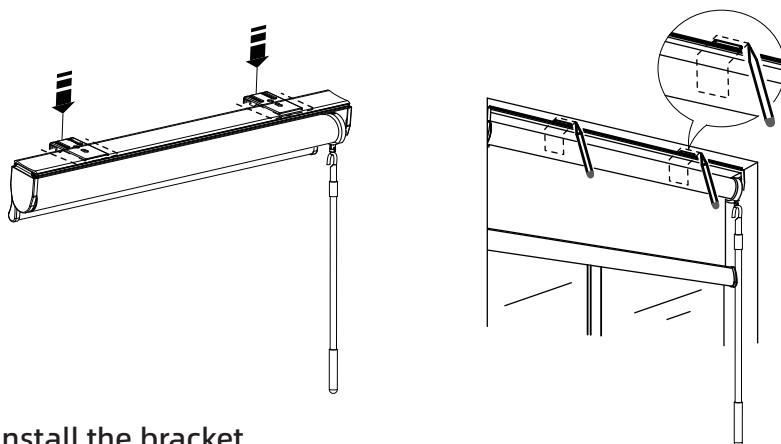




Step 2 Install the bracket

Install the brackets at the locations that marked on the wall.

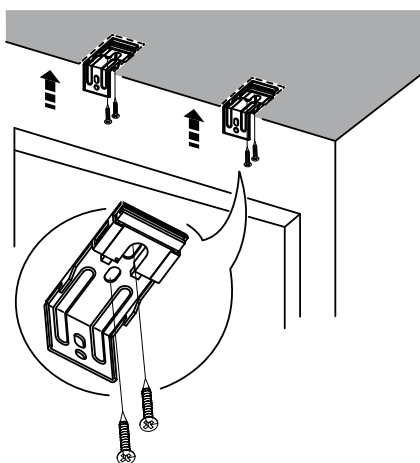

Shade Installation


Step 3 Install the Shade

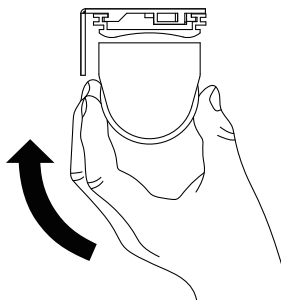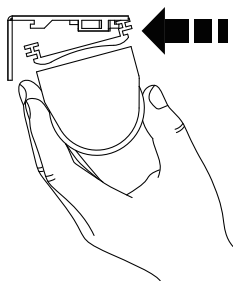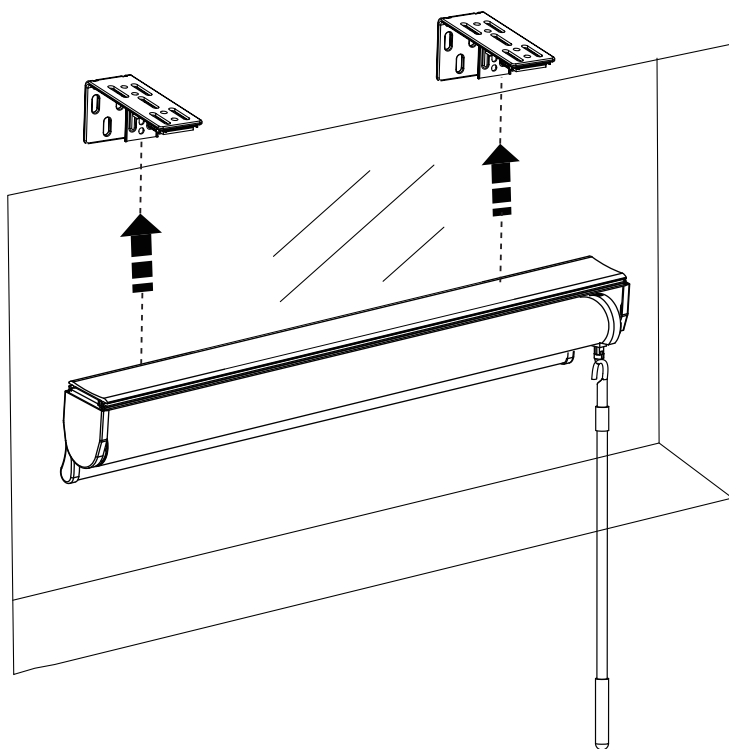

Shade Charging


Battery Powered Shades

Option 1 USB-C Charging Cable

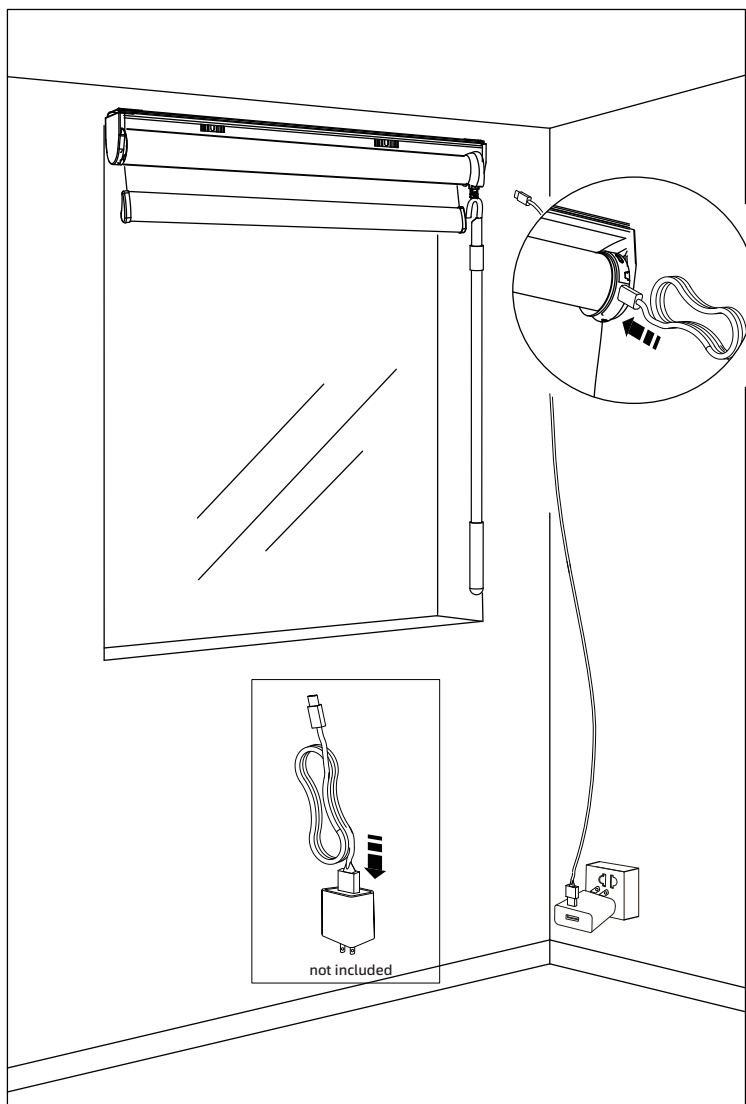

Shade Charging


Option 2 Power Bank

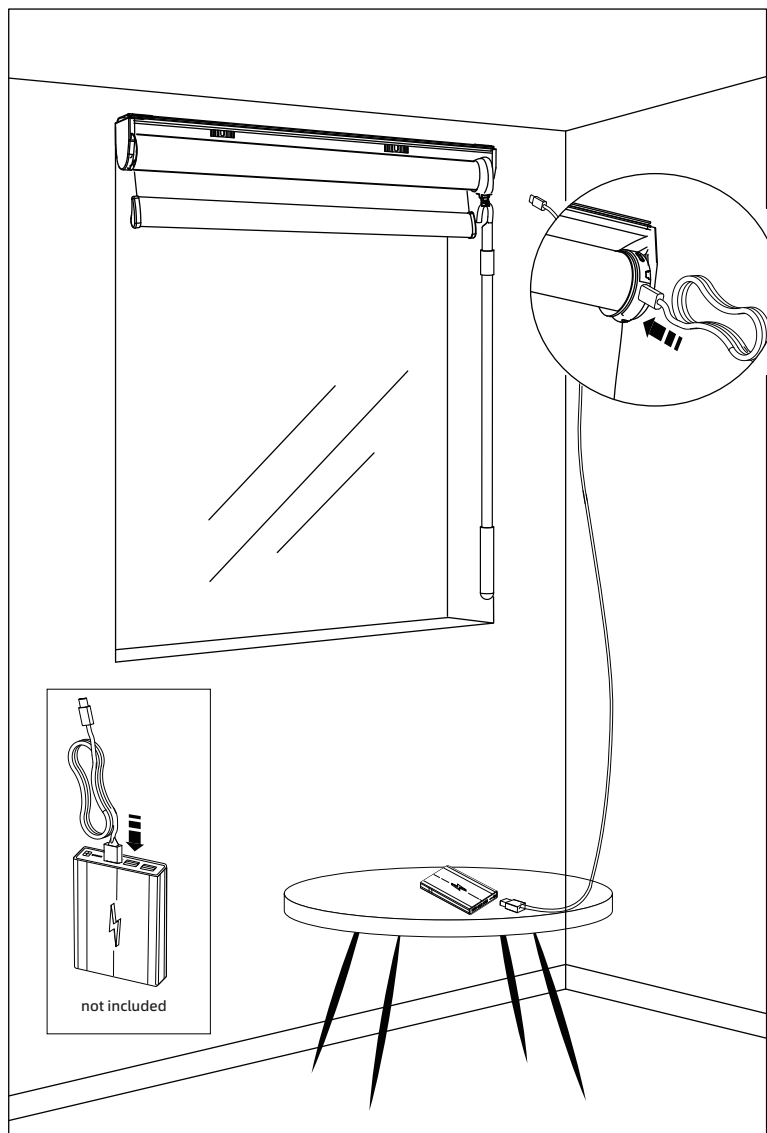

Quick Start

*Basic setup must be completed in factory mode to ensure proper operation.

Button indicators

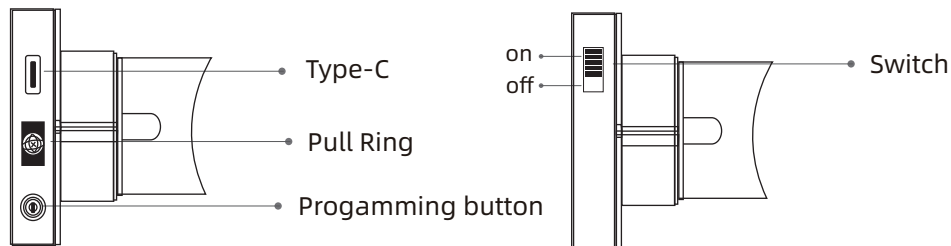

Precautions

1. Ensure the motor end with the pull ring faces downward (toward the ground).
2. When the motor beeps, promptly charge the battery.
3. If the motor runs continuously in one direction and the limits are not set successfully, please reset the motor limits.
4. Do not press the programming button while the motor is running, as this may cause the motor to run continuously and potentially damage it if the limits have not been set.

1 Power On



To power on the motor, set the switch to the ON position.

* The switch must be set to ON for the motor to operate correctly. It is recommended to set it to OFF during storage or transportation.

2 Setting the Limits



Setting the Lower Limit

1. Press and hold the "Programming button" on the motor for about 3 seconds until the motor beeps 2 times. Then release the button.
2. Pull the wand longer to make the shade move down. Release the wand as the shade approaches the lower limit to stop the motor. Use the duration of the wand pull to control the motor, adjusting the shade to move down or up, and precisely set the lower limit.
3. Press the "Programming button" on the motor head briefly. The motor will beep 2 times to indicate that the lower limit is set.

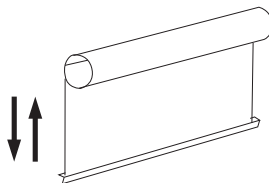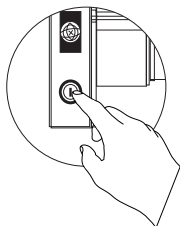

Setting the Upper Limit

1. Pull the wand longer to adjust the shade to move upward. Release the wand as the shade approaches the upper limit to stop the motor. Use the duration of the wand pull to control the motor, adjusting the shade to move up or down, and precisely set the upper limit.
2. Press the "Programming button" on the motor head briefly. The motor will beep 4 times to indicate that the upper limit is set.

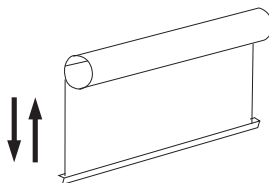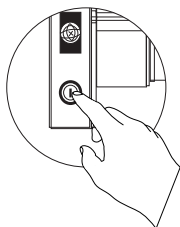


***Note:** With the pull wand motor, the first pull of the wand moves the shade down, and the second pull moves it up, creating a repeating cycle. Repeat this cycle to set the limits. When setting the upper limit, control the force and duration of pulling the wand to prevent damage to the shade during upward movement.

3 Tilt Mode/Running Mode Switch

1. To enter Running Mode: Press the "Programming button" on the motor 6 times in quick succession. The motor will beep 2 times, indicating that it has entered Running Mode. In this mode, pulling the wand once will move the motor in the specified direction until it reaches the limit, then it will automatically stop.

2. To enter Tilt Mode: Press the "Programming button" on the motor 6 times in quick succession again. The motor will beep 4 times, indicating that it has exited Running Mode. In this mode, pulling the wand once will make the motor move briefly, and releasing the wand will stop the motor. If you keep pulling, the motor will continue to move until it reaches the limit.

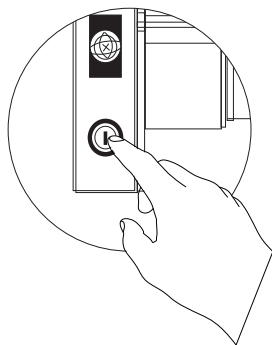



(888) 322-6478

support@canisteoblinds.com

www.canisteoblinds.com