

## Questions or Concerns

 [support@meowanthome.com](mailto:support@meowanthome.com)

### MANUFACTURER

Shenzhen Guiyang Network Technology Co., Ltd

### ADDRESS

1404K3, East Block, Shengtang Commercial Building,  
Futian District, Shenzhen, China




Made In China

MEOWANT

# SELF-CLEANING CAT LITTER BOX

## User Manual

Model: MW-LB01

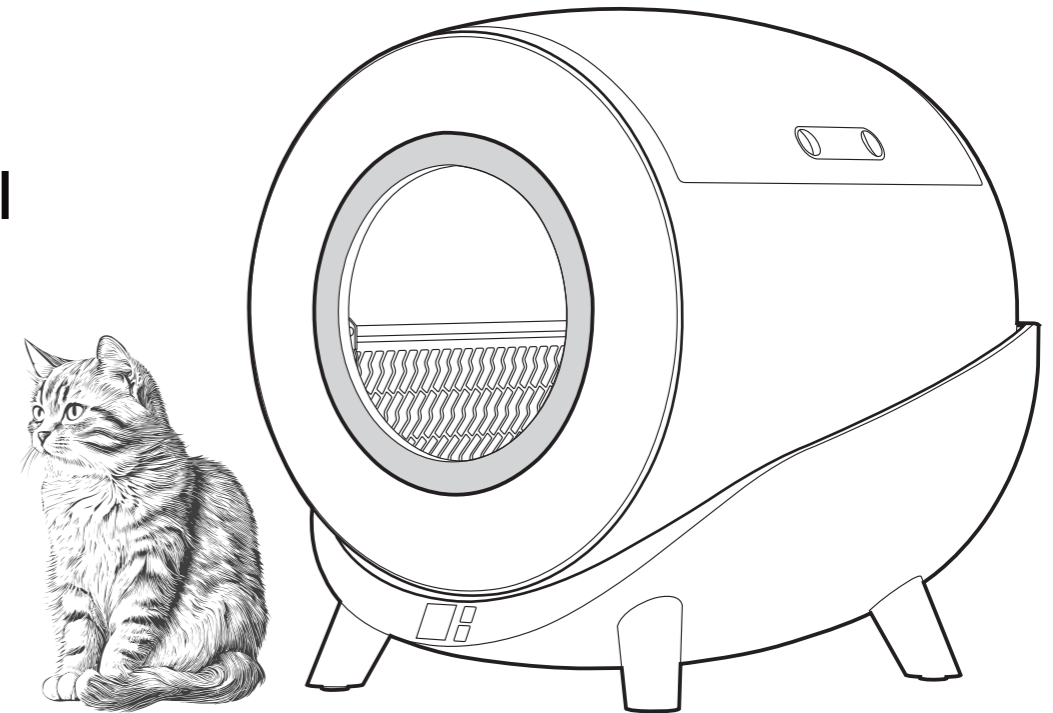

# CONTENT

01

IMPORTANT  
SAFETY  
INSTRUCTIONS

01-03

02

EXPLORING  
CAT LITTER  
BOX

04-05

03

USING  
CAT LITTER  
BOX

06-10

04

CARE  
AND  
CLEANING

11-13

05

TROUBLE-  
SHOOTING  
GUIDE

14-15

06

WARRANTY  
AND  
SERVICE

16


# IMPORTANT SAFETY INSTRUCTIONS



**READ ALL INSTRUCTIONS BEFORE USE  
AND SAVE FOR FUTURE REFERENCE**



Cat or kitten must weigh at least 3lbs and age 4 months or more to safely use the litter box.

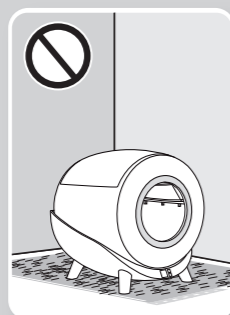

DO NOT place on carpet. Place on a firm, level surface with a little space around.



DO NOT drag when moving the litter box. Move by lifting the base with both hands.



DO NOT rinse or immerse the base in water or other liquid.

## INTENDED USE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.
- Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with, in or around the appliance. Keep the appliance and all accessories out of reach of children.
- Use the appliance only for intended household purposes as described in this User Manual.

## ELECTRICITY SAFETY

- DO NOT operate the appliance if it has a damaged power cord or plug, or if it is malfunctioning or has been damaged in any manner.
- DO NOT use an external power supply other than the one provided with the appliance. Use only the provided power adapter.
- DO NOT immerse the power adapter or the base in water or other liquid or allow moisture to come into contact with these parts.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always unplug when not in use, before putting on or taking off parts and before cleaning, maintenance or servicing.

## RELATED TO USE

- Always place the litter box on a firm, level surface. Avoid soft, uneven, or unstable flooring, which may affect the ability of the unit to detect your cat. If using litter mats or rugs, place in front of the unit. Do not place mats partially or completely under the unit.
- Keep indoors in a cool, dry location. Reduce exposure to high temperature and humidity.
- DO NOT sit on or place anything on top of the litter box.
- DO NOT put anything in the unit other than clumping litter or litter beads and crystals that are small enough to pass through the screen.
- DO NOT allow pets to chew on or swallow any parts. Cover or hide the power cord with care to prevent pets from biting.
- DO NOT open the top cover while the litter box is rotating.
- DO NOT attempt to disassemble, repair, modify or replace any part of the appliance. No user serviceable parts inside. All servicing should be performed by qualified personnel only.
- Dispose of all packaging materials properly. Keep away from children and pets.

When using an electrical appliance, especially when children are present, basic safety precautions should always be followed, including the following:


- Always wash hands thoroughly after removing the waste. Pregnant women and those with suppressed immune systems should note that a parasite sometimes found in cat feces could cause toxoplasmosis. Exercise caution and consult with a physician before handling the litter box.
- How often you will need to replace the waste bags depends on the number and size of your cats. We recommend to replace every 3 to 5 days to avoid bacteria growth.

## FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

### Specifications

Input	DC 5V --- 2A
Rated Power	10W
For Cat	Weight > 3lbs / Age > 4 months
Waste Bin Capacity	3.7gal / 14L
Toileting Space	21.1gal / 80L
Max Weight Capacity	5.5lbs / 2.5kg
Applicable Litter	All clumping cat litter (bentonite mineral, mixed and tofu cat litter (length < 0.5in))

## EXPLORING CAT LITTER BOX

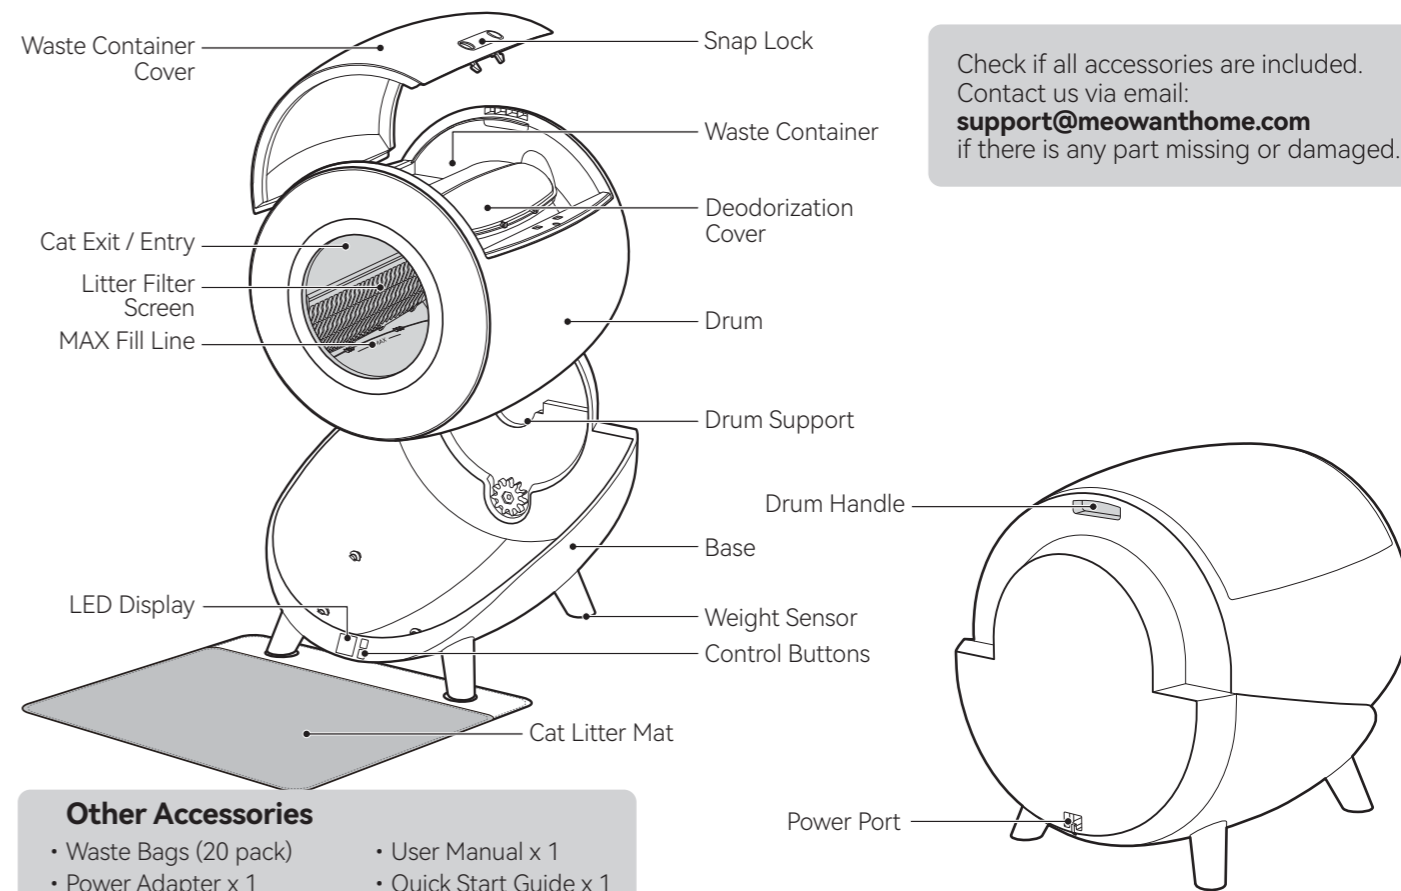


Check if all accessories are included.  
Contact us via email:  
**support@meowanthome.com**  
if there is any part missing or damaged.

### Other Accessories

- Waste Bags (20 pack)
- Power Adapter x 1
- Rubber Band x 3 (1 pre-installed)
- User Manual x 1
- Quick Start Guide x 1



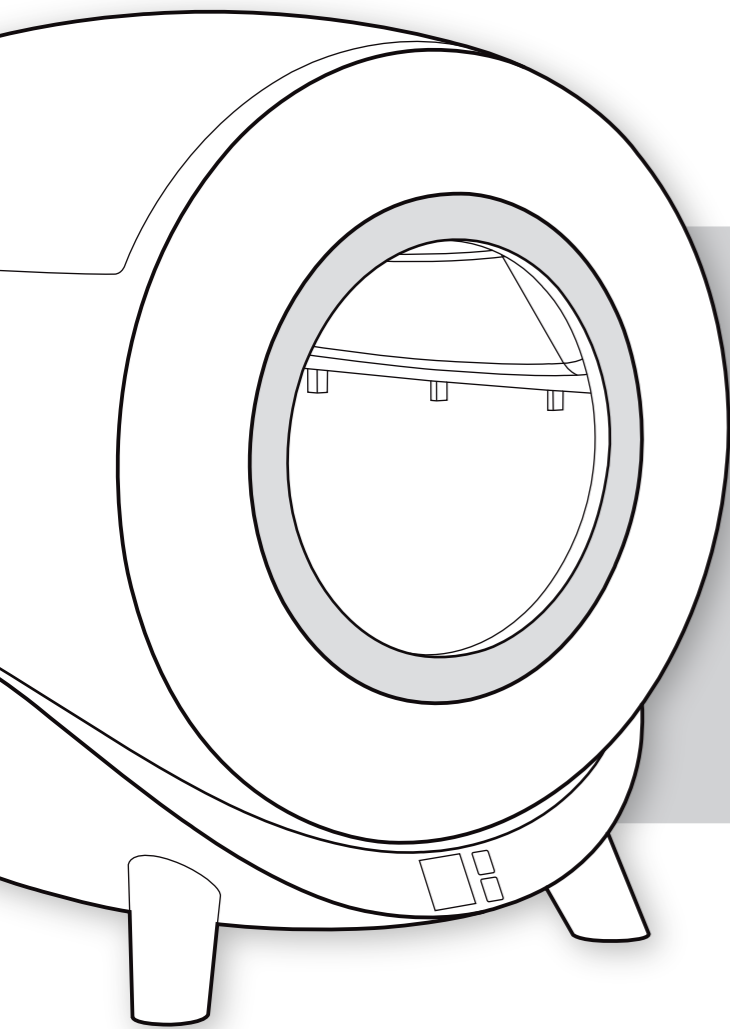

## Control & Display


<b>Manual Clean</b>	Press <b>MODE</b> button until "Manual clean" displayed, then press <b>OK</b> button to start cleaning the waste litter.
<b>Spread Flat</b>	Press <b>MODE</b> button until "Smooth litter" displayed, then press <b>OK</b> button to start spreading the litter flat.
<b>Empty Litter</b>	Press <b>MODE</b> button until "Empty litter" displayed, then press <b>OK</b> button to start emptying all litter.
<b>Reset</b>	Press <b>MODE</b> button until "Reset" displayed, then press <b>OK</b> button to restore to factory settings.
<b>Wi-Fi Setup</b>	Press <b>MODE</b> button until "WIFI" displayed, then press <b>OK</b> button twice to bring the litter box into pairing mode.

# USING CAT LITTER BOX

## Getting Started




- Remove all protective tapes and foam pads before use.
- Make sure that the drum is properly installed onto the base before plugging into an outlet.
- Make sure that the waste bag is properly installed and the waste container cover is locked before use.

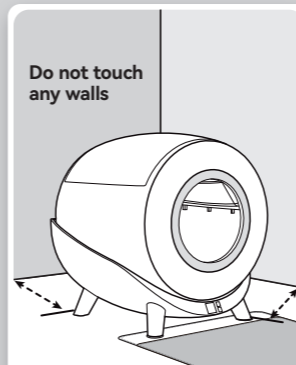


Locate the litter box indoors on a firm, level surface with little space around. Place the mat in front of the litter box.

1

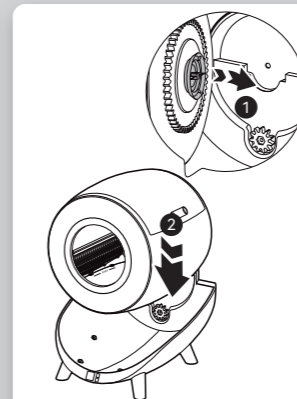


Check to make sure that the rotating shaft is properly inserted into the slot of the drum support.

2

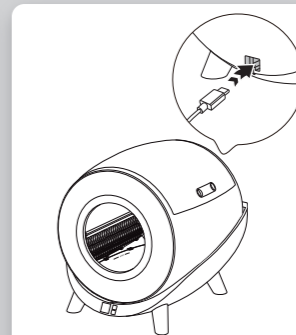


Plug in. The drum auto rotates a full circle with "Resetting" on display. Wait for it to return to Home position ("Used 0 times" on display).

3

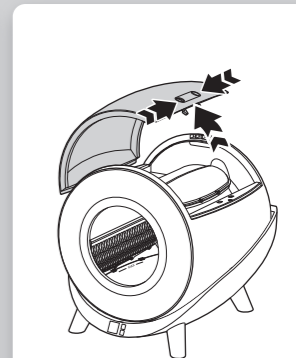


Pinch the snap lock inward to open the waste container cover.

4

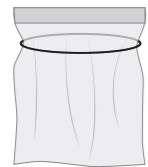


Take a rubber band and slip it over the rim of waste bag. Simply arrange the waste bag.

5

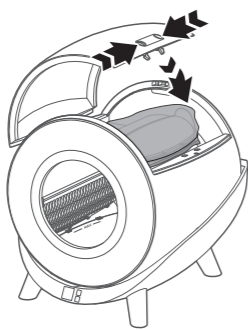


Attach the waste bag to cover the opening and fix onto the frame with the rubber band. Pinch the snap lock inward to lock the cover.

6

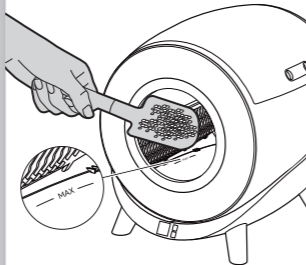

Add clumping litter below the **MAX** fill line when spread flat. Do not overfill.

7

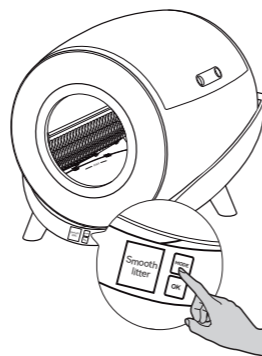

Wait 2min after adding litter. Press **MODE** button until "Smooth litter" displayed, then press **OK** button to spread the litter flat.

8



## Introducing New Litter Box to Your Cat

To help your cat transition to the new litter box:

- Location is Key. Place the litter box in the same location as the old one, or leave the old one nearby for a short period of time (at least during transition).
- Keep the Old Box. Do not throw out the old box. Put the new one in its designated spot and stop cleaning out the old one.
- Use Recognizable Scents. Add a scoop of litter from the old litter box to provide a familiar scent for your cat.

## Wi-Fi Setup




2.4GHz

- Make sure that your smart device is connected to a secure 2.4GHz network and Bluetooth is enabled. Allow access to your Location during connection.
- Make sure that the drum is at the Home position before connecting.
- You can use the litter box with control buttons only or download APP for more customizable options.
- The litter box can only be linked to one account. You can press **MODE** button until Reset displayed to reset and follow the below steps to pair it with another device.




Download and install **NOTTY Smart Pet** app, then sign up for an account.

1

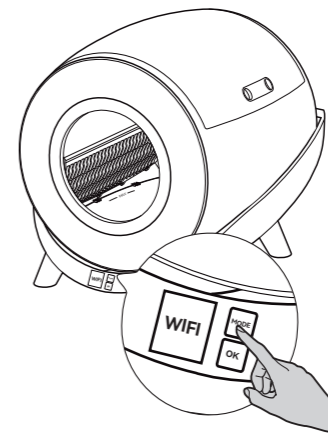


Press **MODE** button until "WIFI" displayed, then press **OK** button **twice** to bring it into pairing mode.

2

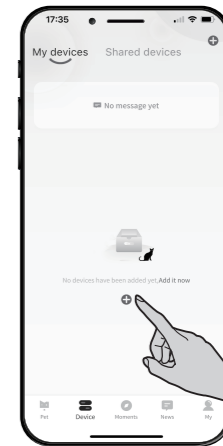


Open app, tap **+**.

3

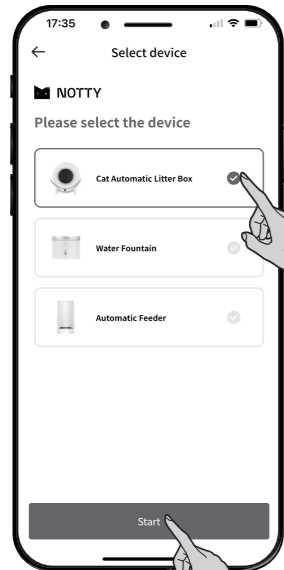


Select the device to be added. Tap **Start** and follow the on-screen instructions.

4

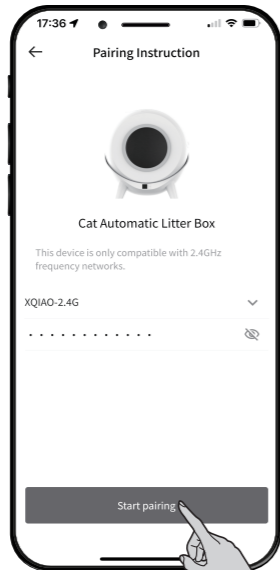

Select a **2.4GHz** Wi-Fi and enter password.


5

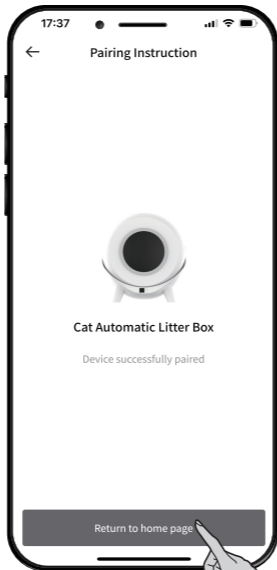

Wait until successfully connected and go to Homepage.

6

## Using with APP

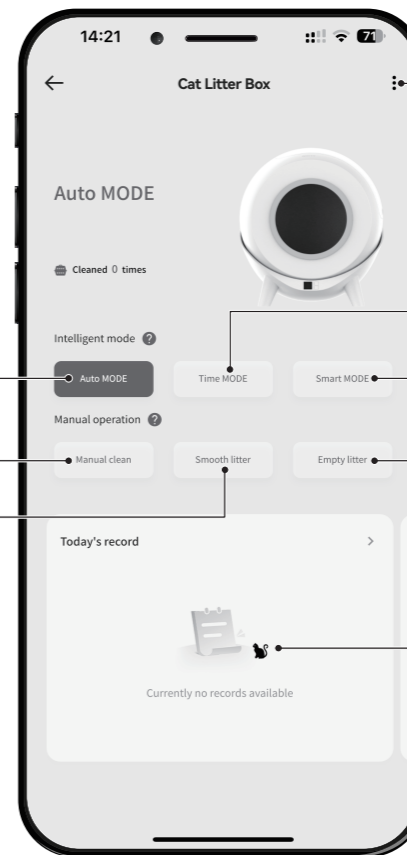

Device Settings

Scheduled Clean  
(Clean at scheduled time)

Soft Cat Poop Mode  
(Bury then clean 15min after cat leaves)

Empty All Litter

Slide to check daily records  
or cat information

Auto Clean  
(Auto clean once cat leaves)

Manual Clean


Spread Litter Flat

# CARE AND CLEANING

## Replacing Waste Bag




- How often you will need to replace the waste bag depends on the number and size of your cats. We recommend to replace every 3 to 5 days to avoid bacteria growth.
- This bag is not a toy. Keep it out of the reach of babies and small children. Do not use the bag in cribs, children's beds, prams, pushchairs or anywhere in the vicinity of children.

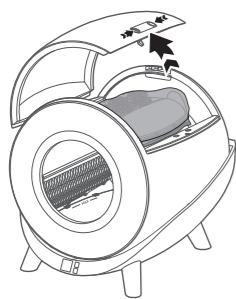

Pinch the snap lock inward to open the waste container cover.

1

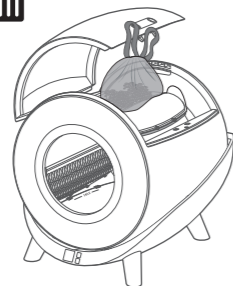


Carefully remove the rubber band and take the waste bag out. Gather the edges and dispose.

2



Slip the rubber band over the rim of the new waste bag. Simply arrange the waste bag.

3

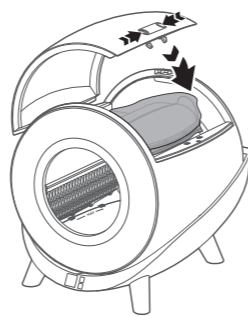


Attach the waste bag to cover the opening and fix onto the frame with the rubber band. Pinch the snap lock inward to lock the cover.

4

## Emptying and Cleaning




- Always make sure the waste bag is empty before emptying all litter.
- How often you will need to clean depends on your personal preference and your cat's behavior. We recommend cleaning the inside every one to three months.
- Always dry all parts thoroughly before reassembling for next use.

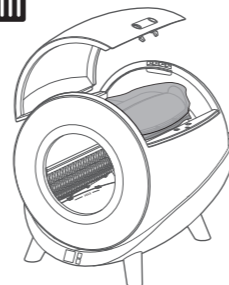


Open the waste container and dispose of the litter. Replace with a new waste bag. Make sure that the deodorization cover is not stuck.

1

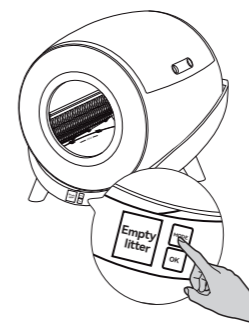


Press **MODE** button until "Empty litter" displayed, then press **OK** button to start emptying all litter.

2

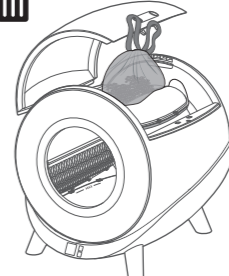


Wait until the empty cycle is done. Carefully take the waste bag out and dispose.

3

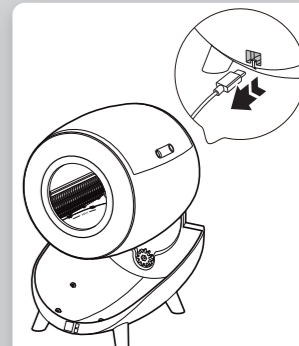


Unplug the litter box. Hold to take out the drum.

4

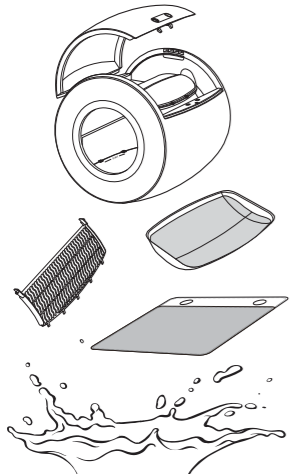


Disassemble the filter screen and inside mat from the drum if desired. Rinse clean each part. Air dry thoroughly before reassembling.

5

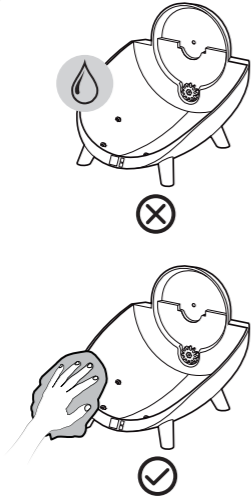


Wipe clean the base with a soft, slightly damp cloth. Do not rinse or immerse in water.

6

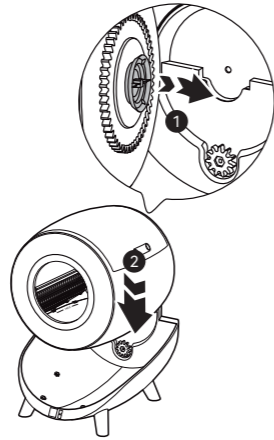

Place the drum back on the base, making sure that the rotating shaft is properly inserted into the slot of the drum support.

7

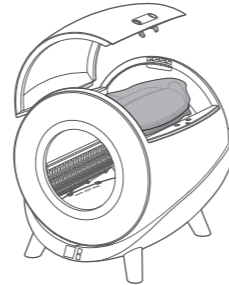

Install the waste bag and set up as instructed in section "Getting Started".

8

## TROUBLESHOOTING GUIDE



The troubleshooting guide addresses the most common problems. If problems persist, feel free to contact the Customer Support via email: [support@meowanhome.com](mailto:support@meowanhome.com)

### Problem

### Solution

Fail to connect the litter box.

- Make sure that your mobile is connected to a secure 2.4GHz Wi-Fi network and Bluetooth is enabled Allow access to your Location during connection..
- Make sure that your mobile and litter box are connected to the same Wi-Fi network.
- Make sure that you have entered a correct Wi-Fi password and the litter box is under strong Wi-Fi signal.
- Check if the litter box is linked to another device. Press MODE button until Reset displayed to reset or have the device unbound on app.
- Check if a 5GHz frequency is used. Try a Personal Hotspot, or change 5GHz to 2.4GHz to connect your mobile. Consult the router supplier for detailed instruction on router configuration.

Drum does not rotate or stops rotating suddenly.

- Disconnect from the power supply and remove the drum to check if there is any foreign object stuck at the gear of the base.
- Make sure the drum is installed properly on the base. Reconnect it to the power supply and try again.
- The drum stops rotating automatically when cat / weight is detected. It will resume rotating after the cat exists, or the weight is removed.

The waste cannot be cleaned.

Check if the deodorization cover is blocked by the waste bag, cat litter or waste. Open the waste container cover and remove any foreign objects.

Can my family members and I connect to the litter box at the same time?

Yes, you can. But to protect your privacy, the litter box can only be linked to one account. You can share with your family members on app.

I cannot weigh my cat.

- Disconnect from the power supply and check if the litter box is placed on a firm and level surface with the four weight sensors at the same level.
- Empty all litter. Press MODE button until "Reset" displayed, then press OK button to reset weight sensors and try again.

Can I use the litter box without APP?

Yes, you can use the litter box with control button only or download APP for more customizable options.

How to get the new waste bags?

For the new waste bags, search for MeoWant waste bags on Amazon or contact our Customer Support via **email: support@meowanthome.com.**

## WARRANTY AND SERVICE



Thank you for choosing MeoWant Self-Cleaning Cat Litter Box. This product is covered with MeoWant product and labor warranty for 12 months from the date of its original purchase.

### The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized.

We can only provide after sales service for products that are sold by MeoWant or MeoWant authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

**\* Please have your order ID ready before contacting Customer Support via email: support@meowanthome.com**

## FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

