



Questions or Concerns

 support@meowanhome.com

MANUFACTURER

Shenzhen Guiyang Network Technology Co., Ltd

ADDRESS


1404K3, East Block, Shengtang Commercial Building,
Futian District, Shenzhen, China



Made In China

Rev_2.1_EN

Meowant Smart Cat Litter Box

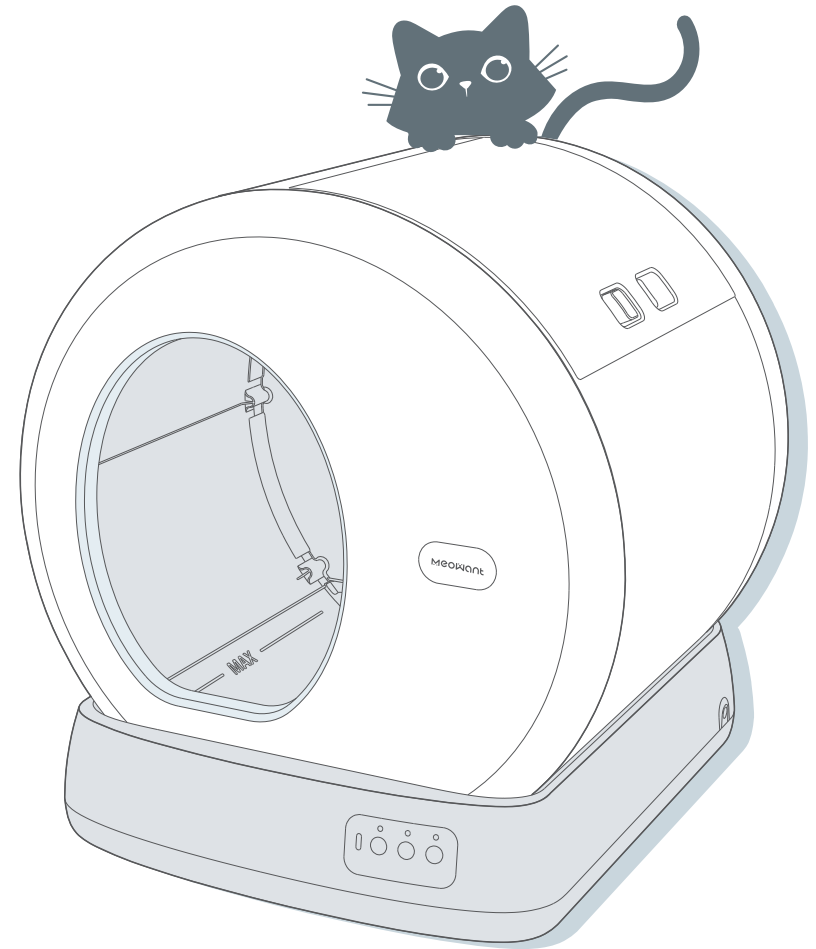

Model: MW-SC01
User Manual

CONTENTS

01 IMPORTANT SAFETY INSTRUCTIONS

03 EXPLORING YOUR LITTER BOX

04 Setting Up

05 Status Indicators

06 Control Panel

07 USING YOUR LITTER BOX

07 Getting Started

09 Replacing Litter Box Liner

10 Replacing Litter

11 Using With APP

12 CARE AND CLEANING

14 TROUBLESHOOTING

15 WARRANTY AND SERVICE

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE




Cat or kitten must weigh at least 3lbs and age 4 months or more to safely use the litter box.



DO NOT place on carpet. Place on a firm, level surface with a little space around.



DO NOT drag when moving the litter box. Move by lifting the base with both hands.

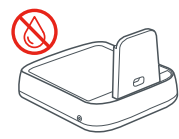

DO NOT rinse or immerse the base in water or other liquid.

INTENDED USE

- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with, in or around the appliance.
- Use the appliance only for intended household purposes as described in this User Manual.

ELECTRICITY SAFETY

- DO NOT operate the appliance if it has a damaged power cord or plug, or if it is malfunctioning or has been damaged in any manner.
- DO NOT use an external power supply other than the one provided with the appliance.
- DO NOT wet or submerge the bonnet or base, or allow moisture to come into contact with these parts.
- Always unplug when not in use, before putting on or taking off parts and before cleaning. Never unplug by pulling on power cord.

RELATED TO USE



- Always place the litter box on a firm, level surface. Avoid soft, uneven, or unstable flooring, which may affect the ability of the unit to detect your cat. If using litter mats or rugs, place in front of the unit. Do not place mats partially or completely under the unit.
- Keep indoors in a cool, dry location. Reduce exposure to high temperature and humidity.
- DO NOT sit on or place anything on top of the litter box.
- DO NOT put anything in the unit other than clumping litter or litter beads and crystals that are small enough to pass through the screen.
- DO NOT force your cat into the litter box.
- DO NOT open the top cover while the litter box is rotating.
- DO NOT attempt to disassemble, repair, modify or replace any part of your product. All servicing should be performed by qualified personnel only. No user serviceable parts inside.
- Dispose of all packaging materials properly. Keep away from children and pets.
- Always wash hands thoroughly after removing the waste. Pregnant women and those with suppressed immune systems should note that a parasite sometimes found in cat feces could cause toxoplasmosis. Exercise caution and consult with a physician before handling the litter box.
- How often you will need to replace the litter box liner depends on the number and size of your cats. We recommend to replace every 3 to 5 days to avoid bacteria growth.

SAVE THESE INSTRUCTIONS


Specifications

Input	12V $\overline{\text{---}}$ 1A
Rated Power	12W
For Cat	Weight 3-22 lbs / Age > 4 months
Waste Bin Capacity	5L / 1.3 Gal
Toileting Space	57.6L / 15.2 Gal
Max Weight Capacity	44 lbs / 20 kg
Applicable Litter	All clumping cat litter (length < 15 mm)


Exploring Your Litter Box

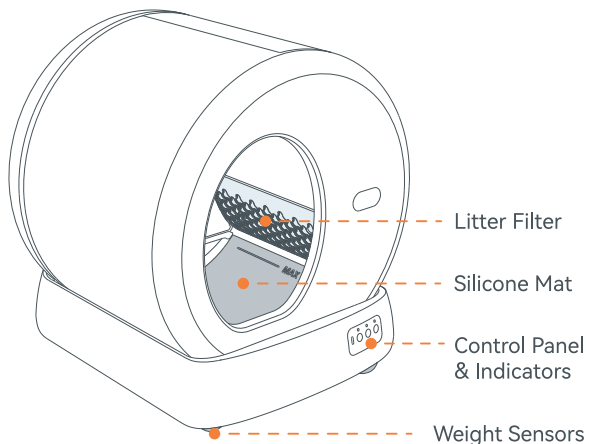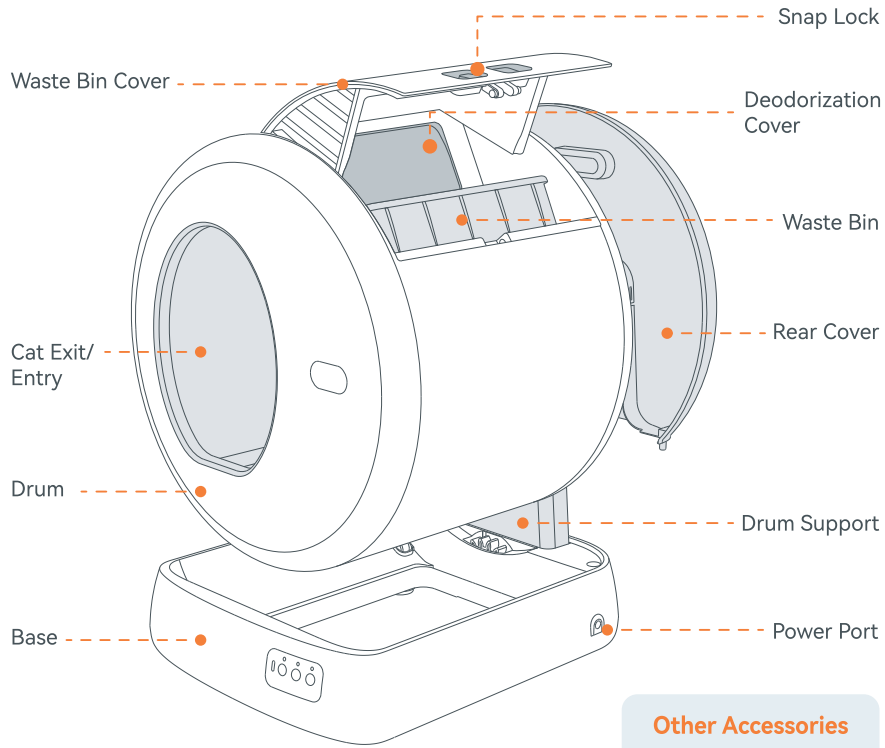

Other Accessories

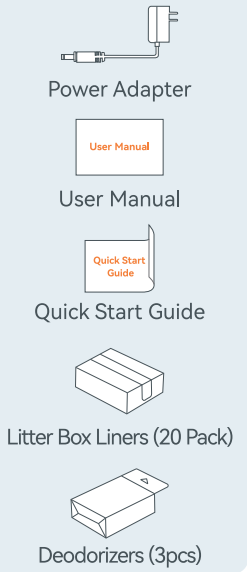


Setting Up

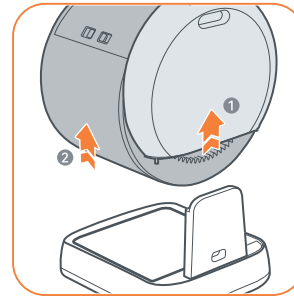


1

Remove all packing materials. Take out the rear cover first then hold to take out the drum.

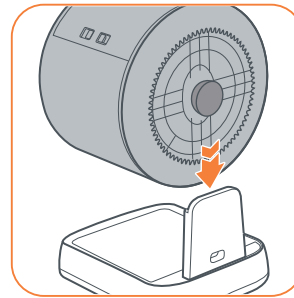

2

Place the drum on the base by inserting the rotating shaft into the slot of the base support.

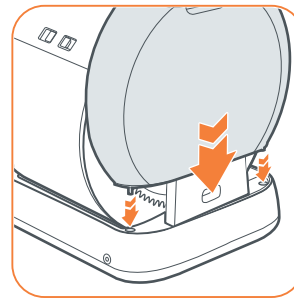



3

Insert the rear cover into the slot of the base to fix the rear cover in place.


Status Indicators

 **Solid Blue**
Ready for use

 **Flashing Blue**
Setting up WiFi



 **Solid Blue & Button Indicators ON**
Firmware upgrading


 **Solid Blue & Button Indicators Flashing**
Restoring to factory settings



 **Solid Green**
Cat / weight detected when stationary

 **Flashing Green**
Drum returning to Home position

 **Flashing Green Twice**
Child Lock on/off

 **Solid Red**

- Clean / Flatten / Replace paused
- Cat / weight detected when rotating
- Foreign object approached when rotating
- Rear cover opened


 **Solid Red & Button Indicators Flashing**

- Drum not in place
- Motor error

Control Panel



For all button indicators: When the selected process is engaged, the corresponding indicator stays solid on. If paused, it will flash.



Clean

- Press once to start a cleaning cycle. If already started, press it again to pause.

Set Up WiFi

- Hold for 3s to start connecting with WiFi (status indicator flashes blue).



Flatten

- Press once to start spreading the litter flat. If already started, press it again to pause.



Replace

- Hold for 3s to start emptying the litter. If already started, press it once to pause or resume.

Child Lock

- Press twice to lock or unlock (status indicator flashes green twice).




Restore to Factory Settings

- Hold  and  simultaneously for 5s to restore to factory settings.

Using Your Litter Box

Getting Started

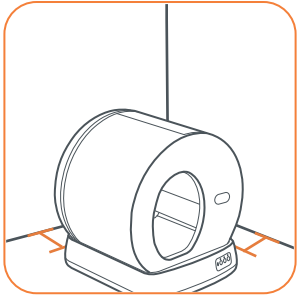


1

Place the litter box indoors on a firm, level surface and in a cool, dry location. **Do not touch any walls.** Leave a little space around.



2


Add clumping litter below the **MAX** fill line when spread flat. Be careful not to overfill.

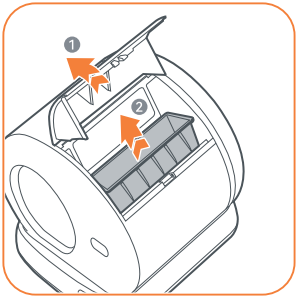

3


Pinch the snap lock inward to open the cover. Then take out the waste bin and accessories inside.

Do not continue pushing the cover when already opened to the max.

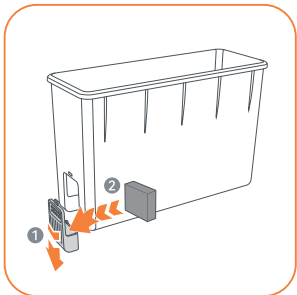


4

Slide out the deodorizer holder and place deodorizer in.

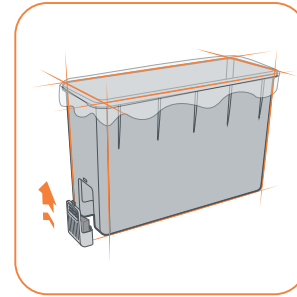


5

Slide the deodorizer holder back. Spread a litter box liner evenly inside and smooth out all edges.

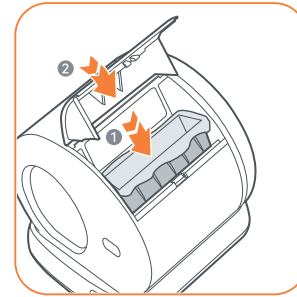

6

Place the waste bin back in place. **Pinch the snap lock inward** to lock the cover.

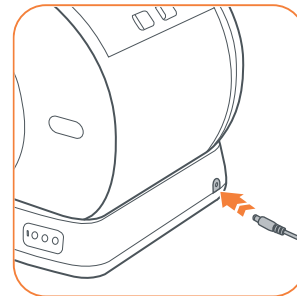

7

Plug in the litter box. The drum will rotate a full circle automatically. Wait for it to return to Home position, then the unit is ready for use.

Make sure the cable is not stuck in the rotating shaft.

Introducing New Litter Box to Your Cat


To help your cat transition to the new litter box:

- **Location is Key.** Place the litter box in the same location as the old one, or leave the old one nearby for a short period of time (at least during transition).
- **Keep the Old Box.** Do not throw out the old box. Put the new one in its designated spot and stop cleaning out the old one.
- **Use Recognizable Scents.** Add a scoop of litter from the old litter box to provide a familiar scent for your cat.


Replacing Litter Box Liner




- How often you will need to replace the litter box liner depends on the number and size of your cats. We recommend to replace every 3 to 5 days to avoid bacteria growth.
- **Warning:** This bag is not a toy. Keep it out of the reach of babies and small children. Do not use the bag in cribs, children's beds, prams, pushchairs or anywhere in the vicinity of children.

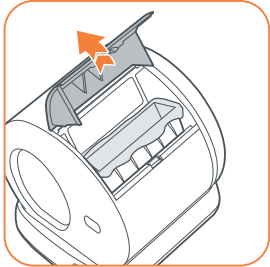


- 1 Pinch the snap lock inward to open the cover.

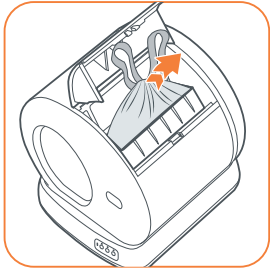

- 2 Gather the edges of the liner and dispose. Take out the waste bin.

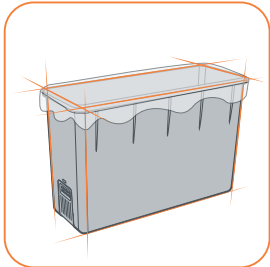

- 3 Spread the new bag evenly inside and smooth out all edges. Replace the deodorizer if necessary.

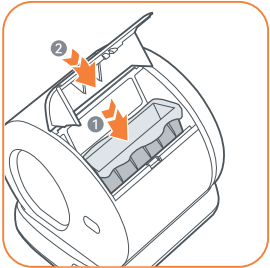


- 4 Place the waste liner back in place. Pinch the snap lock inward to lock the cover.

Replacing Litter




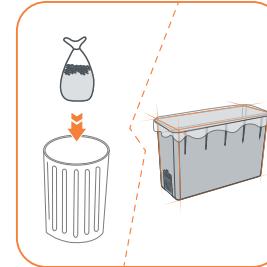
- **Always make sure the waste bin is empty before replacing the litter.**
- If litter replace is activated by mistake, unplug and reconnect the power supply to reset.

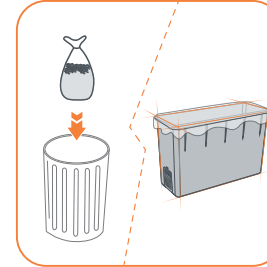

- 1 **Empty and clean up the waste bin.** Then replace with a new litter box liner. Make sure the deodorization cover is not stuck.



- 2 Hold  for 3s to start emptying the litter. Press it once to pause if desired.



- 3 Wait until the empty cycle is done (drum stops rotating). **After the litter is emptied, clean up the waste bin.** Then replace with a new liner.



- 4 Add new clumping litter below the **MAX** fill line when spread flat. Do not overfill.

Using With APP



2.4GHz

- Make sure your smart device is connected to a secure 2.4GHz network and Bluetooth is enabled.
- Make sure the drum is in the Home position before connecting.
- You can use your litter box with control buttons only or download APP for more customizable options.

1




Scan QR code or search from Google Play or App Store to download **AIRPET APP**. Register as instructed.

2




Hold for 3s to bring the litter box into pairing mode (blue indicator flashing). Tap **Next** to continue.

3

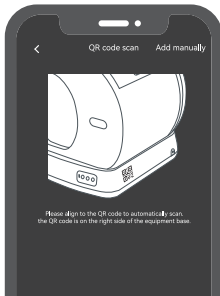


Scan QR code on the right side of the base to add your litter box manually.

4

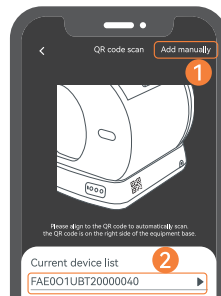


Or tap **Add manually**, then select device SN to add your litter box manually.

5

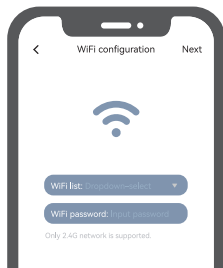

Select a 2.4GHz Wi-Fi network and enter password. Tap **Next** to complete connection.

6

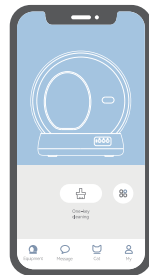


Once successfully connected, the indicator will stay solid blue. If failed, follow the steps and retry.

Care and Cleaning




- How often you will need to clean depends on your personal preference and your cat's behavior. We recommend cleaning the inside every one to three months.
- Always dry all parts thoroughly before reassembling for next use.

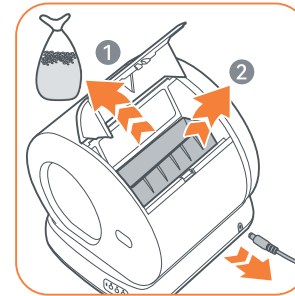


1

Empty and clean up the waste bin as instructed in "Replacing Litter". Then unplug the litter box.

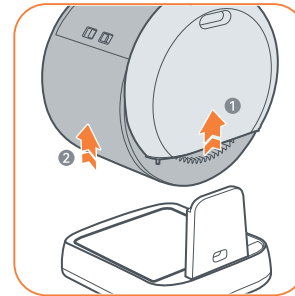


2

Take out the rear cover first then hold to take out the drum.

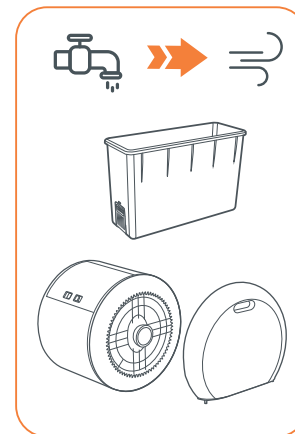


3

Rinse clean the drum, rear cover and waste bin. Air dry thoroughly before reassembling.

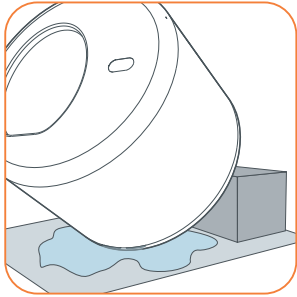


4

Tilt the drum to drain any residual water under the silicone pad.

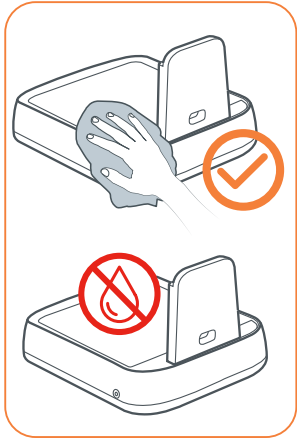

5

Wipe the base with a soft and damp cloth. Do not rinse or immerse in water.

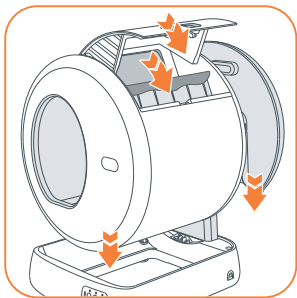



6

Install all parts back in place as instructed in “Setting Up” and “Replacing Litter Box Liner”.

Troubleshooting

The troubleshooting guide addresses the most common problems. If problems persist, feel free to contact the Customer Support at support@meowanthome.com.

Q: I cannot connect the litter box with my smart device.

- A:
- Make sure your device is connected to a secure 2.4GHz Wi-Fi network.
 - Make sure you have entered a correct Wi-Fi password and the litter box is within the signal coverage of the router.
 - Check if the litter box is connected to another device. Reset by holding  and  simultaneously for 5s and try again following the steps in “Using With APP”.
 - Check if a 5GHz frequency is used. Try a Personal Hotspot, or change 5GHz to 2.4GHz to connect your mobile. Consult the router supplier for detailed instruction on router configuration.

Q: The drum does not rotate or stops rotating suddenly.

- A:
- Disconnect from the power supply and remove the drum to check if there is any foreign object stuck at the gear of the base.
 - Make sure the drum is installed properly on the base. Reconnect it to the power supply and try again.
 - The drum stops rotating automatically when cat / weight is detected or when object is approached. It will resume rotating after the cat exists, or the weight or object is removed.

Q: The waste cannot be cleaned.

- A:
- Check if the deodorization cover is blocked by the litter box liner, cat litter or waste. Open the waste bin cover and remove any foreign objects.

Q: I cannot weigh my cat.

- A:
- Disconnect from the power supply and check if the litter box is placed on a firm and level surface with the four food pads at the same level.
 - Reconnect it to the power supply and weigh again.

Q: Can I use the litter box without APP?

- A:
- Yes, you can use your litter box with control buttons only or download APP for more customizable options.

Warranty and Service

Thank you for choosing MeoWant Smart Cat Litter Box. This product is covered with MeoWant product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized.

We can only provide after sales service for products that are sold by MeoWant or MeoWant authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

* Please have your invoice and order ID ready before contacting Customer Support.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.