Björn Kendal

WWW.BJORNHENDAL.COM

# Björn Hendal Sweden



Varberg vit



Varberg svart

**Thank you** very much for purchasing this Björn Hendal new vintage timepiece. We hope that you will enjoy this timepiece for a long time. To get the most pleasure from your new watch please read the brief instructions below.



# Setting the time

Take the crown B between your thumb and forefinger and gently pull it outwards. Turn the crown in either direction to set the hands at the desired position. Then push the crown back into its normal position.

# Chronograph and 24 hour indicator

A= Chronograph pusher to start the chronograph.

Push button A one's and the seconds on dial at the 6 position (E) start counting the minutes.

On the dial at the 9 position (F) these minutes will count the minutes up to 60 (1 hour)

To stop the chronograph push button A again.

To reset the chronograph push button C, now you see the hand on dial E counting the minutes back and you will also see this counting back on dial F.

Dial D is a 24 hour indicator

## Water resistance

Water is a watch's greatest enemy. Our watches have been designed for everyday use and are classified as 'dress watches'. These watches are splash-proof (water resistant). This means that you can wash your hands and walk in mild rain or snow while wearing your watch.

**Important:** Dress watches are not designed to be worn in the shower or under water. Water damage is not covered by the guarantee.

## Guarantee

Björn Hendal guarantees that your watch will function well for a period of two years. This guarantee does not apply if the defect or malfunction is the result of 1. improper use, 2. (water) damage, 3. theft, 4. owner negligence, or 5. normal wear and tear. Watch bands, batteries and glass do not fall under the guarantee. Please keep the receipt as proof of purchase. If you have any questions about the guarantee, please send an e-mail to contact@bjornhendal.com.