

SETTING THE DATE AND TIME

- I. Unscrew the Canteen Lock covering the Setter Button.
- 2. To set the date press down on the Setter Button half way.

 The Setter Lock will be pulled out to position I automatically.
- 3. Rotate the Bezel anti-clockwise to adjust the date.
- **4.** To set the time press the Setter Button down further. The Setter Lock will be pulled out to position | | automatically.
- **5.** Rotate the **Bezel** clockwise to adjust the hour and minute hands to set the time.
- **6.** Once completed, press the **Setter Lock** down completely.
- 7. Screw the Canteen Lock cover back on the watch.

Note: Without unscrewing the Canteen Lock, you can rotate the bezel anti-clockwise periodically to wind up the mainspring to power your timepiece.

