

## SETTING THE TIME

1. Unscrew the **Canteen Lock** covering the Setter Button.
2. Press down on the **Setter Button**. Then the setter lock will be pulled out automatically.
3. Rotate the **Bezel** clockwise to adjust the hour and minute hands to set the time.
4. Once completed, press the **Setter Lock** down completely.
5. Screw the **Canteen Lock** cover back on the watch.

*Note: Without unscrewing the Canteen Lock, you can rotate the bezel anti-clockwise periodically to wind up the mainspring to power your timepiece.*

