

## SETTING THE DATE AND TIME

1. Unscrew the **Canteen Lock** covering the **Setter Button**.
2. *To set the date* - press down on the **Setter Button** half way. The **Setter Lock** will be pulled out to position **I** automatically.
3. Rotate the **Bezel** clockwise to adjust the date.
4. *To set the time* - press the **Setter Button** down further. The **Setter Lock** will be pulled out to position **II** automatically.
5. Rotate the **Bezel** clockwise to adjust the hour and minute hands to set the time.
6. Once completed, press the **Setter Lock** down completely.
7. Screw the **Canteen Lock** cover back on the watch.



*Note: Without unscrewing the Canteen Lock, you can rotate the bezel anti-clockwise periodically to wind up the mainspring to power your timepiece.*