



LAWN ROVER

Remote-Controlled Mower User Manual

LW-T-800

V.1

Model: JY-800

Component Configuration and Functions

Battery: 24V, 12V × 2, 20 Ah × 2,
Control: Main Switch
& Power Switch

Fuel Tank: 7L

28V , 1500w / 2000w
→ Generator:
28V, 1500W / 2000W

Travel Motor 24V
(brushed): Drive Wheel,
Reducer, Track

Steering Motor (with brake)
24V

Muffler


Air Filter

Engine (with Clutch):
Electric Start

Drive Wheel

Control Panel

Sprocket

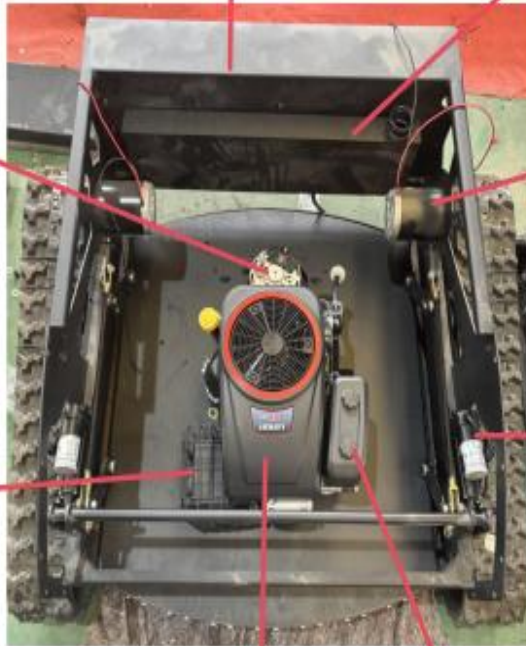

1, The Following Is a Diagram of the Walking Wheel:




Road Wheel

2, The Following Is a Blade Diagram:



Razor Blade

3, The Following Is the Controller Diagram:

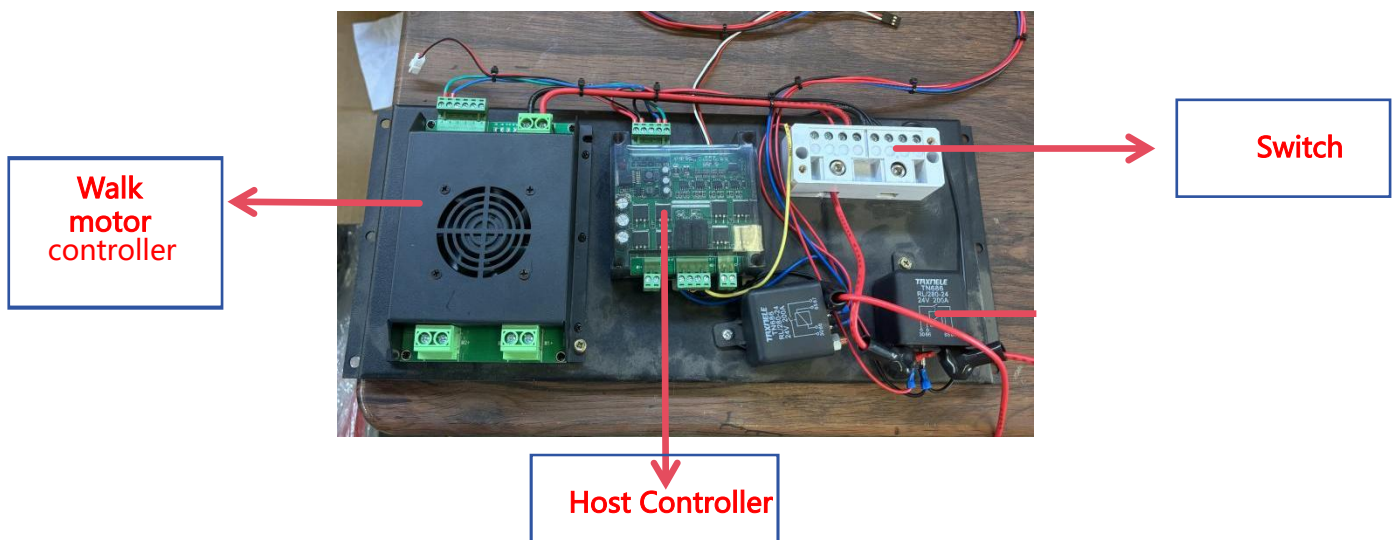

Walk
motor
controller

Host Controller

Switch

Replacement Oil Display Diagram

Fill the oil here



Twist off the yellow cover and pour the oil into this pipe

To replace the used oil, open this part and connect it to the drain pipe




Oil Exit Pipe

Change the oil dipstick marking line:


Do not exceed the scale line at this position when adding oil

tick mark

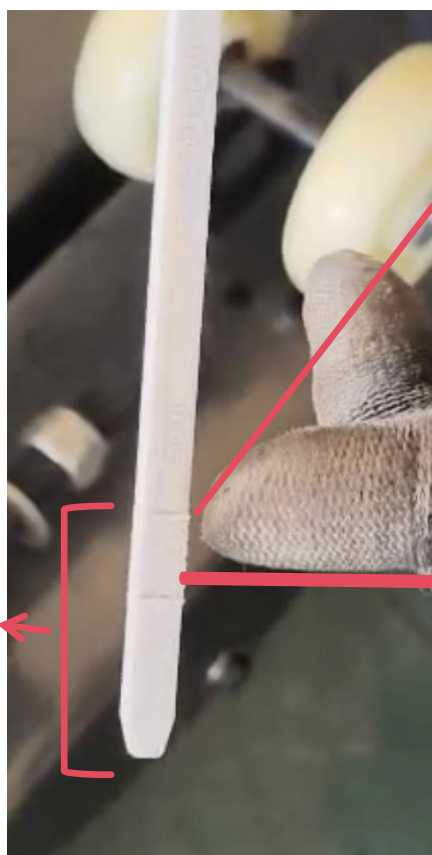

Do not add oil below the scale line at this position

Replacement of Air Filter Element Display Diagram

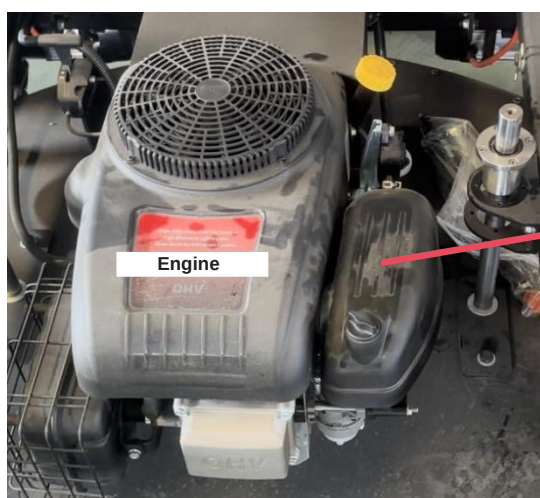

Replace the air filter element at this location. Open the housing, remove the old sponge filter element and replace it with a new air filter element. Note: Keep the sponge of the air filter element dry and do not wash the sponge filter element with water