














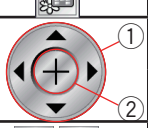















 



















# Quick Reference Chart (Embroidery Mode)








 <b>Category Selection</b>	
	Select Design
	Select Monogram
	Select Edit mode







 <b>Embroidery Pattern and Ready to Sew Screen</b>	
	Browse designs by category
	Browse designs by hoop size
	Show color section of design
	Color list
	Pattern tracing
	Open manual setting window
	Move carriage to home position
	Adjust foot height and sewing speed by foot type
	Stitch back/forward keys
	Jump to the entered sewing point
	① Jog keys
	② Display current sewing point
	View previous/next color section
	Return to previous pattern selection

 <b>Monogramming</b>			
	Font selection		Save monogram design
	Lettering orientation		Adjust spacing size
	Letter size		Move cursor left/right and select letter
	Letter case		
	Delete selected pattern		

 <b>Embroidery Edit Screen</b>	
	Display other editing tools
	Confirm settings
	Return to category selection
	① Move pattern
	② Move pattern to center of edit screen
	Select pattern
	Select hoop size
	Resize pattern
	Duplicate pattern
	Delete pattern
	Rotate pattern
	Create Vertical/Horizontal mirror image
	Arc layout
	Group all/selected patterns
	Create vertical, horizontal and diagonal mirror images
	Arrange sewing order
	Change background and pattern colors (see next page)
	Group and unite patterns by thread colors
	Sew patterns in one color
	Magnifying Edit screen
	Grab and drag Edit screen
	Save embroidery patterns

# Quick Reference Chart (Embroidery Mode)

  <b>Change Background and Pattern Color</b>	
	Design color key
	Background color key
	Rename key
	Background image key
	Default key

  <b>Monogramming Ready to Sew Screen</b>	
	Stop monogramming to change thread color
	Left alignment
	Center alignment
	Right alignment

 <b>Ready to Sew Screen (Sewing AcuFil Design)*</b>	
	Flip design pattern

\*AcuFil Designs are optional item.