

Trouble shooting:

1. Turn on the power switch, but the amplifier has no sound.

A. The indicator is not light: it means low power and you should charge the amplifier.
B. Turn the volume up on the voice amplifier.

2. The voice amplifier has distinct howling.

A. Wear the microphones correctly: put the microphone in front of the mouth;
B. In a small room, please turn down the volume properly to avoid howling.

 
SHIDU After sales service:

If you have any questions, please feel free to contact us, we will try our best to provide best service.

www.10shidu.com Email: service@10shidu.com

Bluetooth Instruction:

Please pair with your Bluetooth device as follows:

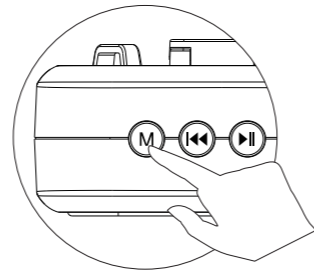


1. Switch on the amplifier and press "M" to enter into Bluetooth mode. The Bluetooth mode is ready with voice prompt "Bluetooth is waiting for connection".
2. Turn on the Bluetooth function of your mobile phone and search "M100". Click and it will be connected successfully with a voice prompt "Bluetooth is connected".
When playing music, please keep close to the amplifier to keep the signal stable.

5

Charge the amplifier:

Please turn the speaker off and charge it timely when it's low battery with voice prompt "Low battery, please charge". Please charge through Micro-USB cable with DC 5V output adaptor. The red indicator light will on when charging, and it will off after fully charged. Unplug the charger as soon as it is fully charged.

 
Notes: We suggest fully recharge the amplifier before you using it at the first time.

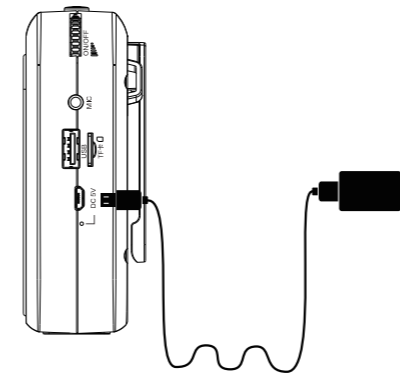

6



 Voice Amplifier User Manual

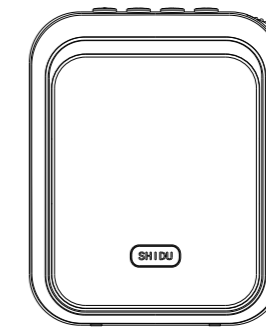

M100

Please read the instructions carefully before using it.

Note:

Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling. For ensure better amplification, aim at the headset MIC capsule when speaking, and keep the distance between the voice amplifier and the MIC more than 60cm to avoid howling.

Simply tucking the speaker around waist, and mounting headphone over head can help achieve the required distance.

Features:


1. SHIDU patented appearance;
2. Stylish, ergonomic and comfortable design;
3. 10W power output cover large area;
4. Equipped with SHIDU special acoustic microphone --- original sound amplification;
5. Support TF card & USB flash drive music play;
6. Support Bluetooth.

Specification:

Max output power:	10W	Frequency response:	90Hz-18KHz
Output Impedance:	4Ω	Work temperature:	-10°C-45°C
Charging voltage:	DC5V=1A	Amplify time:(50% volume)	8-12 hours
Music-play time:	6-10 hours	Charging time:	3-5 hours

1

 Function Illustration:

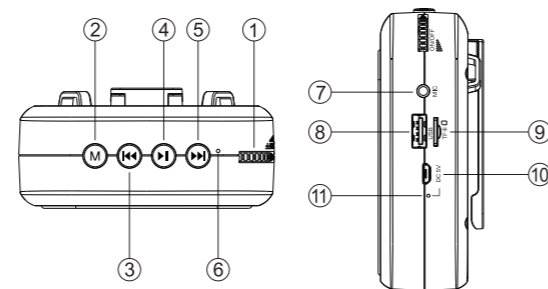

1. Power switch & volume control: Rotate the knob to "ON" to turn on the amplifier when the power indicator is blue. Rotate to "ON" continuously to increase the volume, rotate to "OFF" continuously to decrease the volume till turn off.

2. Mode: A) Short press to switch to TF card play /USB flash drive play /Bluetooth mode.
B) When play music on TF card/USB flash drive, long press "M" key for 3 seconds to switch to single song repeat. Press it again to switch back to all repeat.
Notes: speaker will be "all repeat" by default after powered on next time.

3. Previous: Short press to play previous song; long press to fast rewind.

4. Play/Pause: Short press it to pause, and press again to play the music under default mode.

2

5. Next: Short press to play next song; long press to fast forward.

6. MP3 Mode Indicator

7. Ø3.5mm Microphone Jack: Insert the wired microphone in any mode to amplify with current mode simultaneously. To avoid howling please do not point the microphone toward the speaker.

8. USB flash drive slot: Insert the USB flash drive to play mp3. It is compatible with most brands, the max capacity is 32GB.

9. TF card slot: Insert the TF card to play mp3. It is compatible with most brands, the maximum capacity is 32GB.
Note: It may be unreadable when the file is large or complex.

10. Micro-USB Charging Port: Use the charger with DC 5V output connect with Micro-USB cable to charge the PA system. Unplug the charger as soon as it is fully charged.

11. Charging Indicator

 
3

TF/USB flash drive:

Insert the TF card/USB flash drive as showed on the amplifier correctly, then press "M" key to switch to TF card/USB flash drive mode, and you can play the audio files in the TF card /USB flash drive.

Loop: When play music on TF card/USB flash drive, long press "M" key for 3 seconds to switch to single song repeat. Press it again to switch back to all repeat.

Notes: speaker will be "all repeat" by default after powered on next time.

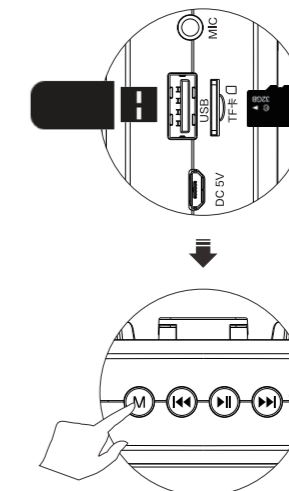

4