 
封面

6.Charge the speaker

Please turn off the speaker and charge it in time when it's low battery with voice prompt "Low battery, please charge". Please charge the speaker through Type-C charging cable with DC 5V adaptor.

 


Notos

- 1.We suggest full charge the speaker when you use the speaker in the first time.
- 2. Please unplug the charger in time after it is fully charged.

UHF wireless microphone instructions:

(only for UHF wireless version)



The wireless microphone is pre-paired with the amplifier already, you can use it directly. However, if the microphone has no sound or the microphone is disconnected, you need to pair it manually.

1.Pair the UHF manually:

Step 1: Turn on the voice amplifier, short press "M" key to switch to UHF mode, long press "M" key for 3 seconds, amplifier comes a voice prompt "UHF is waiting for connection"

Step 2: Turn on the wireless microphone and long press "\$\tilde{\pi}\$" key for 5 seconds, pairing is successful with a voice prompt "UHF is connected".

2.Volume Control:

1)If amplifier howling or in a small volume, adjust the volume by press "+" or "-" on the wireless microphone.
2)You can also adjust the volume on the voice amplifier by short press " w " or " w ".

3. How to charge the wireless microphone:

When the microphone's blue indicator light flashes, battery is low. Please turn it off and charge through type-c charging cable with DC 5V adapter. The red indicator light will be on all the time when charging, and it will turn off when the mic is fully charged.

Notes

- 1.The normal charge time is 3~5 hours, please unplug the charger as soon as it is fully charged.
- 2.Full charged before first use of the microphone to ensure
- 3. Turn off the UHF wireless microphone when not in use.

Trouble shooting:

1. Turn on the power switch, but the amplifier has no sound

A. The indicator light is off: it means no power and you should charge the amplifier.

B. The indicator light is on:Please repair the speaker and microphone.(Reference manually re-pair operation for details)

C.No response after any operation: please press and hold "N/o" for 10s to reset the speaker and power it on again.

2. Talk to the wireless microphone, but the amplifier has no sound(for wireless version only).

A. Please confirm both voice amplifier and microphone are powered on.

B. Confirm the wireless microphone has been paired with the amplifier successfully.

Please pair the UHF manually again if necessary.

3. The voice amplifier has distinct howling.

A. Make sure the microphone is not close to the amplifier, keep 60–70cm distance when in use:

B. You may need to turn down the volume properly to avoid howling when you use it in the small room.

J

Voice Amplifier User Manual



SD-M800

.....

☐ Wired

Wireless

Please read the instructions carefully before using it.

Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling. For ensure better amplification, aim at the headset MIC capsule when speaking, and keep the distance between the voice amplifier and the MIC more than 60 cm to avoid howling.

Simply tucking the speaker around waist, and mounting headphone over head can help to achieve the required distance.


Features:

- 1.Two-color injection molding, IPX5 waterproof;
- 2.SHIDU acoustic amplification electroacoustic system with loud and clear voice;
- 3. Support Bluetooth to play music;
- 4. High-capacity 3.7V 4400mAh lithium-ion battery;
- 5. Support TF card & USB flash drive play;
- 6. Support power bank function for emergency charging.

Specification:

Max output power:	18W	Frequency response:	80Hz-18KHz
Output Impedance:	4Ω	Work temperature:	-10°C-45°C
Charging voltage:	DC 5V 1.5A	Amplify time:	6-8 hours
Music-play time:	6-8 hours	Charging time:	3-5 hours

 Function Illustration:



.....

1.Power switch / play & pause:

A.Long press "씨ઢ" button for 3 seconds to turn on/off. B.In music playing mode, short press it to pause, short press it again to play.

2.Previous/Volume -: In music playing mode, long press for previous song short press for volume down.

3.Next /Volume +: In music playing mode, long press for next song, short press for volume up.

4.Mode Key: Short press "M" to select a working mode: Bluetooth, USB flash drive, TF card, AUX, UHF (only suitable for UHF version).

5.Recording

6.Ø3.5mm Microphone Jack: Insert the wired microphone in any mode to amplify with current mode simultaneously. To avoid howling please do not point the microphone toward the speaker. (There is no wired MIC in wireless version.)

7.DC 5V charging port

8.Audio input: Connecting with the computer/phone/MP3/MP4 and other Audio device, short press "M" to switch to the Audio In mode that can play all above audio files directly. 9.TF card slot: Insert the TF card to play mp3. It is compatible with most brands, the maximum capacity is 32GB.

.....

Note: It may be unreadable when the file is large or complex. 10.USB flash drive slot:

A.Insert the USB flash drive to play mp3. It is compatible with most brands, the max capacity is 32GB.

Note: It may be unreadable when the file is large or complex. B.To work as a power bank.

11.LED screen (Only displays the battery level.)

1.TF card/USB flash drive

The speaker will play the music file automatically after inserting TF card/USB flash drive to the right port, and the previous song and the next song can be selected by long press the " $\mbox{\ensuremath{\mathsf{H}}}$ " or " $\mbox{\ensuremath{\mathsf{H}}}$ " button. In music playing mode, short press " $\mbox{\ensuremath{\mathsf{H}}}/\ensuremath{\ensuremath{\mathsf{h}}}$ " button to play/pause the music. 2.Loop

When play music on TF card/USB flash drive, long press "M" key for 3 seconds to switch to single song repeat; long press "M" key for 3 seconds again to switch to all repeat.

Notes:

Speaker will be "all repeat" by default after powered on next time.

3.Recording

Supports wired MIC recording: Make sure the USB flash drive or TF card has been inserted, and then plug wired MIC into "MIC" port, short press "§" key to record; short press "§" key again to stop recording.lt will automatically play the present recording files .The recording files will be saved automatically into the USB flash drive or TF card.

.....

Play recording: long press "§" key in the MP3 playing mode.

4.Bluetooth Instruction

Please pair with your Bluetooth device as follows:

1.Switch on the amplifier and press "M" key to enter into Bluetooth mode. (The Bluetooth mode is ready with voice prompt "Bluetooth is waiting for connection"

2.Turn on the Bluetooth function of your mobile phone and search "SD-M800". Click and it will be connected successfully with a voice prompt "Bluetooth is connected".

Note: When playing music, please keep the amplifier close to the Bluetooth device to maintain a stable connection.

5.Power bank:

Connecting with the speaker and mobile via charging cable, then you can charge for the mobile phone.

3	If you have any question
	us we will try our hest to

SHIDU After sales service:

If you have any questions, please feel free to contact us, we will try our best to provide best service.

www.10shidu.com Email: service@10shidu.com

vw.10shidu.com	Email: service@10shidu.com	