 




Voice Amplifier User Manual

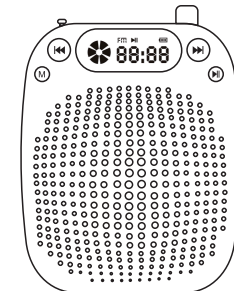

S18/S328

Please read the instructions carefully before using it.

Note:
Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling. For ensure better amplification, aim at the headset MIC capsule when speaking, and keep the distance between the voice amplifier and the MIC more than 60 cm to avoid howling.

Simply tucking the speaker around waist, and mounting headphone over head can help achieve the required distance.


Main features:

- 1.SHIDU patented appearance;
- 2.Stylish, ergonomic and comfortable design;
- 3.10W power output, sound coverage up to 300 m² ;
- 4.Support Bluetooth function;
- 5.Support TF card & USB flash drive music play;
- 6.FM stereo radio-can automatically search and save the FM Channel.

Technical Parameters:

Power output:	10W	Frequency response:	80Hz-18KHz
Output Impedance:	4Ω	Working temperature:	-10°C-45°C
Recharging voltage:	DC 5V 1.5A	Amplification-use time:	8-10 hours
Music-use time:	6-10 hours	Charging time:	3-5 hours

 Structure Instruction:

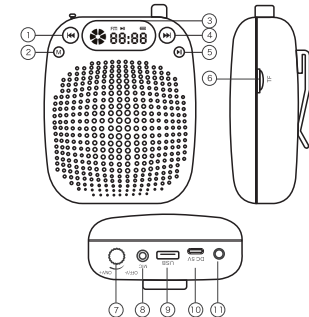

- 1.Previous:** Short press to play previous song, long press to songs fast rewind.
- 2.Mode:** Short press to switch to TF card play / USB flash drive play / FM mode / Bluetooth mode. In music playing mode, long press for single repeat, LCD shows "ONE". Long press again for all repeat, LCD shows "ALL".
- 3.Digital display**
- 4.Next:** Short press to play next song; long press to fast forward.
- 5.Play/Pause:** Short press it to pause or play the song.
- 6.TF card slot:** Insert the TF card to play mp3. It is compatible with most brands, the maximum capacity is 32GB.

Note:
It may be unreadable when the file is large or complex.

 
- 7.Power switch / volume control**
- 8.Ø3.5mm Microphone Jack:** Insert the wired microphone in any mode to amplify with current mode simultaneously. To avoid howling please do not point the microphone toward the speaker.
- 9.USB flash drive slot:** Insert the USB flash drive to play mp3. It is compatible with most brands, the max capacity is 32GB.
- 10.Type-C Port (DC 5V):** Use the charger with DC 5V output connect with Type-C cable to charge the PA system. Unplug the charger as soon as it is fully charged.
- 11.FM Antenna:** Extend the antenna, press "M" to the FM mode the LCD shows "87.5"; then long press "M" to enter into automatic channels searching; after searched successfully, the device will save the channels automatically. And please press "◀" or "▶" to choose the saved channels.

TF/USB flash drive:

Insert the TF card/USB flash drive as showed on the device correctly, then press "M" key to switch to the audio (MP3) mode, and you can play the audio files in the TF card/USB flash drive.
Note: Long press "M" key when playing music, then the LCD screen display "ONE", which means single loop. Long press "M" key again, then the LCD screen display "ALL", which means to play all.

Bluetooth Instruction:

Please pair with your Bluetooth device as follows:
Step 1: Turn on the amplifier and press "M" key to switch to Bluetooth mode. A voice will prompt "Bluetooth is waiting for connection" and the "bLUE" display on the screen will flash.

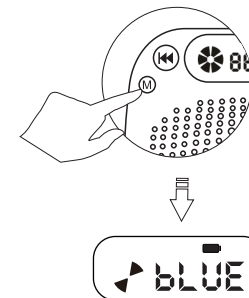


Step 2: From your mobile setting, turn on the Bluetooth function. Then search for "S18" and connect. Bluetooth pairing is complete with a voice prompt "Bluetooth is connected".
When playing music, please keep the amplifier close to the Bluetooth-enabled device to maintain a stable connection.

Charge the amplifier:

When battery symbol on the screen flashes means low power. Please charge through Type-C cable with DC 5V output adaptor. The battery symbol will flash when charge, and when battery symbol stop flash means fully charged. Please remember to unplug after it is fully charged.

 Note: We suggest fully recharge the amplifier before you using it at the first time.

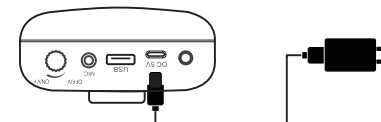

Caution and trouble shooting:

- 1) Aim at the MIC capsule when speaking and keep the distance between voice amplifier and MIC longer than 60cm avoid howling.
- 2) Don't insert or plug the connector frequently to avoid the looseness of socket or the bad connect.
- 3) Recharge timely when battery power is low.
- 4) Original accessories are suggested if they need to be replaced.
- 5) Non-professional technician is not allowed to dismantle or repair the product; please contact the local agent if there is any question or service requirement.
- 6) The amplifier should be kept in dry and ventilated area, rain, water, thump should be avoided.
- 7) Please keep the product and accessories far away from children.

SHIDU After sales service:

If you have any questions, please feel free to contact us, we will try our best to provide best service.
www.10shidu.com Email: service@10shidu.com