


284.00 mm
142.00 mm
388.00 mm

97.00 mm

**fifine**  
T732  
USER'S GUIDE




B2B Version:22-07

**CONTENTS**


Install Operation ..... 2-5  
Computer Set-up (Windows & MAC OS) ..... 5-11  
Software Settings ..... 11-13  
Important Notice ..... 13-14

**WHAT'S IN THE BOX?**




1

**INSTALL MICROPHONE STAND ON TABLE**

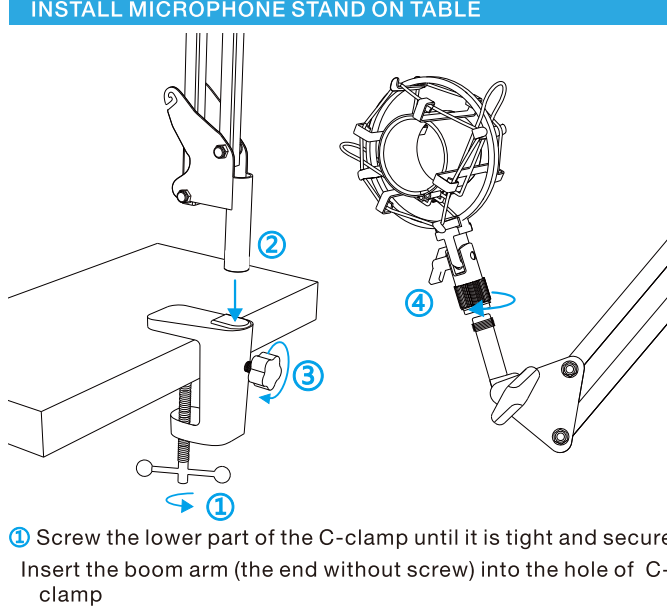


2

**INSTALLATION QUICK GUIDE**

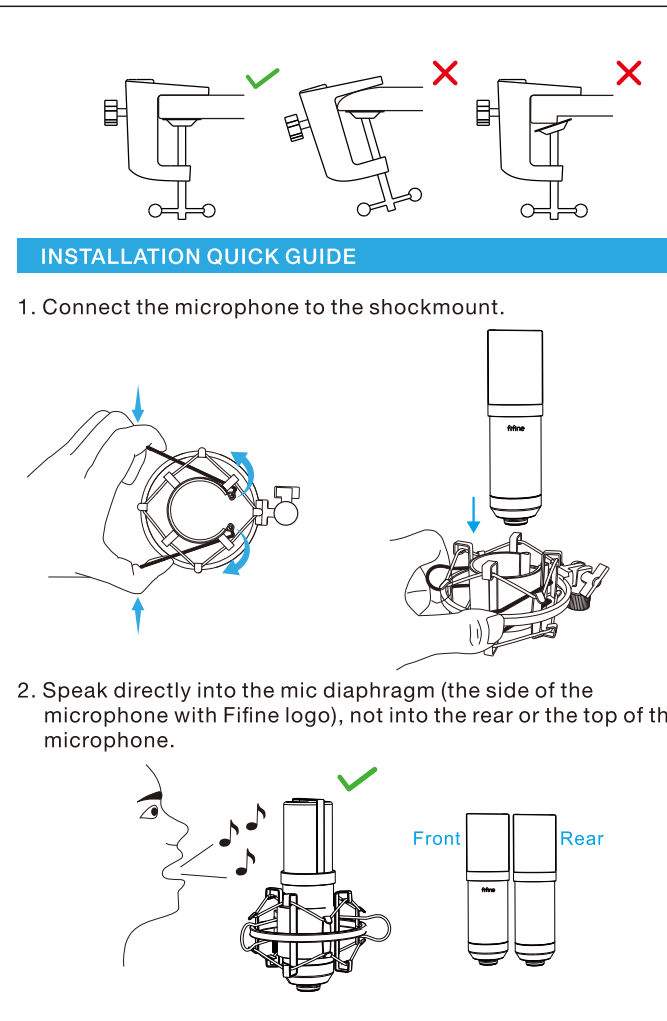


3

3. Connect to computer. Plug the microphone into rear back USB port of your computer.

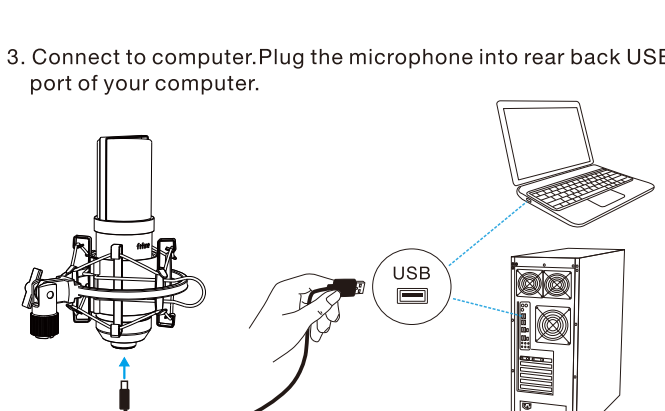


**INSTALL TRIPOD STAND**

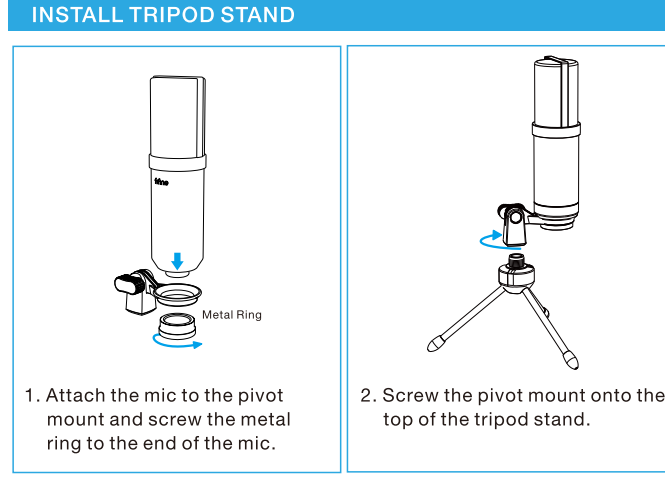


4

3. Next, click Sound to display the Sound preference pane.

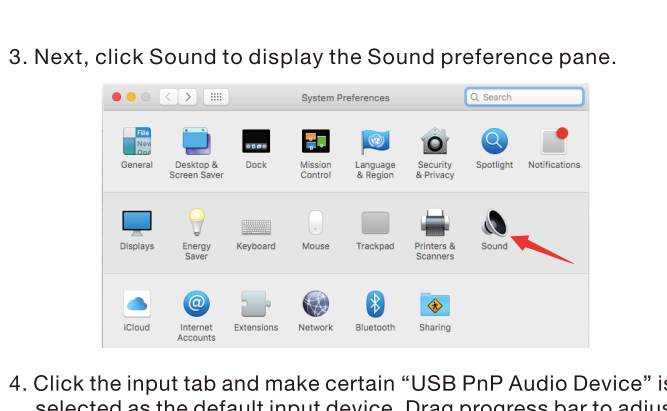


4. Click the input tab and make certain "USB PnP Audio Device" is selected as the default input device. Drag progress bar to adjust volume of input.

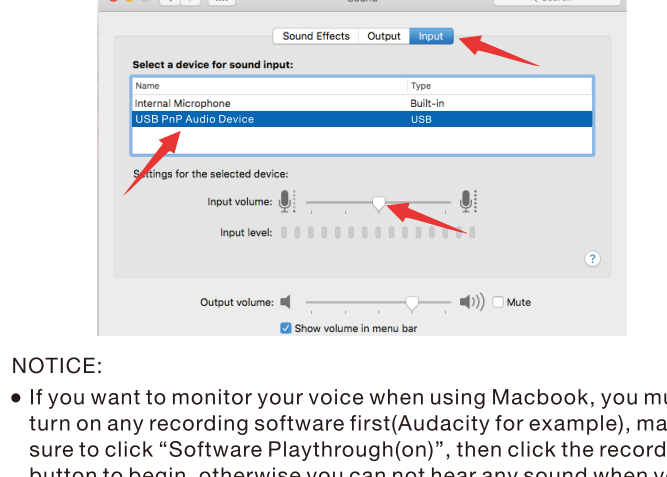


6

• Choose the default Dictation & Speech software when you use the speech to text in Macbook, click "On" under Dictation window, so that your microphone can be recognized by the software.

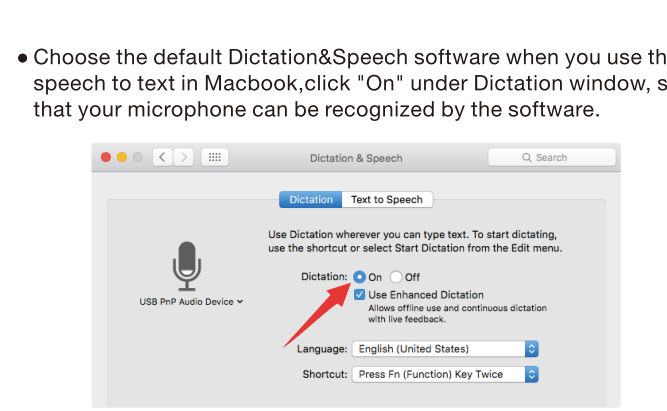

• If your Mac only has USB C port, you will need a genuine Apple USB-C to USB female adapter for connection. And pls plug the USB adapter into your Mac first, then connect the mic with the adapter.

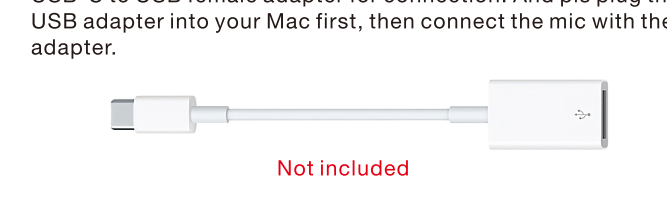

Windows


Please wait for a few secs when first time operation, since driver of microphone takes time to automatically install. There may be no pop-up window or message though. (If plugging USB plug in a different USB port, driver installs again). After installation, you can test the mic by speaking to it. If the mic picks up no sound, please follow procedures below.

7

**COMPUTER SETUP**


**Apple MAC OS**

- Plug the free end of the provided USB cable into the USB port on your computer. Your computer will automatically recognize the USB device and install a driver. There may be no pop-up window or message though.
- To select the T732 as your audio input, first, open your System Preferences.

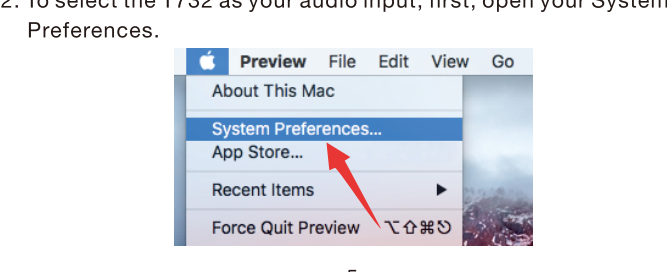


5

3. Loosen the screw, adjust the angle of the mic and tighten the screw again.

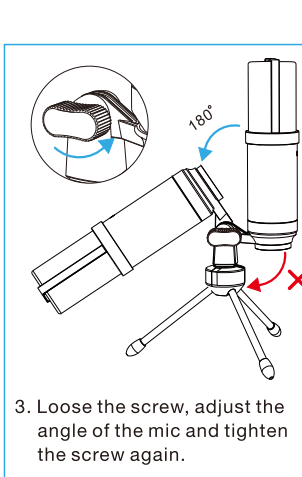


4. Loosen the metal ring, adjust the mic horizontally and tighten it.

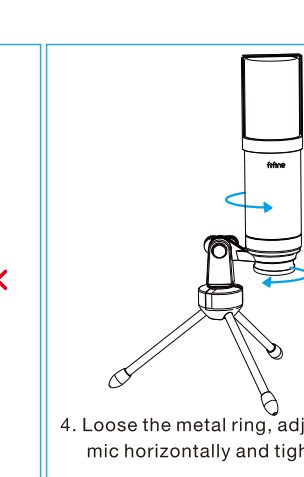


388.00 mm

97.00 mm

1. Right-click the speaker icon at the bottom right of the screen. Click "Sounds".

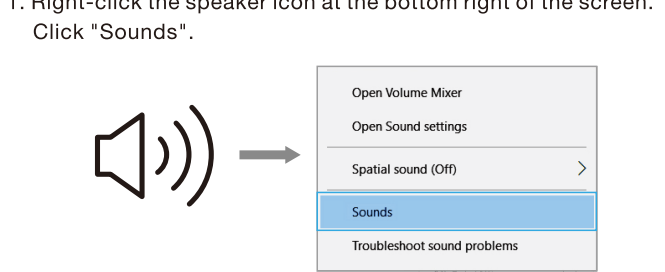


2. Click the Sound control panel.

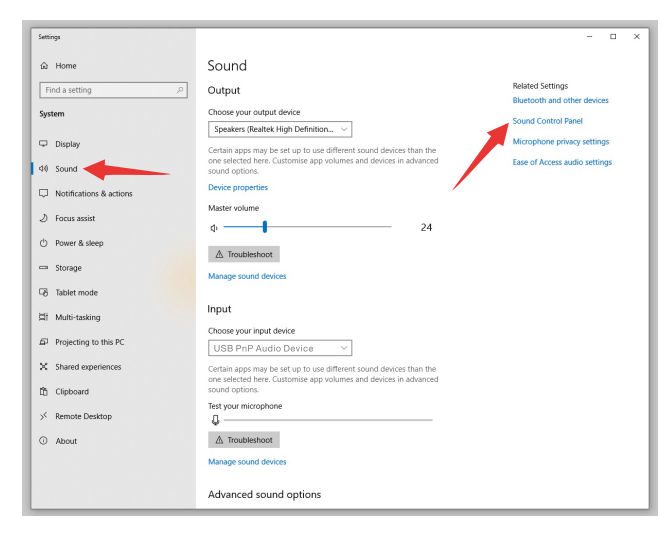


8

3. Confirm the loudspeaker is open.

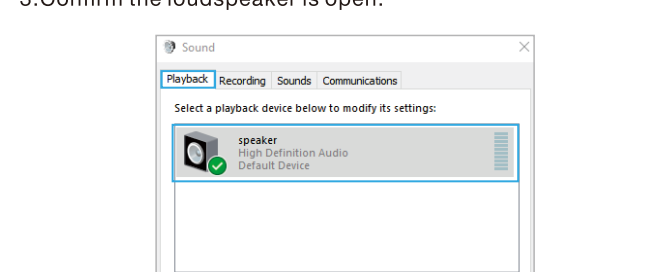


4. Click the loudspeaker is being used - "Levels" - levels, drag progress bar to adjust volume of output.

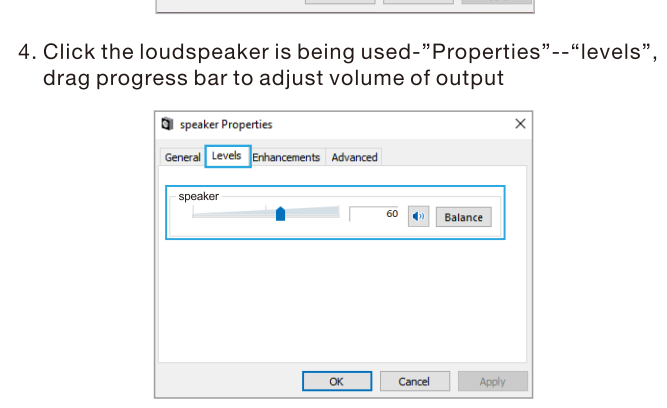


9

5. Select the Recording tab, and choose "USB PnP Audio Device" as the default device. When you speak to mic, bar-type icon will turn green and bounce. If it remains unchanged, please reset computer and re-plug the mic in another USB port. If there's still no "USB PnP Audio Device", please contact Fifine after sales service.

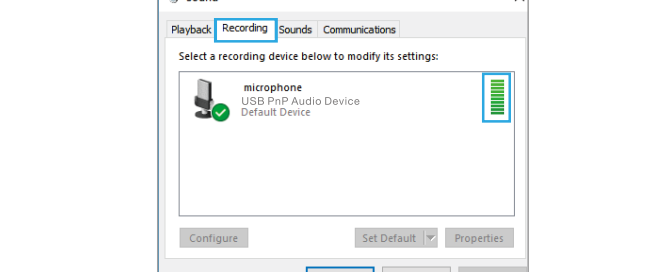


6. If you want to monitor your recording, click Microphone "USB PnP Audio Device" - "Properties" - "Listen" - click "Listen to this device" - "Apply". No sound is heard through earphone/built-in speaker, if you don't follow this procedure. NOTE: Click off "Listen to this device" when you are using any recording software or chatting software (Skype).

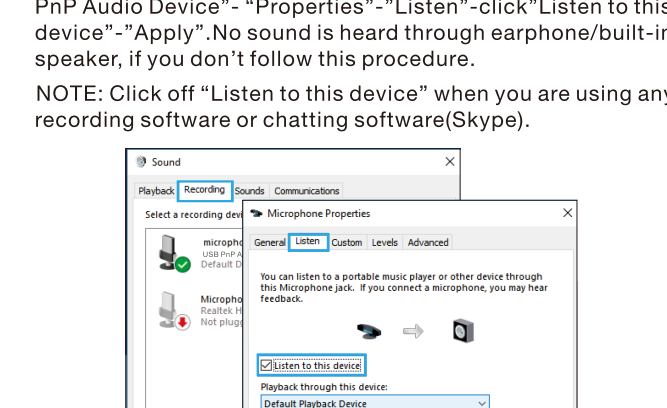

10

tab, change to decibels from percentage. To get the best sound of the mic, please adjust the mic level during this range (-14.0 to 20.0dB), when the output volume of the speaker is max.

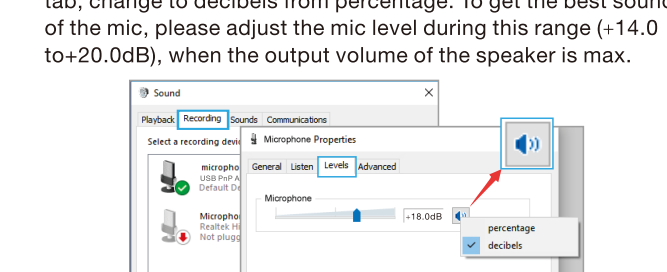

Note: (Applicable for MAC and Windows)

- If computer prompts that it's unable to identify USB devices, please restart computer and re-plug the microphone into rear back USB port of your computer.
- If the mic is recognized but no sound comes out, please check whether the System Sound is set muted.
- If the mic is recognized but no sound comes out, and your PC is running on Windows 10, please go to settings > privacy > microphone and click the "Allow apps to access the microphone" to ON, then restart your PC.


**Recording Software Settings**

- Make sure you have the correct input / output selected. Note: try out the (Audacity) or other recording software you are using) if you find the USB microphone is unavailable. And restart the software after the mic is re-plugged.


11

4. For windows computers, we recommend audacity, and for Apple computers, you can use Apple's own QuickTime player to test the recording.

5. Applications setting "Skype"

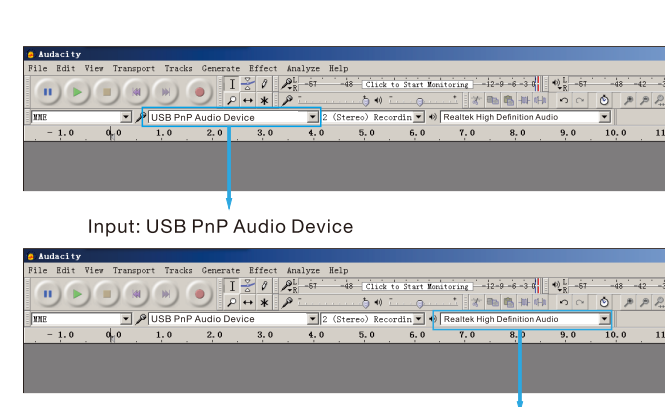

2. Make sure click off "listen to this device" in your computer system when you are using any recording software, or else you would hear duet of yourself just like too much echo.

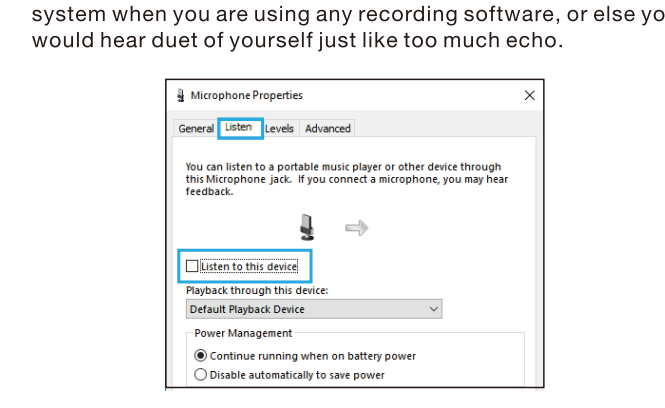

3. There are several ways to improve the usage. Come to our website, find Technical Support under the "SUPPORT" tab or directly search the Technical Support solution for your interested subject.

12

**IMPORTANT NOTICE**

- Setting your software levels: Correct adjustment of microphone level is important for optimum performance. Ideally, the microphone level should be as high as possible without overloading the input of your computer. If you hear distortion, or if your recording program shows levels that are consistently overloaded (at peak levels), turn the microphone volume (or level) down, either through your control panel (or system preferences) settings, or through your recording software. If your recording program shows insufficient level, you can increase the microphone gain either from the control panel (or system preferences) settings or through your recording program.
- Selecting software: Many recording software can be chosen. Audacity, available for free online is a widely used software. If you plug in the mic AFTER you load Audacity, it may not recognize the mic while it program.

13

may still record, the results will be unsatisfactory. If that happens, restart Audacity AFTER plugging the USB into your computer and click on Fifine Microphone option.


- Positioning your microphone: It is important to position the microphone directly in line (on axis) with the person speaking / singing or instrument (or other sound source) to achieve the best frequency response of the microphone. For use in speaking / singing applications, the ideal placement for the microphone is directly in front of the person speaking / singing.
- Protecting your microphone: Avoid leaving your microphone in the open air or in areas where temperatures exceed 110° F (43° C) for extended periods. Extremely high humidity should also be avoided.


**SPECIFICATION**

Power Supply:	5V
Polar Pattern:	Uni-directional
Frequency Response:	50Hz-20KHz
Sensitivity:	-45dB±3dB(at 1kHz)
Max. SPL:	110dB(at 1KHz±1% T.H.D)
S/N Ratio:	≥78dB
Electrical Current:	30mA±5%

14

**CONTACT US**

Get Social:  Facebook page: <http://bit.ly/FifinePage>

Contact Info:  E-mail: [web@fifine.cc](mailto:web@fifine.cc)

More product inquiries can be found on the website. Company Website: <https://fifinemicrophone.com/>

**WARRANTY**

Fifine microphone warrants its hardware product defects in materials and workmanship for a period of one year from the date of original retail purchase, provided the purchase was made from authorized Fifine microphone dealer. This warranty is void if the equipment is altered, misused, mishandled, suffers excessive wear or is serviced by any parties not authorized by Fifine Microphone. For warranty service, contact your local distributor or [web@fifine.cc](mailto:web@fifine.cc).

15