



BREAKFAST
User Manual

Homend
Serving life



You want to use your new toaster for your next breakfast. Starting the day with a rich and appetizing breakfast with toasted bread is a really good idea. At this point, we have a suggestion. First, read the user manual we have prepared for you. You will see that it will take you 10 minutes at most. Then, you can start your breakfast. With pleasure, in safety...



We have tried to write everything as clearly as possible in the user manual. We hope that reading it once will be enough. We recommend that you keep this manual in a place where you can easily find it, in case something comes to your mind tomorrow.

BREADFAST1502H

BEFORE INITIAL USE

+ First of all, read this user manual thoroughly and within 10 minutes you will be familiar with your toaster. Then remove the components of your toaster from its packaging.

+ On the underside of the body of your toaster, there are figures indicating the voltage level suitable for use. Please check that these figures correspond to your mains electricity supply.

+ If you notice any parts of your toaster are damaged, please call us immediately at our live support line at 08000 448181. When checking the parts, please pay particular attention to the cable.

+ Make sure that the unit is in the "OFF" position after seeing that all accessories in your toaster are complete and not missing. Check the bread slots and make sure they are empty. Before using it for the first time, run the toaster at the highest setting, empty, without putting bread inside. There may be a slight odour, but this is normal.



COMPONENTS OF YOUR TOASTER



9-stage toasting adjustment knob with LED: Adjusts the desired toast color, from light to dark.



Crumb tray: It can be removed to easily clean crumbs from the bottom of the toaster.



Cable duct: Tidies up excess cable and keeps your kitchen organized.

USE YOUR TOASTER SAFELY

Please read these warnings carefully before using your toaster.

Your toaster is designed for home use only, please do not use it outdoors. We would also like to remind you that if you want to use your toaster as a professional product for business purposes, you may not get the performance you expect.

When determining the length of your toaster's power cord, we first and foremost considered your safety. If you want to use an extension cord, we recommend that you choose a brand that has passed safety tests. Please check that the extension cord you use can carry the electricity used by your toaster.

If you are using a long cable, adjust the length so that it does not hang down from the kitchen counter or table. This significantly reduces the chances of anyone in the house, especially your child, tripping over the cord.

When your toaster is running, the top surface heats up.

Therefore, we recommend that you only touch the toasting handle and buttons while your toaster is running.

Your toaster is not your child's toy. If your child wants to prepare breakfast for you or her/his friends, she/he can do it much more safely with toy kitchen utensils.

Remember to unplug your toaster when you are done using it or before cleaning. To unplug the appliance, pull it by the plug. Never pull by the cord.

If you notice any part of your toaster is damaged, please call us immediately. Using your machine in a damaged condition not only increases the degree of damage but also creates a dangerous situation for you. Please do not take this risk. Never try to repair the toaster yourself. We have set up a service system for you. When you think that your machine needs repair, please call us at 08000 448181 and talk to our friends working on the live support line. We will suggest the most suitable and fastest solution for you. This is an important part of our business.

Do not use components of your toaster in ways that we have not suggested. Otherwise, your warranty will expire. More importantly, making such a choice may result in fire, electrical accidents and injuries.

Do not place your toaster on or near hot surfaces such as stoves and ovens. We have designed the slots of your toaster to be quite wide. However, some pastries and very thick slices of bread may not fit in the slots. In such cases, please do not insist.

Your toaster is designed for toasting bread and pastries only. Never place food in the slots, especially food covered with aluminium foil.

Do not move the slices of bread in the slots when your toaster is plugged in. You can use the cancel button for such cases.

Clean the crumbs inside your toaster frequently and do not use foods that will leak the filling when heated. Otherwise, substances that accumulate inside your toaster will prevent it from operating safely. If your toaster is hot, please let it cool down before cleaning. When bread gets too hot, it may start to burn, risking a fire. In these cases, your immediate intervention prevents the risk of fire. Please do not leave your toaster while it is running. Be especially careful with electrical appliances. Do not toast products with sugar, jam or marmalade in your toaster. You should never remove the bottom cover of your toaster. Removing the bottom cover significantly increases the risk of fire and electric shock.

Never immerse your toaster or any part of it in water or any other liquid. For your own safety, we kindly ask you not to deviate from the cleaning recommendations in this manual. Do not operate the appliance under or near curtains and similar flammable materials or under wall units. Otherwise, it may cause a fire. Do not place any other objects on top of the toaster while it is running or still hot. Otherwise, it may cause a fire.

Never allow young children, physically or mentally disabled persons to use your toaster without your supervision and control.

USING THE TOASTER SAFELY

1. Please first make sure that the crumb tray is in place and the toasting arm is on top.
2. Now place your toaster on a flat surface with 10 cm of space around it.
3. Unplug the power cable and plug it securely into the nearest socket.
4. You can now put the bread slices into the slots in your toaster. Please make sure that the toasting lever is at the top.
5. You can adjust how much you want your bread to be toasted by turning the toast control knob to the desired position between 1 and 9. The higher the number indicated by the toast setting knob, the more toasted your bread will be.

Warning:

If you want your bread to turn golden brown, we recommend setting the toasting control knob to setting 5.



Warning:

Your toaster's settings are designed for repeating the toasting process twice at one go. If you repeat the toasting process more than twice, without changing the setting, the subsequent toasts will be darker in colour.

6. When you lower the toasting lever downwards, the toasting process will start, the setting number you have selected will be displayed on the toasting setting

button and the lights on the button will light up.

As it toasts, the lights on the browning control knob will also dim and turn off completely when the process is finished.



Warning:

If your toaster starts to smoke, press the "cancel" button and stop toasting.

7. Unplug your toaster after toasting bread.

YOU CAN TAKE NOTE OF THE BREAD TOASTING TIPS

When your toaster is running, it cooks and dries the slices of bread you put in it. However, the moisture content of all types of bread is not the same. Therefore, different types of bread (white, whole meal, grain, etc.) have different browning times.

+ You do not need to warm up your toaster before use.

+ For slightly dry bread, we recommend using a lower toasting setting than usual.

+ For fresh and whole wheat bread, we recommend using a higher toasting setting than usual.

+ For bread with a rough surface, such as buns, we recommend using a higher toasting setting than usual.

+ You may need to toast thick slices of bread twice in a row. Thick slices will also take longer to toast as more moisture needs to evaporate.

+ Some bread have small pieces of walnuts, grapes, sunflower seeds, nigella seeds, etc. on the outside. We recommend that you remove the loose pieces of bread from the outside of the bread you want to toast. This will prevent these pieces from falling into your machine and sticking to the protective wire inside the slots.

+ You can also toast bagels in your toaster. To do this, please divide bagels equally and place only one piece in each slot.



+ Your toaster is designed to toast two slices of bread at the once. If you only want to toast one slice, keep the toasting time low to ensure that your bread does not burn.

+ When you want to toast slices of bread from the freezer or frozen products such as waffles, pancakes, French toast and bagels in your toaster, we recommend that you use the defrost feature first.

+ Please be very careful when toasting pastries. The ingredients in the pastries (minced meat, cheese, potatoes, etc.) may heat up before the surface is toasted.

DEFROSTING FEATURE

You can use your toaster's defrost function to toast slices of bread that you have taken out of the freezer.

Please note that for products like this, you should first defrost and then start toasting.

1. Place the bread slices in the bread slots.

2. Turn the toasting setting knob to select the setting you want to toast.

+ Settings 1-3: Ensures that your bread is lightly toasted.

+ Setting 4-6: Ensures that your bread is moderately toasted.

+ Setting 7-9: Makes your bread very toasted.

3. Slowly press the toasting lever downwards. As soon as the toasting lever is locked at the lowest level, your machine will start toasting the bread.

4. You can now press the defrost button.



5. When the toasting level you have set is reached, the toast will automatically rise up. If you want to remove the toast before the level you set, simply press the cancel button.

RE-HEATING FEATURE

1. Put the bread slices in the bread slots.
2. Slowly press the toasting lever downwards. As soon as the toasting lever is locked at the lowest level, your machine will start toasting the bread.
3. You can now press the heating button again.



Warning:

In this mode, the toasting time is fixed; when the time is up, the toasting lever automatically lifts up and finishes the reheating process.

TAKE CARE OF YOUR TOASTER AND GET THE MOST OUT OF IT.

When you want to clean your toaster, please unplug it first and let it cool down.

Over time, some crumbs will accumulate inside your toaster. To clean these crumbs, simply pull out the crumb tray and pour out the crumbs. You can then wipe the crumb tray with a damp cloth and put it back.



Warning:

Never use your toaster machine without the crumb tray. Otherwise, you may damage your machine.

There is a cable collection compartment underneath your toaster. You can collect excess cable in this compartment. Wrapping the excess cable around the outside of your toaster can cause the cable to heat up and burn.



Some cleaning agents can corrode the surface of your toaster. Please wipe the exterior of your toaster only with a clean, damp cloth, then dry thoroughly. Do not use metal polish.

To remove pieces of bread stuck inside your toaster, unplug it from the socket, allow it to cool for a few minutes, turn it upside down and shake it gently. Never insert a hard or sharp tool into the slots.

Otherwise, you may damage the parts inside your toaster machine.

This is dangerous for your safety and the safety of your machine. You may get a shock if you come into contact with live parts.

THERE IS AN ANSWER TO EVERY QUESTION IN LIFE.

It is our primary wish that you do not experience any problems while using your toaster. Nevertheless, we have prepared a list of problems that you can overcome with small interventions. We hope this helps.

PROBLEM	POSSIBLE CAUSE	SOLUTION RECOMMENDATIONS
Device does not work.	The plug may have come out of the socket or may not be properly seated.	Make sure the power plug is plugged in.
The device does not work when the power plug is plugged in.	The roasting lever is up.	Lower the roasting lever.
Bread is toasted too much	Heat adjustment knob high may be of a degree.	You can reduce the temperature with the heat control knob.
Bread is not toasted well	Temperature control knob low may be of a degree.	You can increase the temperature with the control knob.
There is a lot of odour and smoke coming from the device.	Bread on resistance particles may be stuck to it.	Remove the plug from the socket and carefully clean the parts on the heating element.
	The crumb tray may be full.	Clean the tray.
Sliced bread stuck in the device.	The bread slices are cut very thickly.	Unplug the power cable, once the appliance has cooled down, carefully remove the stuck bread with a wooden spatula.

Model no	Breadfast 1502UK
Voltage level / Frequency	220-240 V / 50/60 Hz
Power Rating	1000 W
Lifecycle	7 years
Weight	1,57 kg
Cable length	80 cm

The importer/manufacture company reserves the right to make changes in technical specifications without notice.



As this appliance consists of recyclable parts in accordance with WEEE directives, it must not be disposed of in the garbage. Please, contact Homend Customer Service to recycle this appliance.

Homend UK Limited

Company number 14162914

VAT number 431756496

Unit 10B Viscount Way

South Marston Park

Swindon

Customer Services: 08000 448181

www.homend.uk

You will not be able to remain indifferent to what we are about to tell you.

Congratulations, by purchasing this product you are entitled both to a better looking kitchen counter and to a great service. You can reach us at **08000 448181**.



100% SATISFACTION WARRANTY

Experience Homend products for 60 days. If you're not 100% satisfied, return them for a full refund. Yes, we trust our exceptional products this much.



FREE COLLECTION AND DELIVERY

We collect and deliver every product with defects from your home for free within the warranty period. You only need to sign up at **homend.uk/sign-up**. Or you can drop and collect from nearest shop in our logistics partner's network.



NO PAPERWORK

You don't need to keep a warranty certificate or frantically search for an email to get the customer service you need. The product is the certificate.



TWO YEAR GUARANTEE

We make sure that all our products are flawless. But things can sometimes go wrong. That's why all our products come with a two-year guarantee. You'll get a full refund or replacement for any production related problem.

homend.uk