


Sylva Linear Chandelier 41"

PARTS ENCLOSED

ITEMS DIAGRAM DESCRIPTION QTY. (A) Junction Box(Not included) 1 **50LB. MIN.FIXTURE RATED** (B) Mounting Screws 4 (C1)Wire Nut 3 (C2) **Terminal Box** 1 (D) Ceiling Plate 1 (E1) Canopy 1 (E2) **Bolts** (F) **Ouick link** 2 (G) Chain 1 (H) Body 1 (I) Glass+Spare 88 + 3Bulb+Spare (E14 for EU/E12 for US) 8+3 (J) Small Allen Screwdriver 1 (K1) (K2)Large Allen Screwdriver 1 Set Screws 2 (L) Ш Spare parts

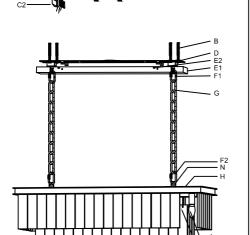

IMPORTANT SAFETY INSTRUCTIONS:

- 1. Use an authorized and certified electrician for consultation and installation.
- 2. This fixture has been rated for 8 x 25-watt maximum standard bulb.
- 3. To avoid the risk of fire, do not exceed the recommended wattage
- 4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 164 kg(362 lb) is required.
- 5. The manufacturer and distributor accepts no liability for incorrect installation.
- 6. For indoor use only.
- 7. Keep away from children.

Warnings:

- 1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
- 2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
- 3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
- 4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Iron

Height: 32.3 cm (12.75 in) Length: 104 cm (41 in) Width: 38.4 cm (15 in) Weight: 32.8 kg (72.3 lb) Grounded / Hardwired

TO ASSEMBLE:

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Turn OFF power to the junction box where the ceiling light will be installed.
- 3. Loosen the bolts (E2) from canopy (E1) by large allen screwdriver (K2) and remove the ceiling plate (D) from canopy (E1).
- 4. Attach the ceiling plate (D) to the ceiling with mounting screws (B).
- 5. Unlock the quick link (F2) at the opposite end of the chain (G) to attach the hang straight (N).
- Insert quick link (F1) into canopy (E1). Then unlock the quick link (F1) to attach ceiling mounting plate (D).
- 7. Connect wires from the fixture to the ceiling wires referring to **Wire & Safety Guidelines** with wire nuts (C1) or terminal box (C2).
- 8. Move the canopy (E1) up to the ceiling, then fasten the the bolts (E2) by large allen screwdriver (K2)
- 9. Fasten lightbulbs (J) to the lampholders.
- 10. Hang the glass (I) from inner layer to outer onto body (H) as drawing on left. Note: To ensure safety of chandelier during glass installation, please maintain level of chandelier by ensuring you install glass drops in balanced way on opposite ends of light.
- 11. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

- 1. Make sure that the power is turned off and bulb has cooled before handling.
- 2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
- 3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.



Sylva Linear Chandelier 49"


PARTS ENCLOSED ITFMS DIAGRAM **DESCRIPTION** OTY. (A) Junction Box(Not included) 1 50LB. MIN.FIXTURE RATED (B) **Mounting Screws** (Not included) (C1) Wire Nut 3 (C2) **Terminal Box** 1 (D) **Ceiling Plate** (E1) Canopy **Bolts** (E2) (F) **Quick link** 2 (G) Chain (1)Glass+Spare 104+4 Bulb+Spare (J) (E14 for EU/E12 for US) 11+4 Small Allen Screwdriver 1 (K1) (K2)Large Allen Screwdriver

Set Screws

Spare parts

(L)

2

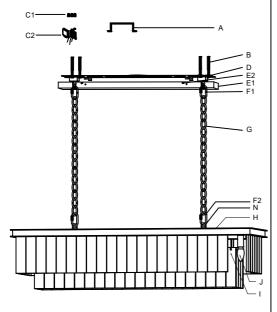

IMPORTANT SAFETY INSTRUCTIONS:

- 1. Use an authorized and certified electrician for consultation and installation.
- 2. This fixture has been rated for 11 x 25-watt maximum standard bulb.
- 3. To avoid the risk of fire, do not exceed the recommended wattage.
- 4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 219kg(1144.2lb) is required.
- 5. The manufacturer and distributor accepts no liability for incorrect installation.
- 6. For indoor use only.
- 7. Keep away from children.

Warnings:

- 1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
- 2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
- 3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
- 4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Iron

Height: 32.3 cm (12.75 in)
Length: 124.8 cm (49.25 in)
Width: 38.4 cm (15in)
Weight: 43.8kgs (96.6 lbs)
Grounded / Hardwired

TO ASSEMBLE:

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Turn OFF power to the junction box where the ceiling light will be installed
- 3. Loosen the bolts (E2) from canopy (E1) by large allen screwdriver (K2) and remove the ceiling plate (D) from canopy (E1).
- 4. Attach the ceiling plate (D) to the ceiling with mounting screws (B).
- 5. Unlock the quick link (F2) at the opposite end of the chain (G) to attach the hang straight (N).
- Insert quick link (F1) into canopy (E1). Then unlock the quick link (F1) to attach ceiling mounting plate (D).
- 7. Connect wires from the fixture to the ceiling wires referring to **Wire & Safety Guidelines** with wire nuts (C1) or terminal box (C2).
- 8. Move the canopy (E1) up to the ceiling, then fasten the the bolts (E2) by large allen screwdriver (K2)
- 9. Fasten lightbulbs (J) to the lampholders.
- 10. Hang the glass (I) from inner layer to outer onto body (H) as drawing on left. Note: To ensure safety of chandelier during glass installation, please maintain level of chandelier by ensuring you install glass drops in balanced way on opposite ends of light.
- 11. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

- 1. Make sure that the power is turned off and bulb has cooled before handling.
- 2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
- 3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.


ENVIRONMENT:


Special waste handling may be required. Please contact your local authorities for more information.



Sylva Linear Chandelier 59"

PARTS ENCLOSED

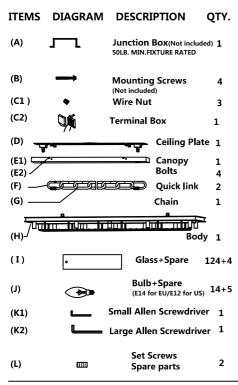

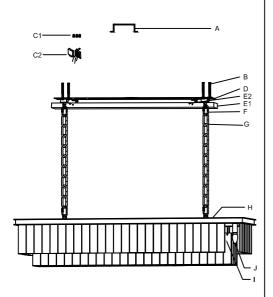

IMPORTANT SAFETY INSTRUCTIONS:

- 1. Use an authorized and certified electrician for consultation and installation.
- 2. This fixture has been rated for 14 x 25-watt maximum standard bulb.
- 3. To avoid the risk of fire, do not exceed the recommended wattage
- 4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 229 kg (504.85 lb) is required.
- 5. The manufacturer and distributor accepts no liability for incorrect installation.
- 6. For indoor use only.
- 7. Keep away from children.

Warnings:

- 1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
- 2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
- 3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
- 4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Iron

Height: 32.3 cm (12.75 in) Length: 150.8 cm (59.25 in) Width: 38.4 cm (15 in) Weight: 45.8 kg (100.97 lb) Grounded / Hardwired

TO ASSEMBLE:

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Turn OFF power to the junction box where the ceiling light will be installed
- 3. Loosen the bolts (E2) from canopy (E1) by large allen screwdriver (K2) and remove the ceiling plate (D) from canopy (E1).
- 4. Attach the ceiling plate (D) to the ceiling with mounting screws (B).
- 5. Unlock the quick link (F2) at the opposite end of the chain (G) to attach the hang straight (N).
- Insert quick link (F1) into canopy (E1). Then unlock the quick link (F1) to attach ceiling mounting plate (D).
- 7. Connect wires from the fixture to the ceiling wires referring to **Wire & Safety Guidelines** with wire nuts (C1) or terminal box (C2).
- 8. Move the canopy (E1) up to the ceiling, then fasten the the bolts (E2) by large allen screwdriver (K2)
- 9. Fasten lightbulbs (J) to the lampholders.
- 10. Hang the glass (I) from inner layer to outer onto body (H) as drawing on left.

Note: To ensure safety of chandelier during glass installation, please maintain level of chandelier by ensuring you install glass drops in balanced way on opposite ends of light.

- 11. Restore power to the junction box and test ceiling light fixture.
- 1. Make sure that the power is turned off and bulb has cooled before handling.
- 2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
- 3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.


ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.



Sylva Linear Chandelier 72"

PARTS ENCLOSED **ITEMS DIAGRAM DESCRIPTION** OTY. (A) Junction Box(Not included) 1 50LB. MIN.FIXTURE RATED (B) **Mounting Screws** (C1) Wire Nut 3 (C2) **Terminal Box** 1 Ceiling Plate 1 (E1) Canopy **Bolts** (F) **Quick link** 2 (G) (H)-Body 1 (1)Glass+Spare 148 + 5Bulb+Spare (J) (E14 for EU/E12 for US) **Small Allen Screwdriver** (K1)(K2)Large Allen Screwdriver **Set Screws** 2

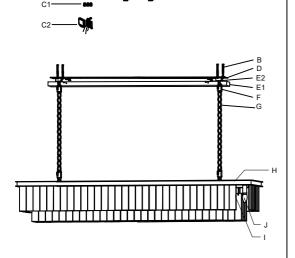

(L)

000

Spare parts

IMPORTANT SAFETY INSTRUCTIONS:

- 1. Use an authorized and certified electrician for consultation and installation.
- 2. This fixture has been rated for 17 x 25-watt maximum standard bulb.
- 3. To avoid the risk of fire, do not exceed the recommended wattage.
- 4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 288 kg (635 lb) is required.
- 5. The manufacturer and distributor accepts no liability for incorrect installation.
- 6. For indoor use only.
- 7. Keep away from children.

Warnings:

- 1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
- 2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
- 3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from
- 4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Iron

Height: 32.3 cm (12.75 in) Length: 182.0 cm (71.75 in) 38.4 cm (15 in) Weight: 57.6 kg (127 lb) Grounded / Hardwired

TO ASSEMBLE:

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Turn OFF power to the junction box where the ceiling light will be installed.
- 3. Loosen the bolts (E2) from canopy (E1) by large allen screwdriver (K2) and remove the ceiling plate (D) from canopy (E1).
- 4. Attach the ceiling plate (D) to the ceiling with mounting screws (B).
- 5. Unlock the quick link (F2) at the opposite end of the chain (G) to attach the hang straight
- 6. Insert quick link (F1) into canopy (E1). Then unlock the quick link (F1) to attach ceiling mounting plate (D).
- 7. Connect wires from the fixture to the ceiling wires referring to Wire & Safety Guidelines with wire nuts (C1) or terminal box (C2).
- 8. Move the canopy (E1) up to the ceiling, then fasten the the bolts (E2) by large allen screwdriver (K2)
- 9. Fasten lightbulbs (J) to the lampholders.
- 10. Hang the glass (I) from inner layer to outer onto body (H) as drawing on left. Note: To ensure safety of chandelier during glass installation, please maintain level of chandelier by ensuring you install glass drops in balanced way on opposite ends
- 11. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

- 1. Make sure that the power is turned off and bulb has cooled before handling.
- 2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
- 3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.