





Thank you for purchasing our product. Before installing/operating the product, read the instructions carefully and retain them for future reference.

#### **⚠** Attention!

- For installation, follow the steps described. Any damage caused by wrong installation shall be imputed to the users.
- To avoid a short circuit from occurring do not pull or modify the wires during installation.
- Do not disassemble or change any parts. Opening and dissassembling this unit will void any warranty.
- Maintenance and repairs should be executed by our professionals only.

#### **NOTE**

 
Nome procedures must be followed to avoid damages to the product.

MARNING! Certain procedure must be followed to avoid damages to yourself, to the vehicle or to others

 
## 1-1 ACCESSORIES

















## 1-2 OPTIONAL ACCESSORIES

 


# **2** SPECIFICATIONS

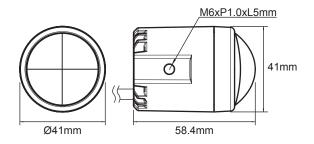

■Module Storage Temp. Range	-10 ~ 60 °C
<ul><li>Standard</li></ul>	JIS D 0203
●Effective Voltage	DC 10 ~ 16 V
●Current Draw	0.73 ± 0.05 A
● Power	DC 12 / 9.6 W
●Homologation	E-Mark / DOT Approved
●Size	Ø 41 X H 58.4 mm
●Weight	±107 g
NOTE Design and specifications are subject to change without notice.	


#### 3 INSTALLATION INSTRUCTIONS

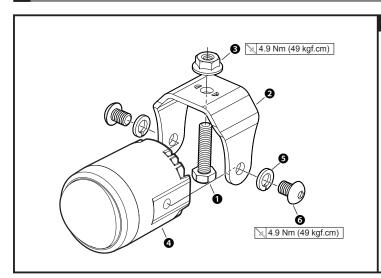

# Follow the steps below during installation.

- 1. M6 Bolt (Accessories 7)
- 2. Bracket(Accessories 3)
- 3. M6 Nut(Accessories 4) 4.9 Nm (49 kgf.cm)
- 4. LED Light(Accessories 1)
- 5. M6 Lock Washer(Accessories 6)
- 6. M6 Allen screw(Accessories 5) 3 4.9 Nm (49 kgf.cm)

# 4 WIRING INSTALLATION INSTRUCTIONS

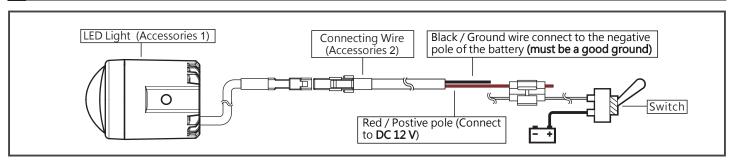

# 5 TROUBLESHOOTING

The following situations do not indicate malfunctions of the product. Check the following before contacting us.

rouble	Check item
lo LED lighting up.	Power supply cable may be disconnected.
	→Check if power supply cable is broken or disconnected.
	<ul> <li>→Check if power supply cable is broken or disconnected.</li> <li>→Check if positive and negative poles are properly connected.</li> </ul>

 $\ensuremath{\mathbb{X}}$  If the problems still cannot be solved, contact our technical department for assistance.