

**S24**  
**User Guide**

## Contents

<u>I. CAUTIONS ON MOBILE PHONE USE</u> .....	4
<u>1.1 INTERFERENCE</u> .....	4
<u>1.2 REASONABLE USE</u> .....	4
<u>1.3 QUALIFIED MAINTENANCE SERVICE</u> .....	4
<u>1.4 WATER-RESISTANCE</u> .....	4
<u>1.5 EMERGENCY CALLS</u> .....	4
<u>2 PRECAUTIONS FOR USE OF BATTERY</u> .....	4
<u>3 CAUTIONS FOR CHILDREN</u> .....	5
<u>II. KEYS AND PARTS</u> .....	<u>5</u>
<u>III. START TO USE</u> .....	7
<u>3.1 TO INSERT SIM CARD(S)</u> .....	7
<u>3.2 CHARGE THE BATTERY</u> .....	9
<u>IV. BASIC FUNCTIONS</u> .....	10
<u>1. LOCK AND UNLOCK THE SCREEN</u> .....	10
<u>2. MAKE IT YOURS</u> .....	11
<u>3. SWITCH TO RECENTLY USED APPLICATION</u> .....	16
<u>4. MAKE A CALL</u> .....	17
<u>5. CALL LOG</u> .....	19

<u>6. ANSWERING PHONE CALLS AND REJECTION</u> .....	20
<u>7. ADD A CONTACT</u> .....	21
<u>8. SEND AND RECEIVE MESSAGE(S)</u> .....	22
<u>9. BROWSER THE WEB</u> .....	24
<u>10. DOWNLOAD APPLICATIONS FROM GOOGLE PLAY STORE</u> .....	24
<u>11. MANAGE APPLICATIONS</u> .....	26
<u>12. APPLICATIONS &amp; UTILITIES</u> .....	27
<u>13. SETTINGS</u> .....	27

## **I. Cautions on mobile phone use**

### **1.1 Interference**

All phones may be interfered with, which affects phone calls.

### **1.2 Reasonable use**

Use only in the normal position. Do not touch the antenna area unnecessarily.

### **1.3 Qualified maintenance service**

Only qualified personnel may install or repair this product.

### **1.4 Water-resistance**

Your device is non-water-resistant. Keep it dry.

### **1.5 Emergency calls**

Ensure the phone is switched on and in service. Enter the emergency number and press the Dialer icon.

## **2 Precautions for the use of battery**

 
**2.1** Do not dispose of batteries near or in a fire to avoid dangers.

**2.2** Do not dispose of batteries in the garbage. Dispose of batteries to the assigned battery recycling center.

### **3 Cautions for children**

Keep your device out of the reach of children in case of accidental injury caused by incorrect use of the device as a toy.

## II. Keys and parts

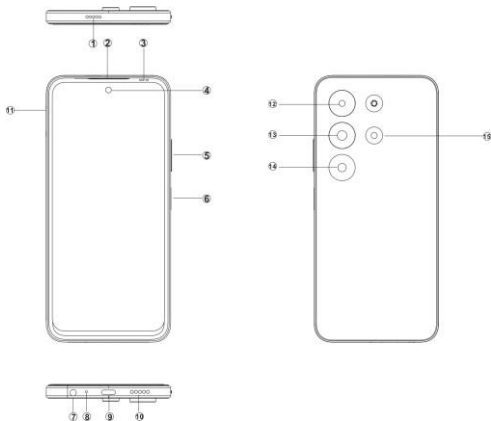

- 1. Speaker
- 2. Receiver
- 3. Light sensor / Proximity sensor
- 4. Front Camera
- 5. Volume Key
- 6. Power Key/Fingerprint
- 7. Earphone Jack
- 8. Mic
- 9. Type C connector
- 10. Speaker
- 11. SIM Card Tray
- 12. 2M Rear Camera
- 13. 50M Rear Camera
- 14. Flashlight
- 15. QVGA



### **III. Start to use**
  
#### **3.1 To insert SIM card(S):**

Insert the SIM card correctly in the card slot(s) (See figure below), suggest switching off the phone when you insert the SIM card.

Insert the Micro SD card into the slot with the correct direction (See figure below), suggest switching off the phone when you insert Micro SD.

Note: Use only compatible memory cards with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

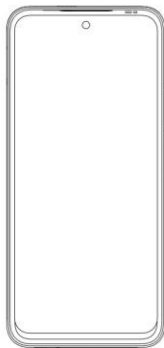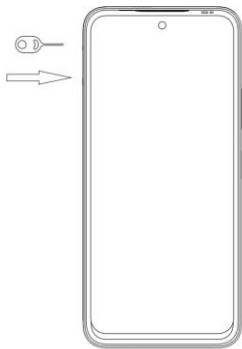



### 3.2 Charge the battery

During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overused when the battery is low, the charging icon might take some time to appear.

When the battery indicator on the screen displays 'Battery is full', the thunder icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will display ' Battery is full '. The battery, device, and charger will get hot during charging. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging.

**Cautions:** Charge the phone in a well-ventilated place in which the temperature is between - 10°C to +55°C. Use the charger provided by the manufacturer only. The use of unconfirmed chargers may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

## **IV. Basic functions**

### **1. Lock and unlock the screen**

Press the power button to enter Sleep mode and meanwhile, the screen will be locked; press the power button again to wake up and then swipe up for unlock.



## 2. Make it yours

2.1 Home screen: It is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features. Long press the home screen and Modify the Wallpaper.



2.2 Long press Home screen, and then you can Modify Wallpaper; or enter Launcher and long press and hold an application till the screen vibrates, and then loosen your hold finger.



Long press the widget or icon, and after the phone vibrates, select delete or uninstall (select delete for widget, select uninstall for APP)



Swipe up and enter to application list.



 
**2.3 Notification Bar:** At the top of the screen, the Status Bar displays the time, status, and notifications. If there is a new message, missed call, or something in the notification bar, you can drag it down to open the notification panel and click the desired one to have a view. When you finish, you can close it by dragging the panel up or pressing "Back".



#### **2.4 Android™ and computer connection**

If you connect your phone to your PC via USB, you can find the USB options, choose This

Device - file Transfer option, and you can see your phone memory on your PC, this is the same function as USB storage.

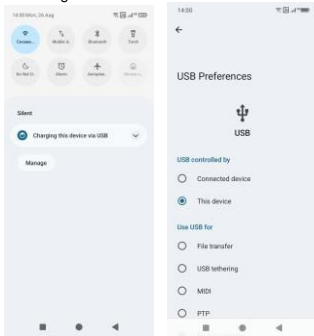

### 3. Switch to a Recently Used Application


Press the menu key.





Touch and slide this place can choose to open the history application

#### 4. Make a call

Click  and enter a complete phone number to make a call. Your phone supports smart search.



Swipe to the right to view Call history and Contacts.

## 5. Call log

 


Press the number if you want to see the details , send message or call back, there are three options for you.


Press the number, you can view the contact details, send a message, or call back.


## 6. Answering phone calls and rejection


When there is an incoming call, you can drag the icon up or down to answer or hang up it directly.

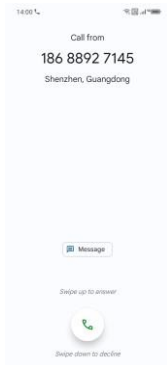

## 7. Add a contact

Touch  to enter contact

 Touch  to add a new contact

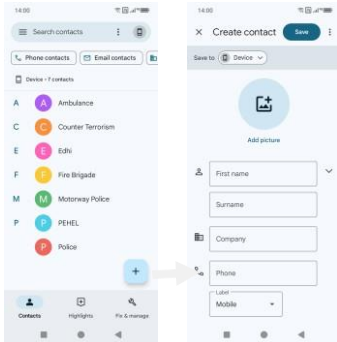

Click here to add a new contact and on this page press the menu key to enter menu view, setting, etc.

## 8. Send and Receive message(s)

Touch  enter to messaging, and touch "Start chat".



 
Tap this icon to select desired contact from phone book.

Touch to switch the digital input and symbols

Press space or a punctuation mark to enter the highlighted suggestion

When you are composing a new text message, you can select text for cutting or copying. The selected text is highlighted in blue.

Tap  to add "Attach" including Pictures, Videos, Audio, etc to send MMS.SMS

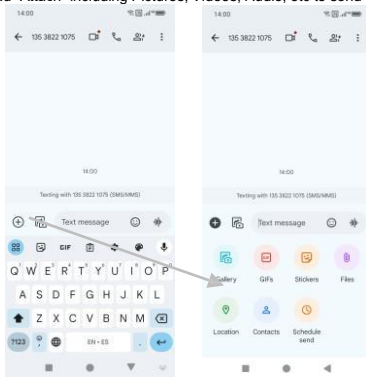

When a new message comes, you can read it by dragging the notification panel and clicking the message or entering Message to read it directly.  
Long press one of the all-message threads, and you can delete it".

## **9. Browser the Web**

### **9.1 Set up Internet/Data connection**

Enter Settings > More..., scroll down to find out Mobile network, and then enter "Access Points Names, choose the desired WAP account.

### **9.2 Switch on Data connection or Wi-Fi**

 
 
To browse the web, you need to switch on the Data connection. If there is Wi-Fi around, you can switch on Wi-Fi to use it to browse the web.

## **10. Download applications from the Google Play Store**

### **10.1 Add Google account**



### **10.2 Enter Google Play Store and download apps**



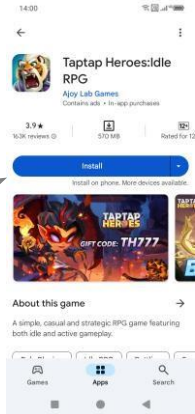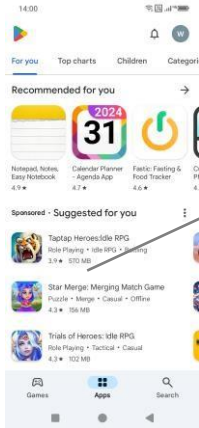

## 11. Manage Applications

  Enter Settings > Apps.  
You can see the app info.

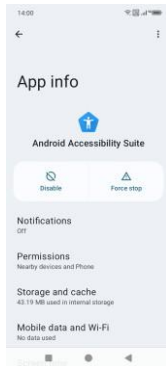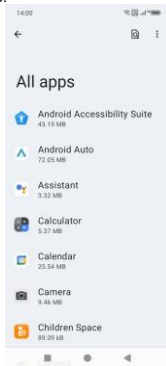

## 12. APPLICATIONS & UTILITIES

For your entertainment purposes, applications and utilities, such as Gmail, Email, and Google Play Store. Before accessing the applications, please turn on the data connection or connect to Wi-Fi.

### 13. Settings

#### 13.1 Wi-Fi

 
Open Wi-Fi, search for nearby Wi-Fi, and connect it, then you can use the Internet or download apps for free.



## 13.2 Bluetooth

Settings> Connected devices> Pair new device> **Bluetooth**


Open Bluetooth, and connect to another phone, you can share something like music, photos, movies, etc. with other people.

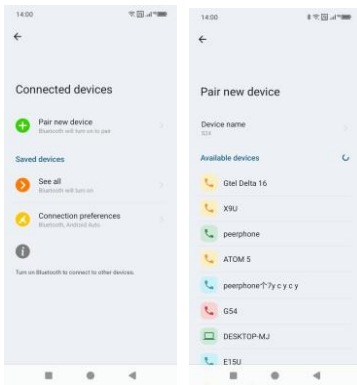

### 13.3 Security

Click Settings – **Security** – Screen lock

 There are four screen lock ways for you to choose: Swipe, Pattern, PIN, and Password.

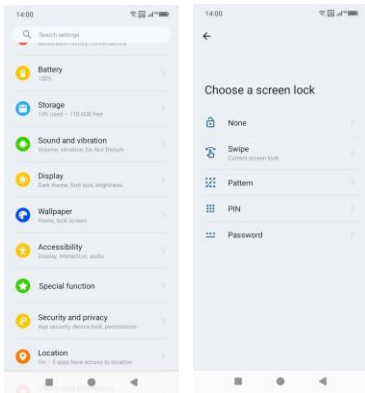

### 13.4 Face ID

 
 
Click Settings – **Security** – Face Unlock, and follow the prompts, after completing the face recording, you can use the face unlock function.



### 13.5 Fingerprint

Click Settings – **Security** – Face Fingerprint Unlock - fingerprint, and follow the prompts, after

completing the fingerprint recording, you can use the fingerprint unlock function.

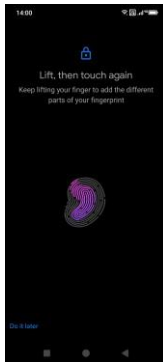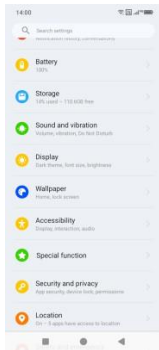



## **V. Technical Information**

Model: S24

Networks:

GSM: 2/3/5/8

WCDMA: 1/2/5/8

FDD: 1/2/3/5/7/8/20/28AB

TDD: 38/40/41

Android is a trademark of Google LLC.

