


LED Shop Light User Manual

READ ALL WARNINGS AND INSTRUCTIONS BEFORE INSTALLING THE LED SHOPLIGHT TO ENSURE SAFETY AND PROPER OPERATION. KEEP THIS MANUAL GUIDE FOR FUTURE REFERENCE.

01 / PACKAGE CONTENT

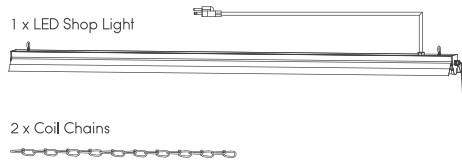


02 / WARNING

- Please SHUT OFF POWER before installing or servicing this fixture
- If you are not familiar with state and local electrical codes, we recommend you to consult with a qualified electrician.
- Do not use in wet locations, use indoors only.
- Non-replaceable LEDs.
- Avoid looking directly into the light source for prolonged periods to avoid eye damage.
- Not to be used with a dimming circuit or any other electronically controlled switch.
- To prevent product damage or abrasion, do not expose product to edges of sheet metal or other sharp objects.
- Use only insulated staples or plastic ties to secure the cord.
- Do not install or operate this product close to any source of heat combustibles and flammable materials.
- Installation should not be made on a radiant-heating ceiling.

03 / INSTALLATION


Unpacking check: Please check and make sure there is no sign of physical damage or missing accessories to the product when unpacking. Do not install damaged product.

1. Select suitable location that can support weight of the fixture and has an outlet on the ceiling to ensure proper hangings. Determine mounting method before drilling. Mark two spots 32.75inch apart on the ceiling for mounting hooks (not included).

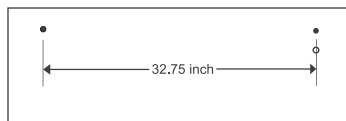


2. For Mounting to Drywall:

Drill 1/4in. holes into the ceiling to clear the closed flaps of the toggle bolt. Make sure to fasten the toggle bolt into the butterfly nut before inserting the flaps into the ceiling with the toggle bolt protruding through the ceiling. Lock the assembly by screwing the hook into the ceiling.

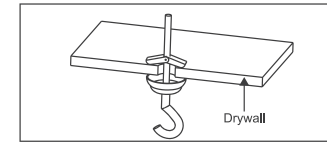


For Mounting to Wood:


Drill 1/16in. diameter pilot hole in the ceiling. Make sure to fasten the combo wood-machine end into the metal hook. Screw into ceiling to lock and tighten.

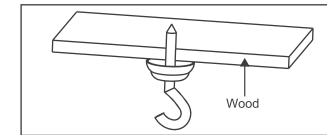


3. Install coil chain onto eye hook at both sides of the fixture.

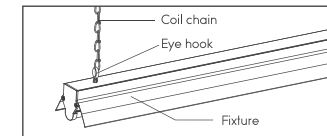

4. Hang the fixture by installing coil chain onto the hook that has been previously installed in the ceiling. You may need to slightly adjust the coil chains to ensure the fixture to hang level. Fixture must hang at least 7,5cm (3inch) from ceiling.

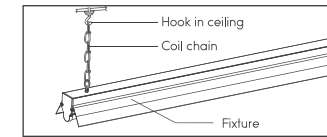

5. Insert power cord into ceiling triplex receptacle. Lengthen the on/off pull cord switch if necessary.

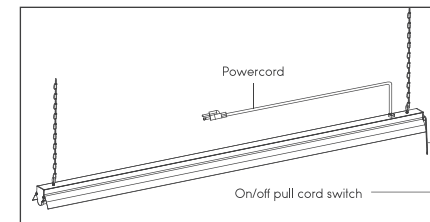

04 / CLEANING AND CARE

To clean, wipe fixture with soft cloth. Clean glass with mild soap. Spray with chemical cleaners can discolor the finish of fixture. Do not use scouring pads, powders, steel wool or abrasive paper to clean this fixture.