

22W Up Down Wall Light

User Manual

01 / WARNING

IMPORTANT: Read ALL instructions in order to ensure safety and proper installation.

DO NOT operate this product under any conditions other than those specified for it. Failure to observe these precautions can lead to electrical shock, product failure, or other problems.

WARNING: TURN OFF THE POWER from electrical panel before installation or maintenance.

02 / PACKAGE CONTENT

22W up down wall lights × 2

Mounting brackets × 2

Long screws × 4


Black screws × 4

Wire nuts × 6


03 / INSTALLATION

1. TURN OFF THE POWER, then unscrew the mounting bracket.


2. Pull the supply wires out from the junction box. Attach the mounting bracket to the junction box using the long screws.

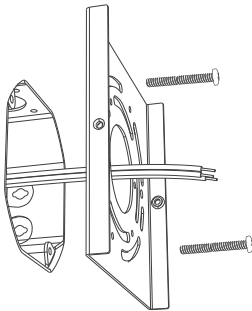

3. Using the wire nuts, connect the wires. Connect the black fixture wire to the black supply wire, the white fixture wire to the white supply wire, and the green wire to the ground wire. Carefully tuck all the wires back into the junction box.

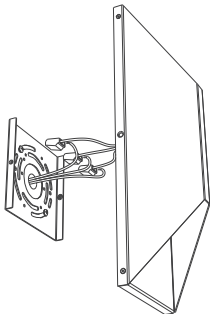

4. Hang the fixture on the mounting bracket. Using one hand hold the fixture and use the other hand to tighten the black screws on both sides of the fixture. The installation is now complete. Turn the power back on.

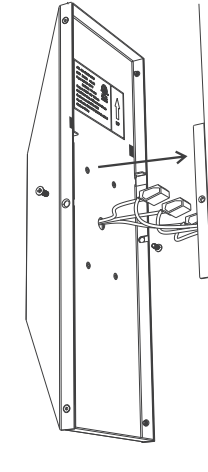

04 / SPECIFICATIONS

22W Up Down Wall Light	
Power	22W
Working temperature	-4°F-104°F
Luminous flux	1600lm
Voltage	100-277V
CRI	>90
Color temperature	3000K Warm White

05 / CARE AND MAINTENANCE

1. DO NOT modify this fixture. ANY modifications may render this product unsafe and void the warranty.
2. This product is rated for outdoor use.

06 / COMPATIBLE DIMMER LIST

LUTRON: CTCL-153P, DVCL-153P, DVWCL-153P, S-600P, SLV-600P, SCL-153P

07 / WARRANTY

LEONLITE warrants that this product is free from defects in materials and workmanship for a period of 5 years from the day of purchase. If the product has been misused, damaged by accident or in any other way of improper use, this warranty becomes void.

LeonLite