

6 inch LED Recessed Slim Panel Light

User Manual

01 / CAUTIONS

Before assembling your lighting fixture, please read the following notes in this manual and heed all warnings. Please keep this for future reference.

- All electrical connections must be in accordance with local code and ordinances. Consult a qualified licensed electrician for installation.
- Before starting the installation, disconnect electricity at the circuit breaker or the fuse box. Disconnecting power by using the wall switch is not sufficient to prevent electrical shock.
- For use with 6" Recessed Slim LED Panel Light.
- This device may not be compatible with all dimmers.
- Suitable for damp locations but not for wet locations or where directly exposed to water.
- Indoor use only.

02 / DESCRIPTIONS


Welcome to buy our Recessed Slim LED Panel Light. It comes with an external driver in a junction box. This allows for standard 100-130VAC ceiling wiring and pre-drywall installation of the driver. It is a very cost effective ceiling light, which is perfect for residential and commercial new construction and renovations.

03 / FEATURES


- Air tight - Reducing both heat and cooling cost
- Fast & Easy to install - Saving labor cost
- Isolated External Driver Inside Junction Box - No housing required
- Dimmable, damp location approved
- ETL & Energy Star Listed, 2700K/3000K/4000K/5000K available

04 / TECHNICAL PARAMETERS

6 inch LED Recessed Slim Panel Light				
Voltage	AC 100 - 130V			
Wattage	12W			
Working Temperature	4°F - 104°F			
Material	Aluminum			
Color Temperature	2700K Soft White	3000K Warm White	4000K Cool White	5000K Daylight
Lumens	850lm			
Dimming Range	5% - 100%			
CRI	80+			
Product Dimensions	6.8(D) × 0.5(H)inch			
Beam Angle	110°			
Lifespan	36,000hrs			
Cutout Size	ø6.22inch			

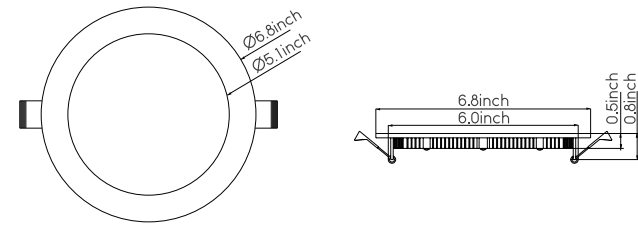

05 / INSTALLATION INSTRUCTIONS

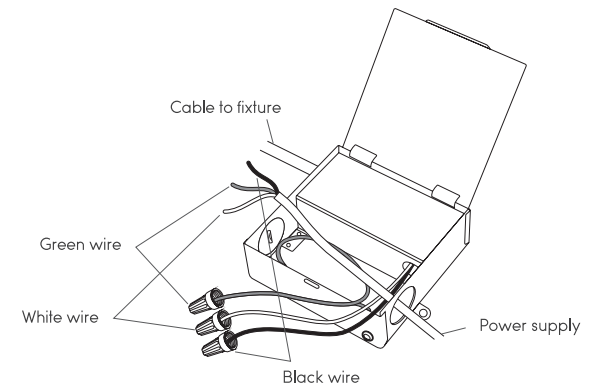

<p>LED driver N L</p>	<p>LED driver N L</p>	<p>LED driver N L</p>
<p>1. Use wire nuts to connect the fixture wires with corresponding house supply wires, then connect the hermaphrodite connectors of downlight and LED driver.</p>	<p>2. Squeeze the snap springs and put downlight into the ceiling.</p>	<p>3. The installation is complete.</p>

According to the three steps as showing in above pictures, please refer to the above specification list for cutout size. Please make sure the correct cutoff size in order to make the light fit well with the ceiling and have no risk of falling off.

06 / WARRANTY

TORCHSTAR warrants that this product is free from defects in materials and workmanship for a period of 5 years from the day of purchase. If the product has been misused, damaged by accident or in any other way of improper use, this warranty becomes void.

07 / MANUFACTURER CONTACT INFO

Website: www.torchstar.us
 E-mail Address: info@torchstar.us
 Phone Number: 800-990-7688

TORCHSTAR