40 LEDs Solar Wall Lamp

User Manual

O1/WARNING


- 1. Keep this fixture away from fires.
- 2. PLEASE keep the solar panel facing upwards, DO NOT install it upside down,
- 3. DO NOT immerse this fixture in water,
- 4. PLEASE tear off the film on the solar panel before using.

02 / PACKAGE CONTENT

40 LEDs solar wall lamp × 1


Screw × 1

Plastic anchor × 1

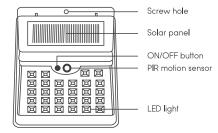

03 / INSTALLATION

1. Choose a location where the solar panel can absorb sunlight (within 9.84ft height).

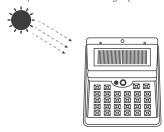

2. Using a power drill (not included), drill a small hole. Next, insert the plastic anchor into the hole. Using the screw attach the fixture to the wall.



04 / HOW TO USE

Press the ON/OFF button to switch modes. The fixture's modes can be switched in order of Mode 1, Mode 2, and Mode 3. Then press the ON/OFF again to turn off the fixture. This fixture will detect light levels and human motion automatically.

Mode 1: Human motion induction + Light control


The light turns on automatically when motion is detected at night or in dark areas. It will then turn off after no further motion is detected for 20-25 seconds.

Mode 2: Dim light + Human motion induction + Light control

The light will turn on dimly automatically at night or in a dark area. When motion is detected in a 9.84-16.40ft range, the light will turn bright for 20-25 seconds. The light will then dim automatically.

Mode 3: Light Control

The light will turn on automatically at night or in a dark area and stays off during the day or in a bright area.

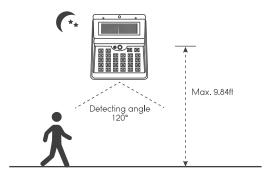

05 / SPECIFICATIONS

40 LEDs Solar Wall Lamp	
Power	2W
Voltage	3.7V
Working temperature	32°F-104°F
Luminous flux	120lm
Detecting range	9.84ff-16.40ff
Detecting angle	120°
Detecting time	20-25s
Beam angle	270°
Battery capacity	1200mAh
Battery type	Lithium battery
Battery quantity	1

06 / TROUBLESHOOTING

If the fixture does not work:

- 1. Check if the ON/OFF switch is turned on.
- 2. Check to see if the fixture has been used for a long time without charging. Charge the fixture by receiving sunlight regularly before use.
- 3. Make sure that people are moving within the detection range.
- 4. Make sure the fixture is installed within a 9.84ft height.
- 5. Make sure that the solar panel faces upwards.
- 6. Check if there are any objects blocking sunlight and that the solar panel isn't receiving sunlight.

07 / WARRANTY

TORCHSTAR warrants that this product is free from defects in materials and workmanship for a period of 12 months from the day of purchase. If the product has been misused, damaged by accident or in any other way of improper use, this warranty becomes void.

08 / MANUFACTURER CONTACT INFO

Website: www.torchstar.us E-mail Address: info@torchstar.us Phone Number: 800-990-7688