




# **ASSEMBLY INSTRUCTIONS**

[www.eurekaergonomic.com](http://www.eurekaergonomic.com)

# ZEN EXECUTIVE DESK


TRUE **ERGONOMICS**, TRUE **COMFORT**

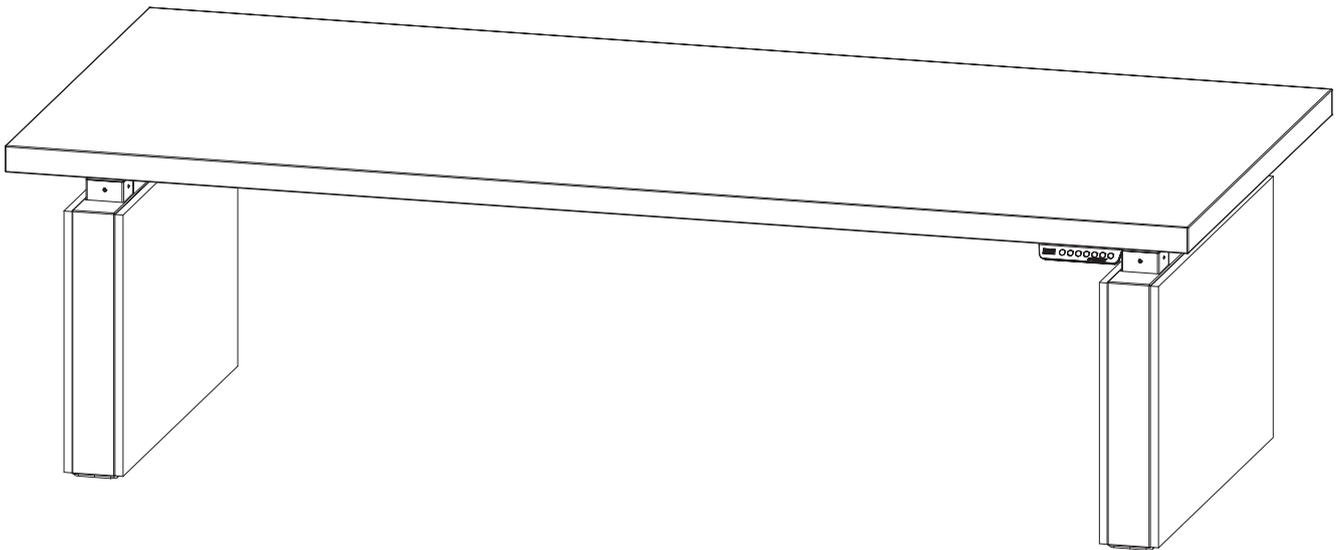

If you need to return the goods, please keep all the packaging materials and return it in the original packaging.  
Si vous devez retourner la marchandise, veuillez conserver tous les matériaux d'emballage et le retourner dans l'emballage d'origine.  
Si necesita devolver los productos, conserve todos los materiales de embalaje y devuélvalos en el embalaje original.  
如需退货请保留好所有包装材料，并按原包装包好退回。

# PRE ASSEMBLY INTRODUCTION

## 安装前说明

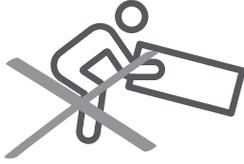

- Teamwork  
团队工作




- Suitable Location  
合适的地点



- Sufficient Space  
足够的空间



- Avoid Scratches  
避免刮花









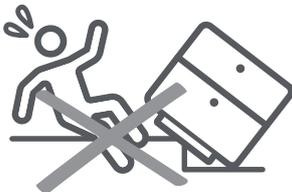


- Flat Surface  
平坦的地面

Turn clockwise to tighten the screws and only tighten when step is completed or when instructed to do so.


顺时针方向旋转拧紧螺丝，只有在完成所有步骤后或说明指示时才拧紧。

# PARTS / PIÈCES / PARTES / 部件清单

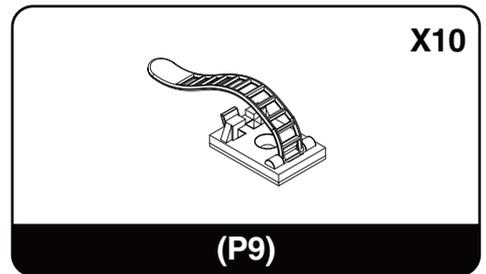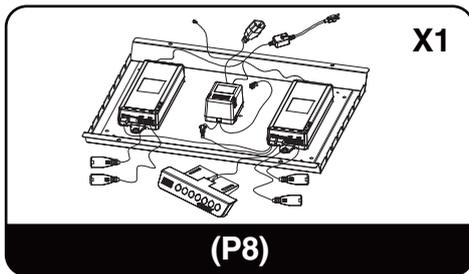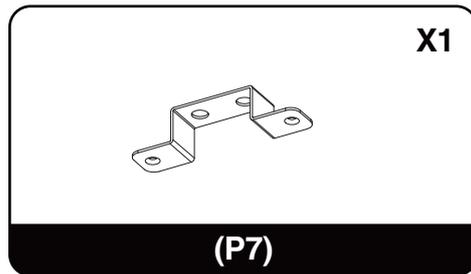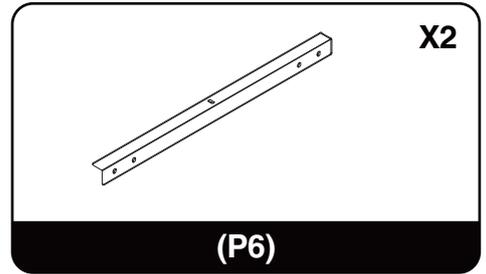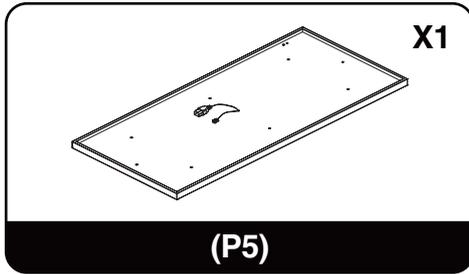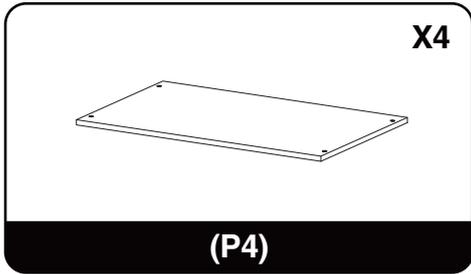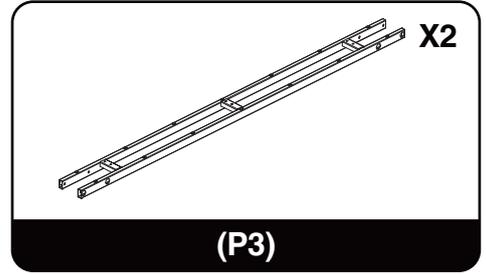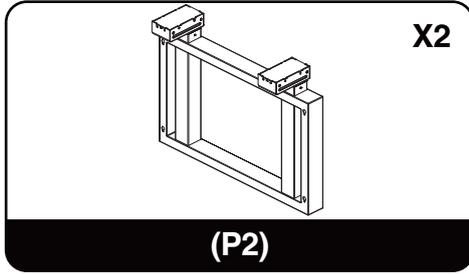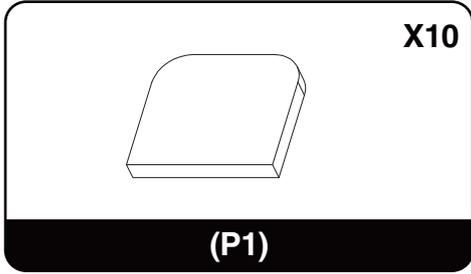


# HARDWARE / MATÉRIEL / HARDWARE / 配件清单

 M8\*15mm X24




(A)

 G1/4\*12mm X14



(B)

 M4\*10mm X2




(C)

M6\*16mm X16



(D)


X1

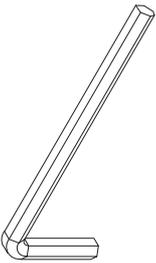

K5

(E)

X1

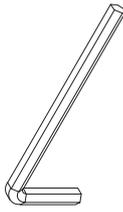

K4

(F)

X1



(G)





# ASSEMBLY INSTRUCTIONS

## 安装步骤








Do not tighten the screws until all of them are fastened into the holes.  
安装时先不要把螺丝拧紧, 等所有螺丝都拧到螺纹孔上再将全部螺丝拧紧。






## STEP 1

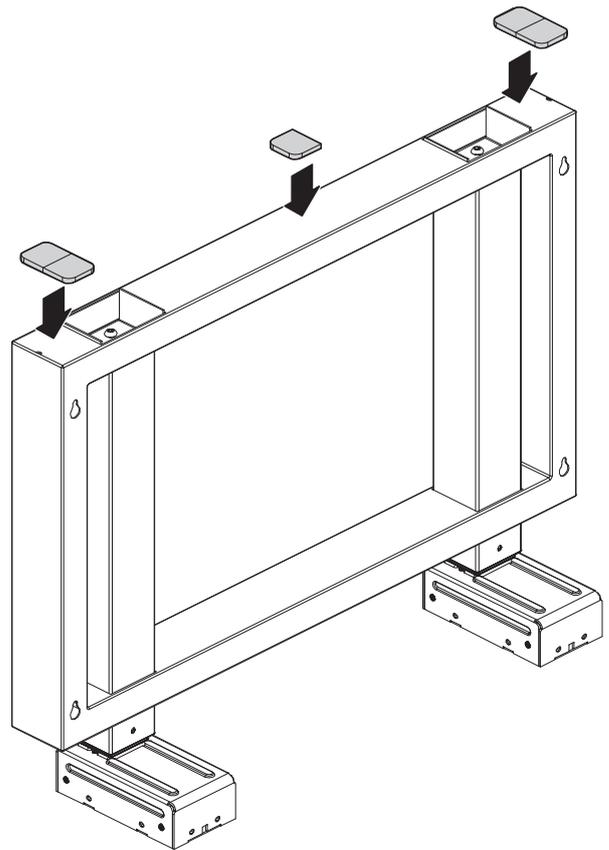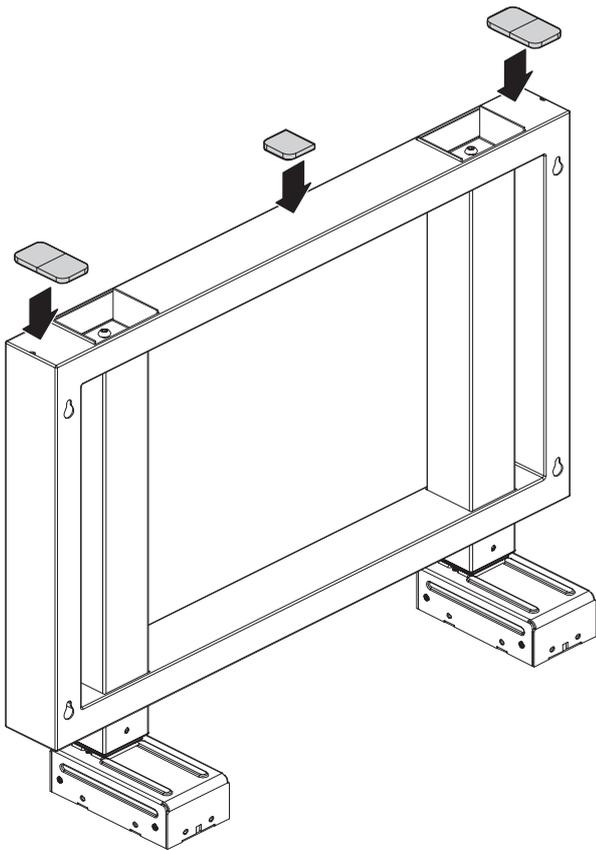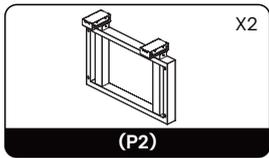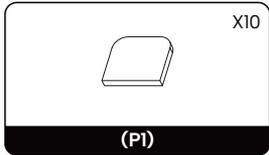





# STEP 2

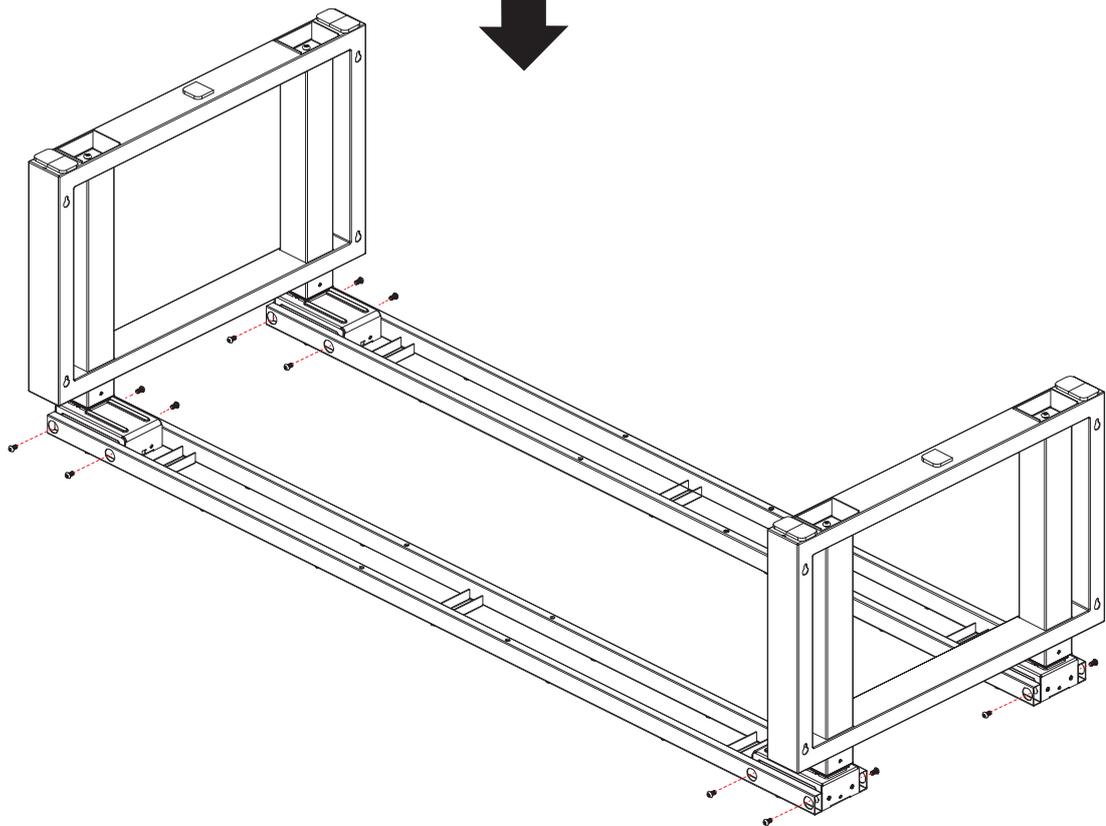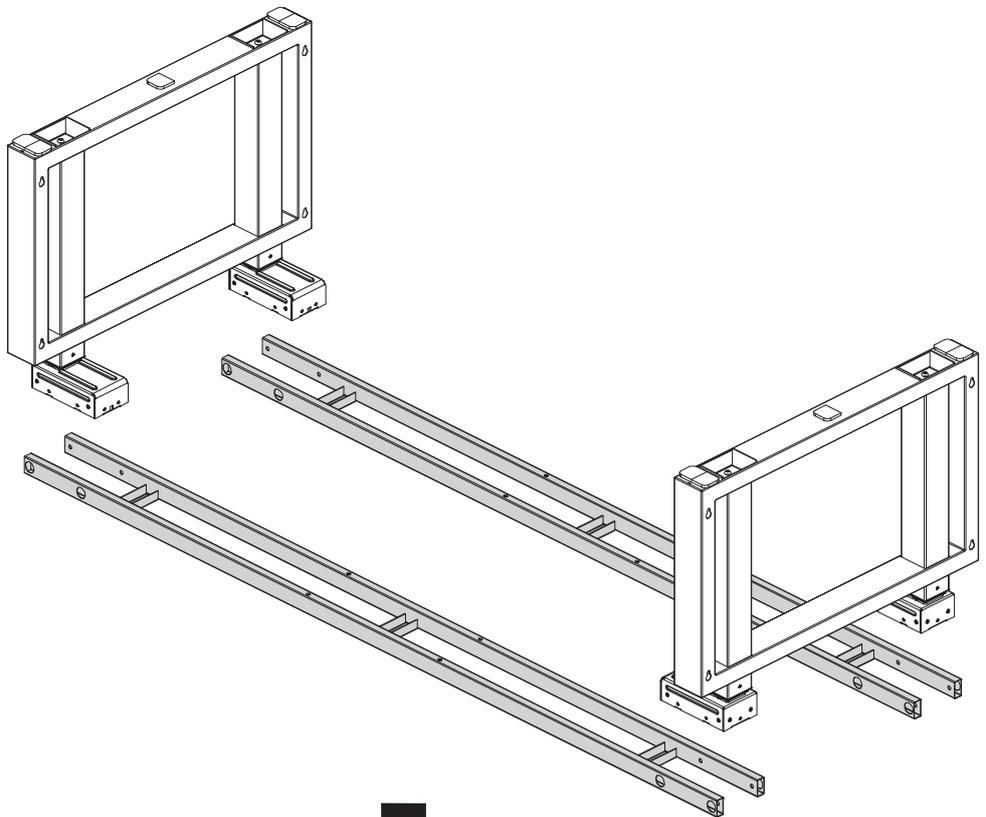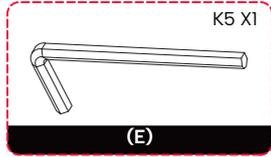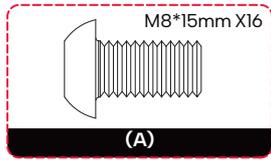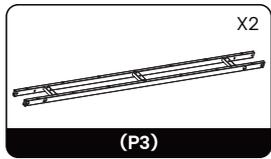



# STEP 3

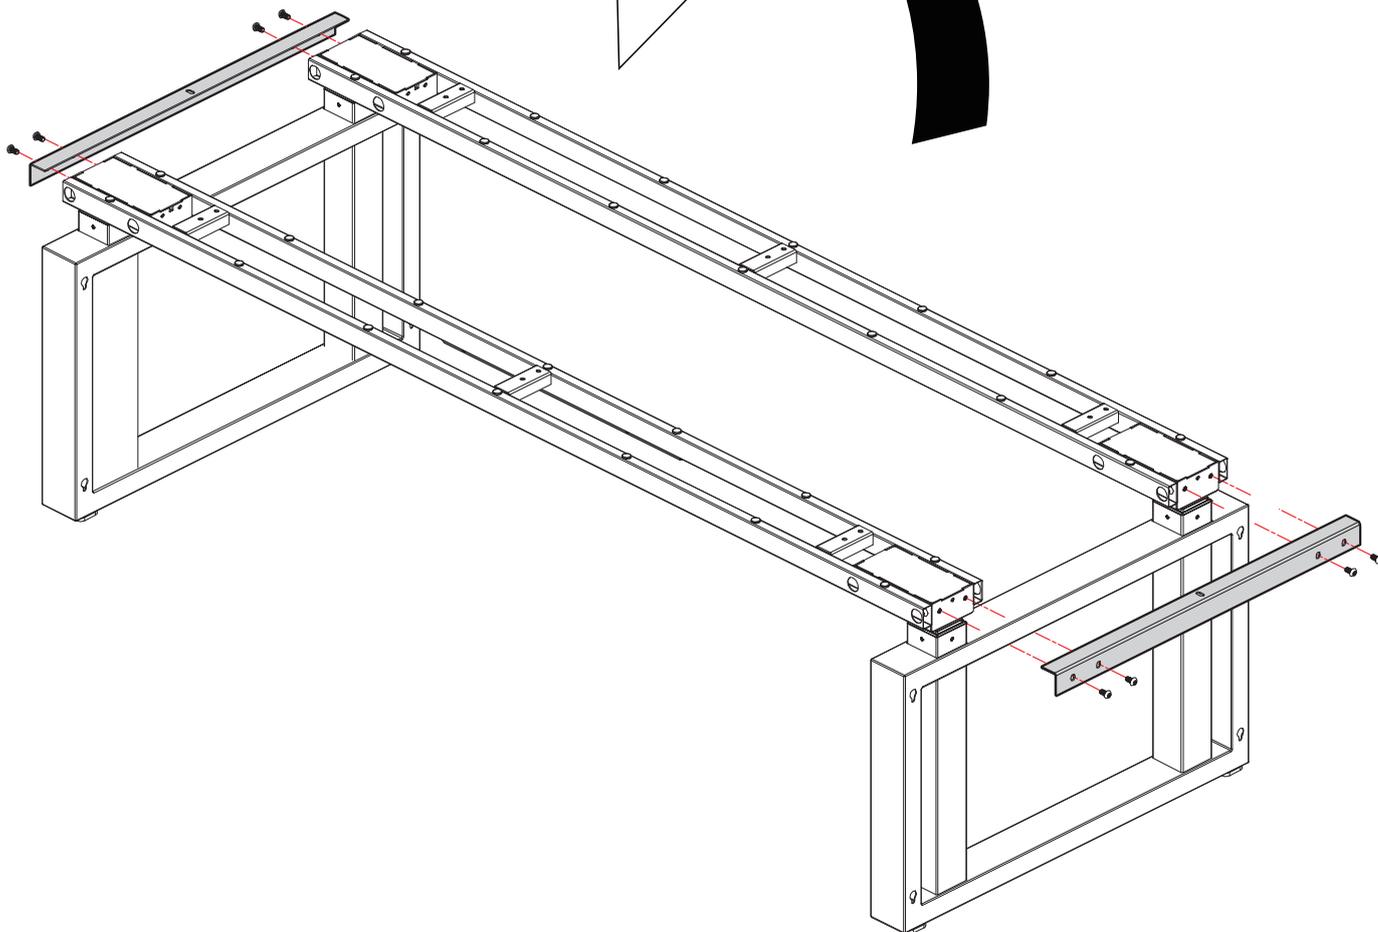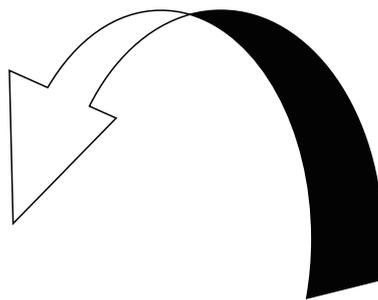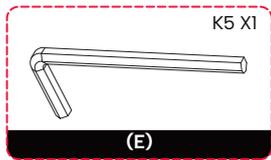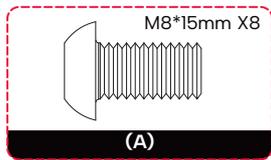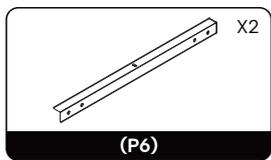




# STEP 4

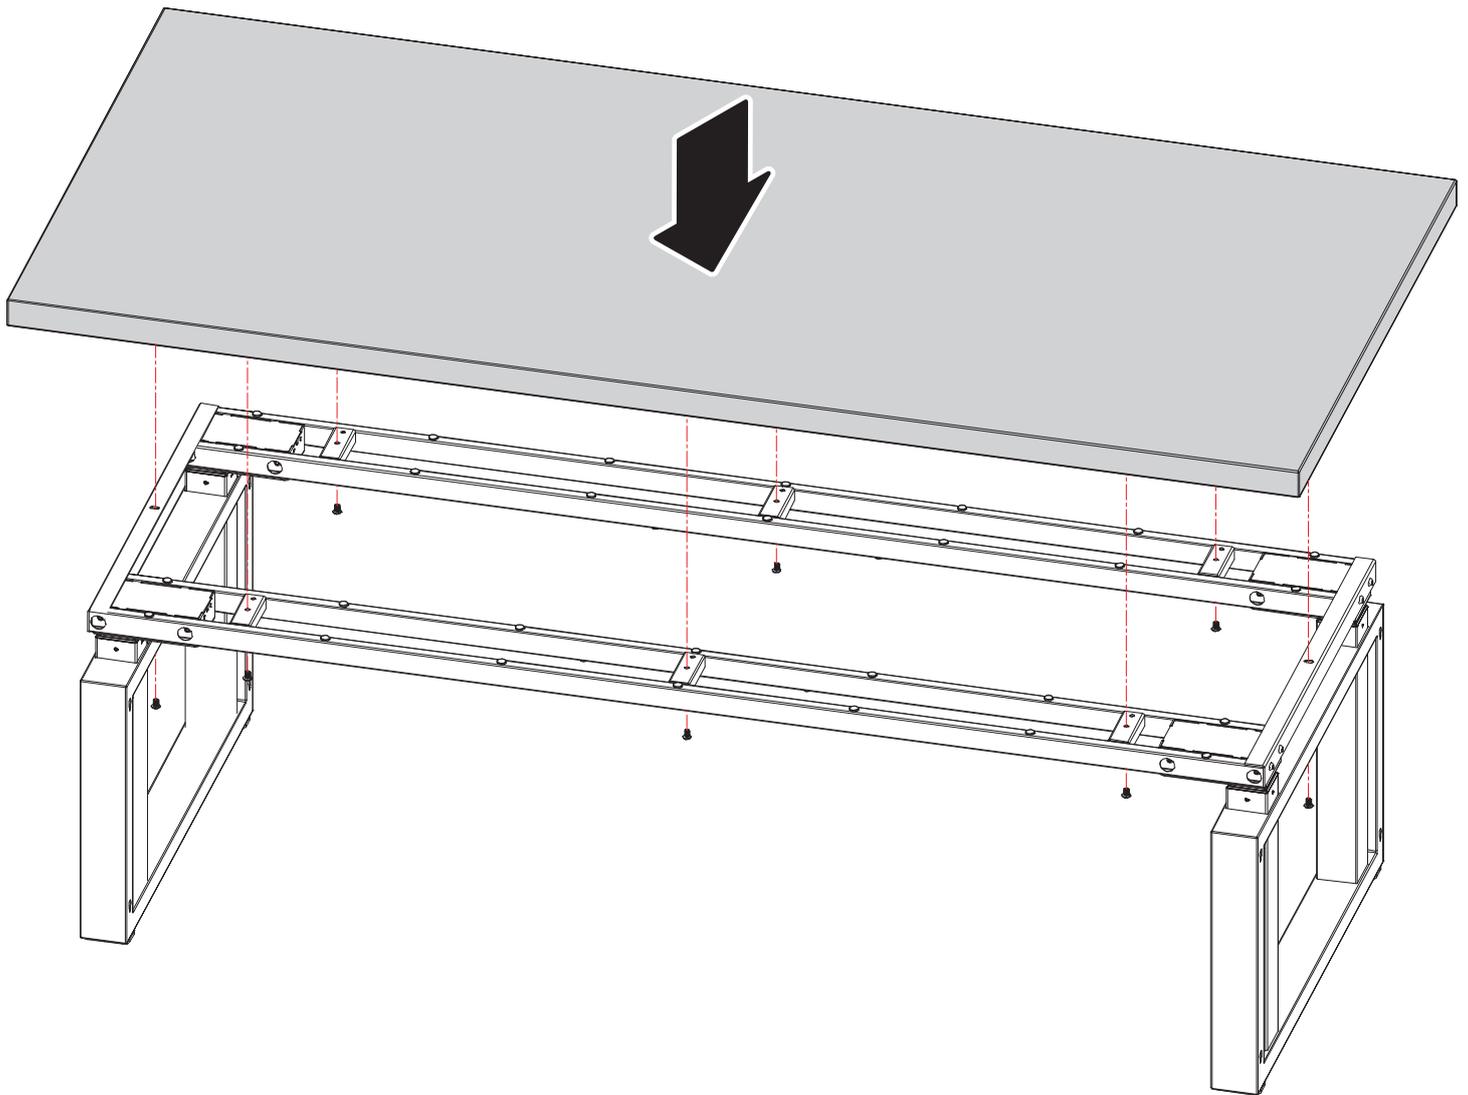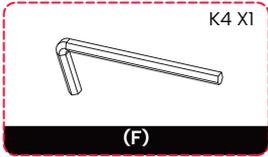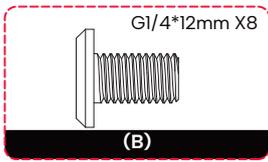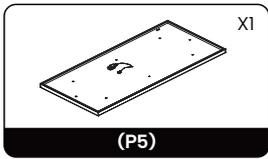





# STEP 5

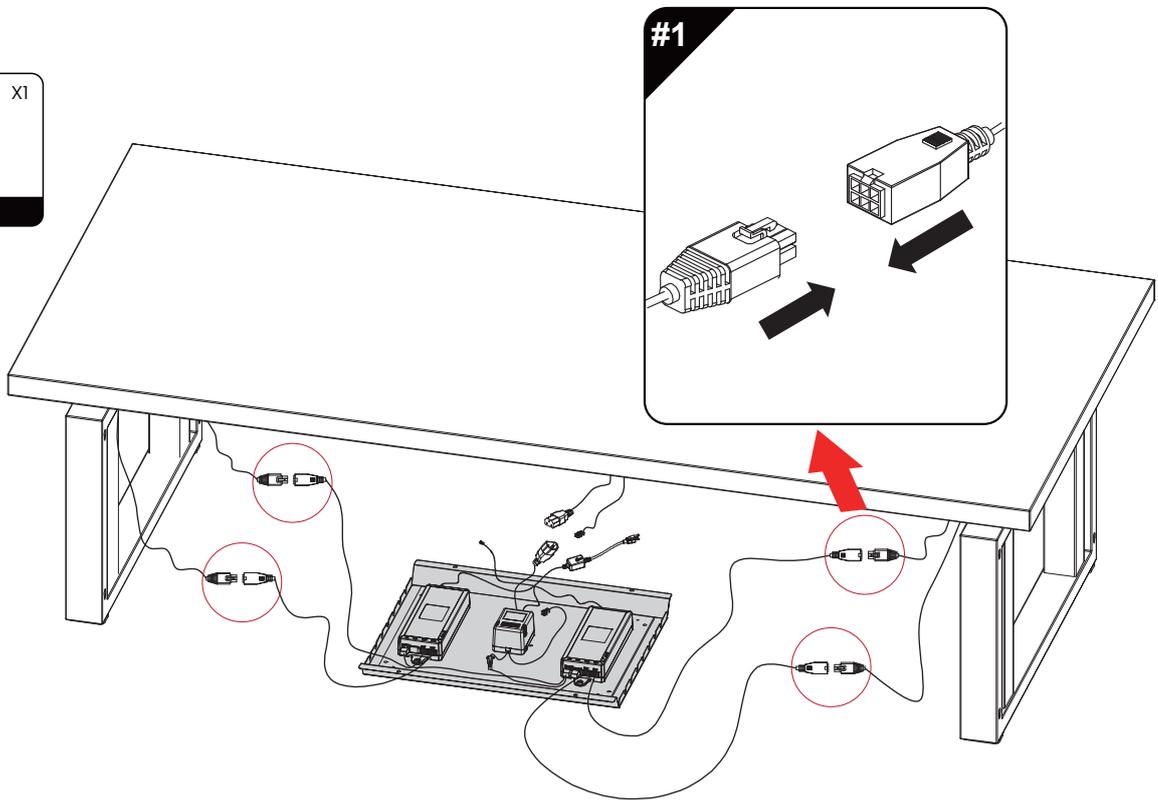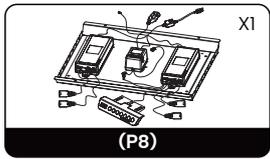

NOTE: All cables should be routed from the bottom of the top shelf to the cable tray.  
注意：所有线缆应从顶架底部布线到托线盘



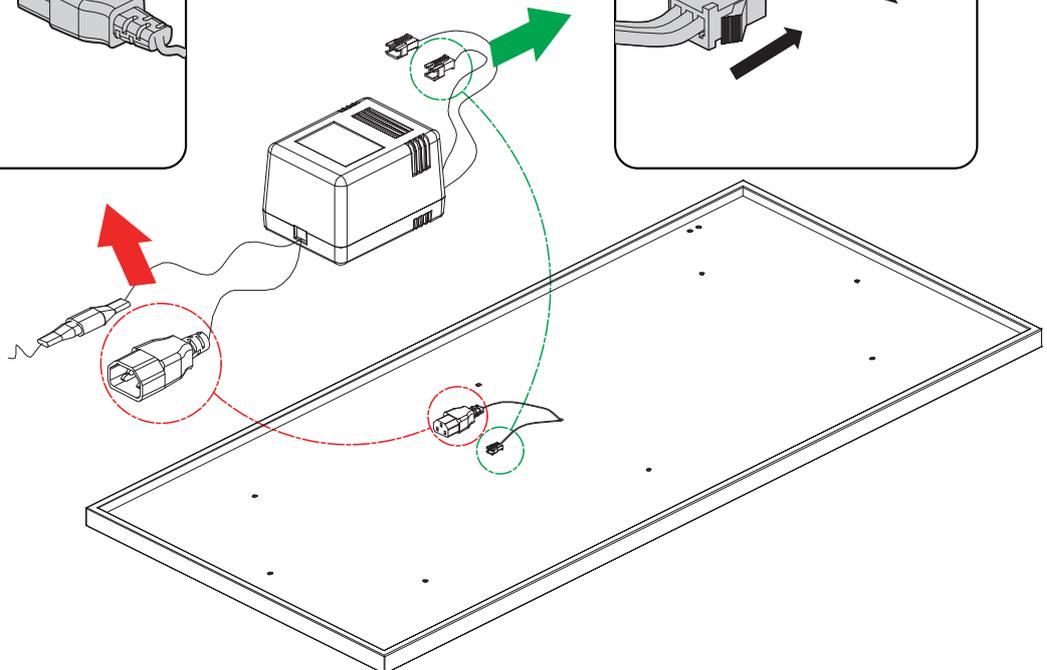
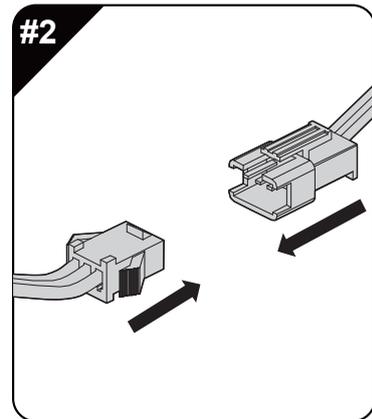
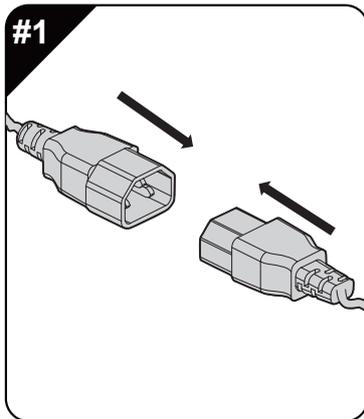


# STEP 6

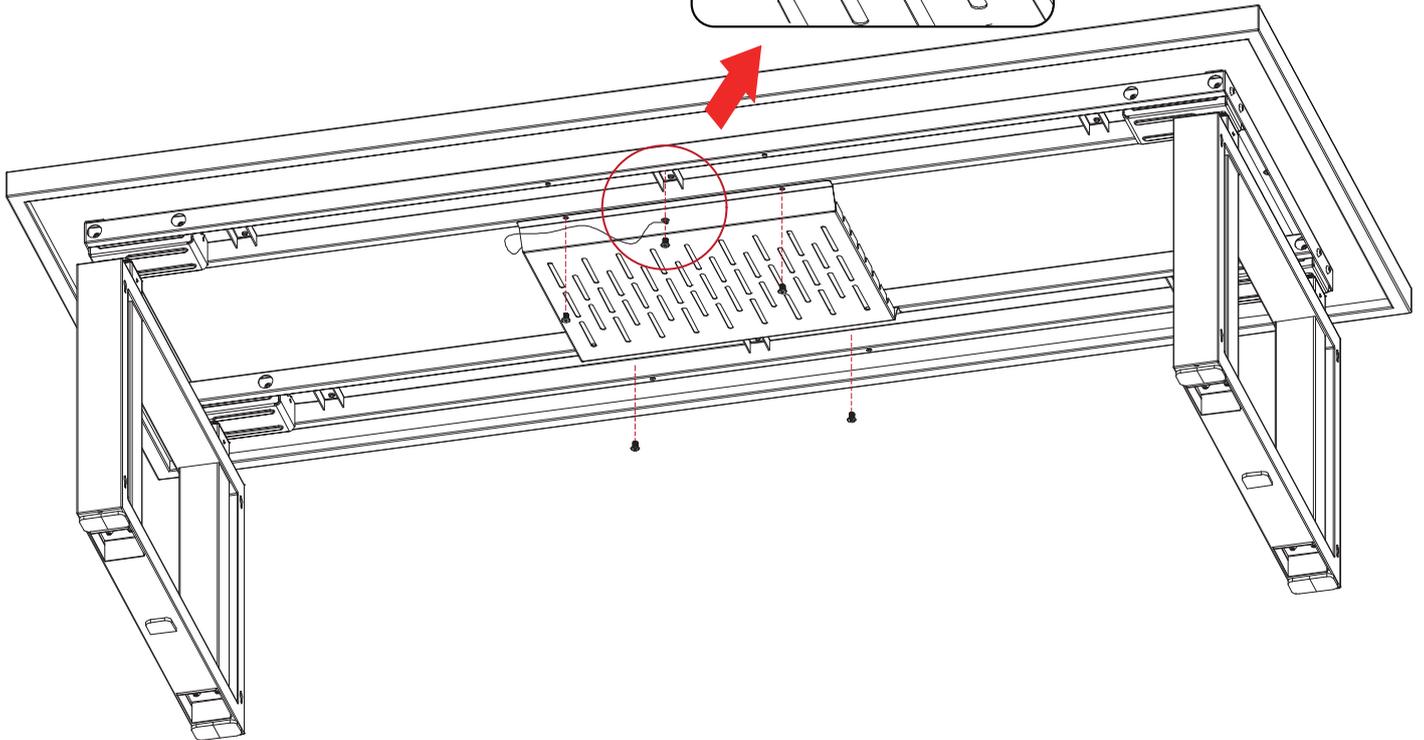
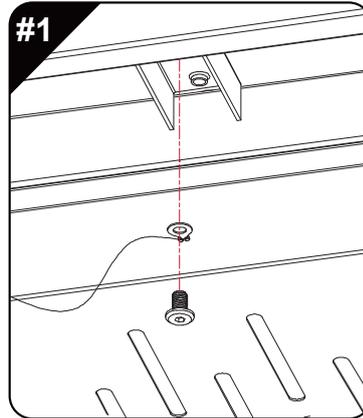
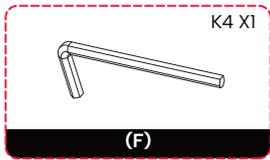
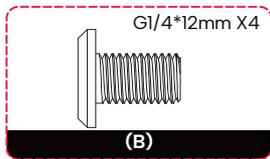


NOTE: All cables should be routed from the bottom of the top shelf to the cable tray.  
注意: 所有线缆应从顶架底部布线到托线盘

# STEP 7

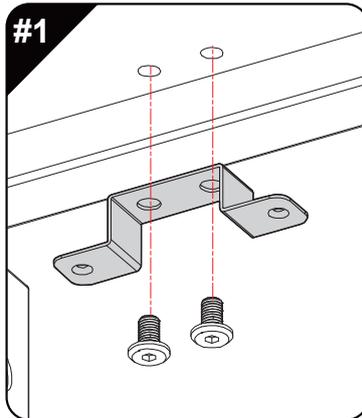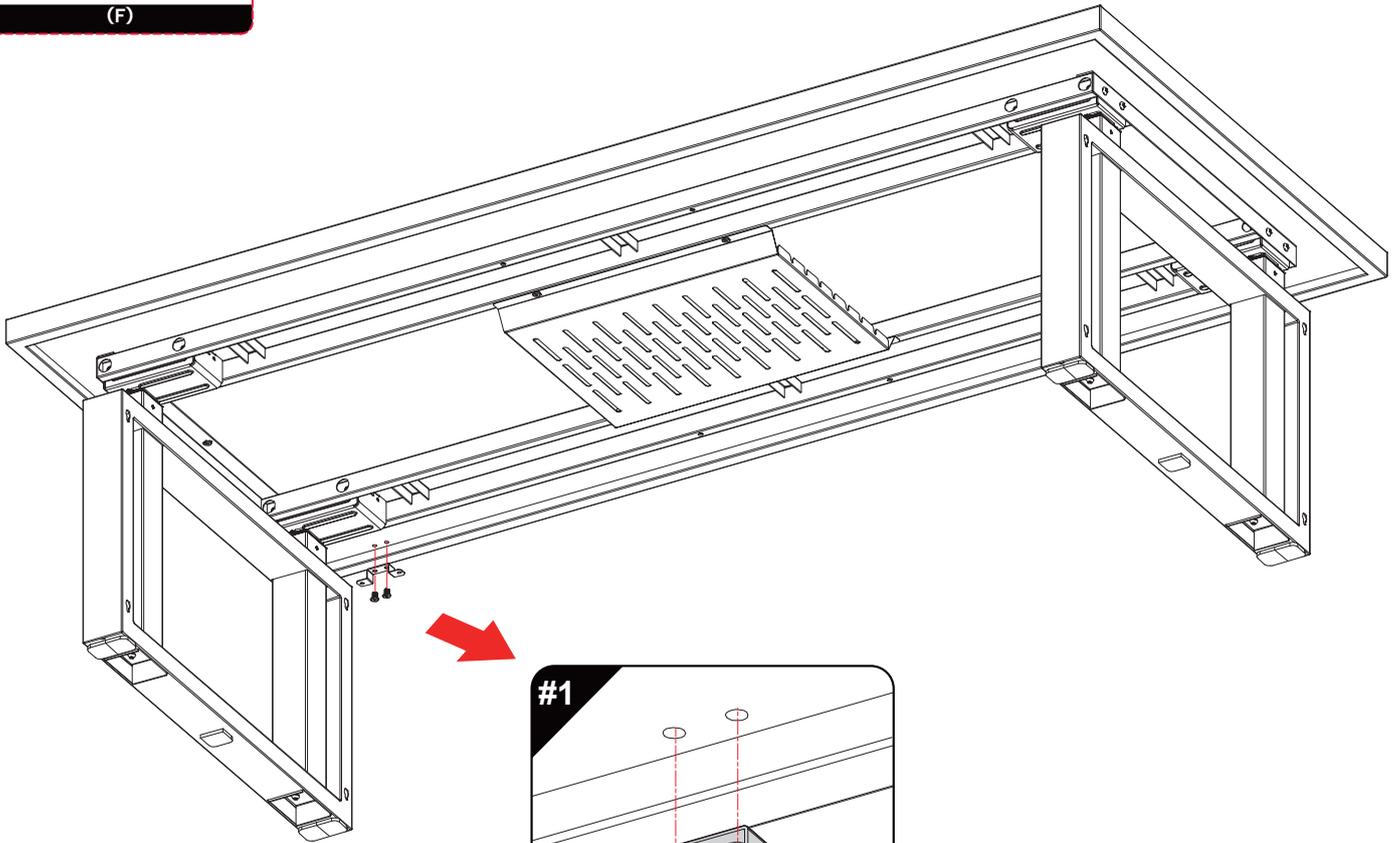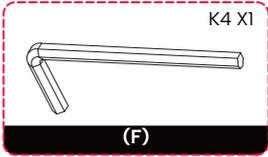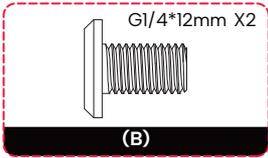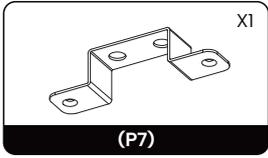





# STEP 8

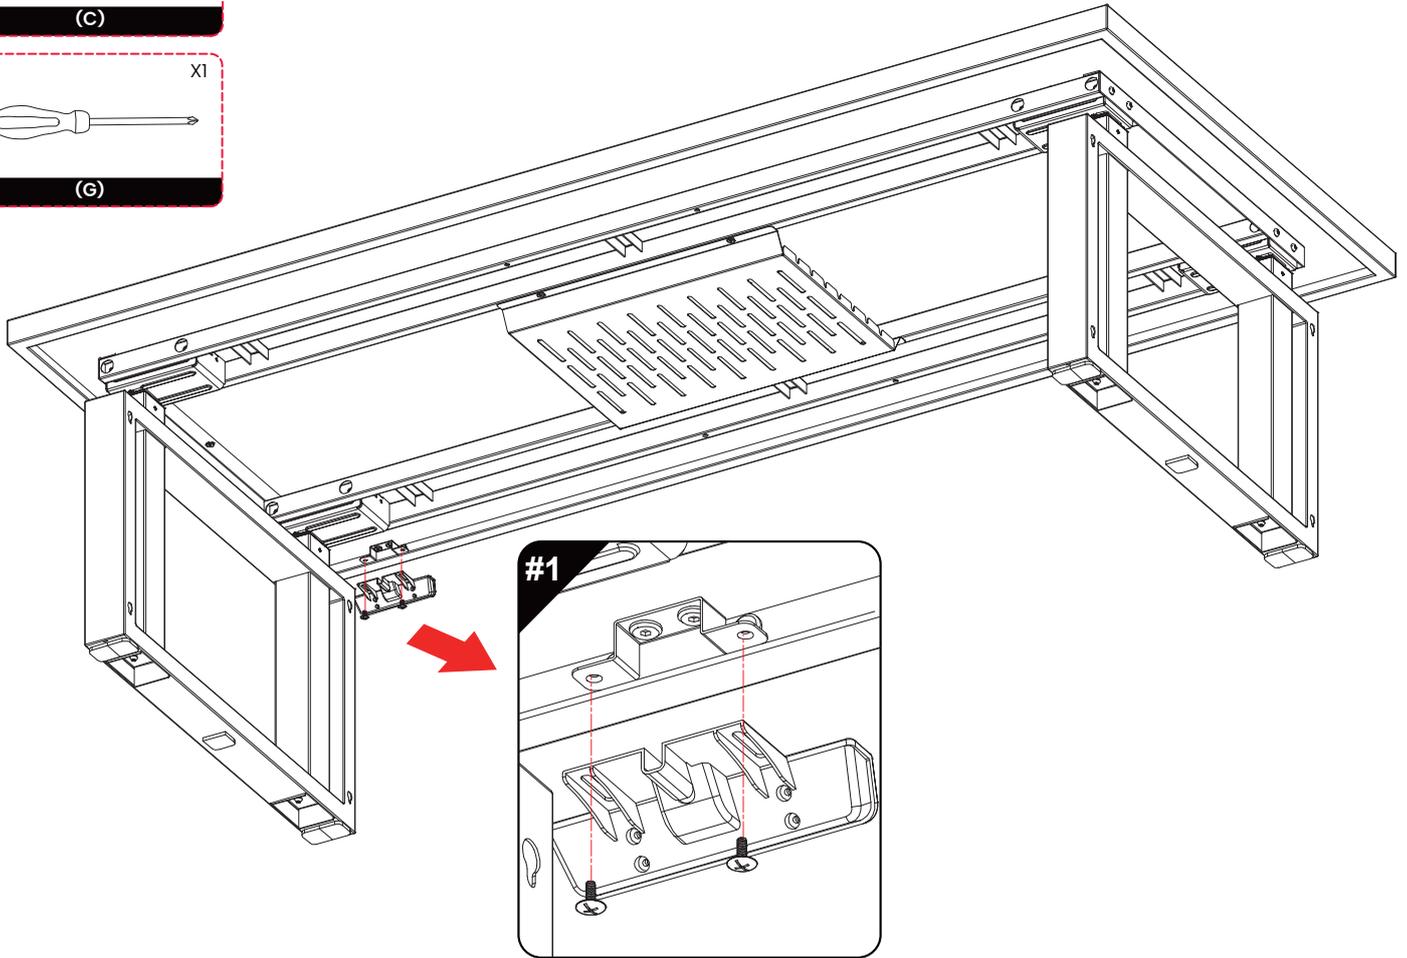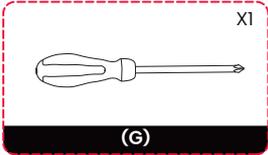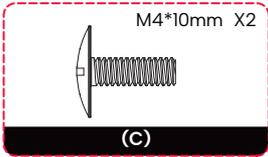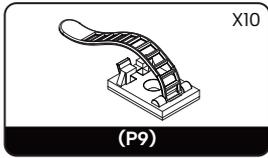


Tie the cable with the cable management buckle.  
理线扣绑扎好线缆






# STEP 9

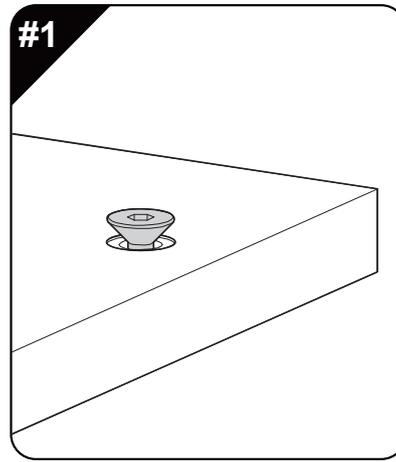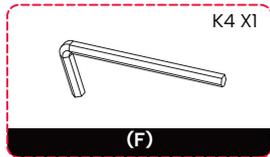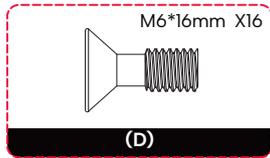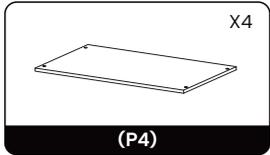

Don't screw in, leave the rod length of about 1mm.  
预留杆长1mm左右

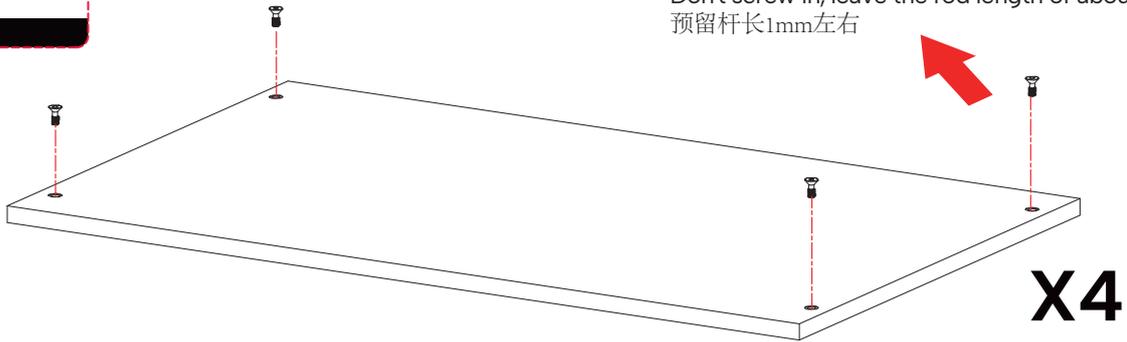

# STEP 10

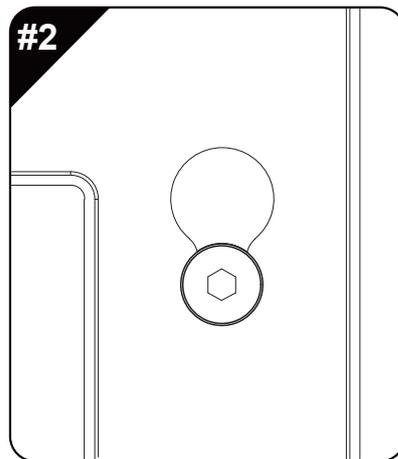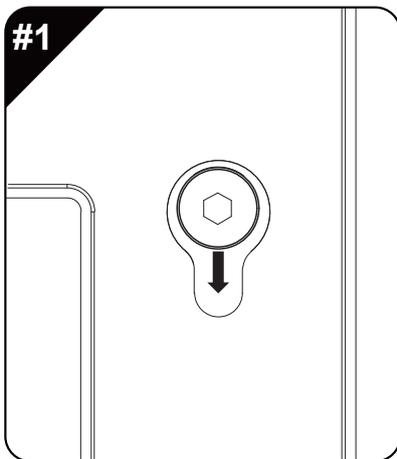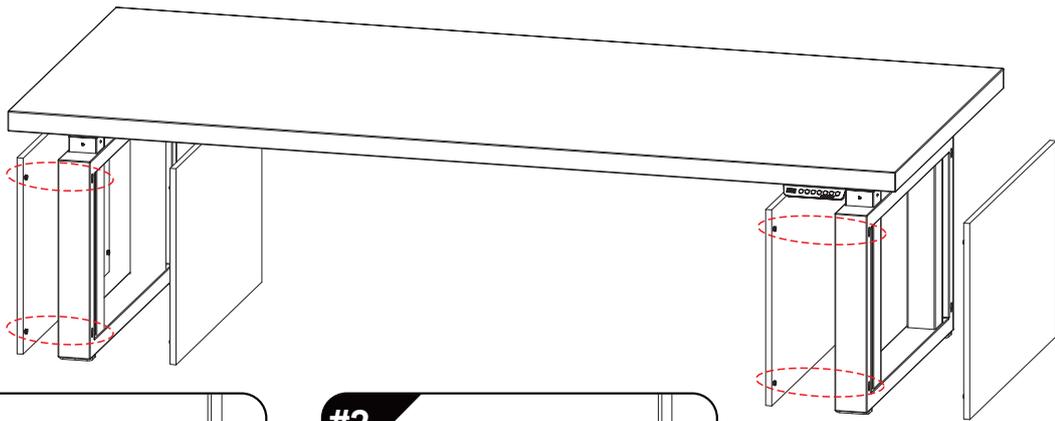

## DOWNLOAD AND INSTALL MOBILE APP

### 下载安装手机 APP

This product is controlled by a mobile app, which is available on both Android and iOS devices.

1. Apple phones: require iOS10.0 or later.
2. Android phones: require Android 5.0 or later.
3. Please search for "Eureka Smart" in the App Store.
4. Please search for "Eureka Smart" or "Eureka" in the Google Play.
5. Scan the QR code below to download the app.
6. Open the "Eureka" app and sign up for an account or log in with your existing account.

本设备支持手机 APP 进行控制,支持 IOS 和安卓系统。

1. 苹果手机需要 IOS10.0 或更高版本。
2. 安卓手机需要 Android 5.0 或高版本。
3. 可在 App Store 搜索 “Eureka Smart” （中文：易瑞康） APP。
4. 可在 Google Play 搜索 “Eureka Smart” 或者 “Eureka” 找到 APP。
5. 可扫描下面二维码下载 APP。
6. 打开 “Eureka” APP，注册新账号或使用已有账号登录。




Google play



Apple store



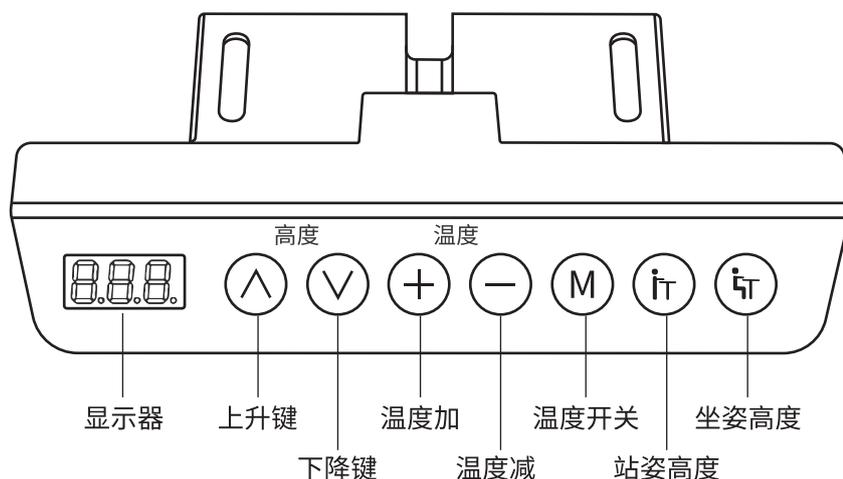

## 上下键操作

- 当按下 $\triangle$ 键，桌面向上运行，直到到达桌面的最高点。
- 当按下 $\nabla$ 键，桌面向下运行，直到到达桌面的最低点。
- 当短按 $\triangle$ 或者 $\nabla$ 键，桌面相应运行很小的距离，实现点动。

## 温度开启/关闭

- 温度开启通电后，通过长按 $M$ ，显示器显示hot，表示桌面加热启动显示自动切换到当前桌面温度显示。
- 温度关闭 温度开启模式下，通过长按 $M$ ，显示器显示OFF，表示桌面加热关闭，显示自动切换到当前桌面高度显示。

## 温度调节

- 通过按 $+$ 或 $-$ ，可以调节桌面温度高低，调节温度时，数字闪烁，表示设定为目标温度 设定结束后，显示当前温度 随后控制器会调节桌面温度，到达设定温度。

## 位置存储/记忆位置查询/记忆位置运行

### •位置存储

可以存储2个记忆点，存储方法如下，通过 $\triangle$ 或 $\nabla$ 键把桌面调整到坐姿或者站姿高度，此时长按 $S$ 或 $T$ 按键，等待数码管显示" S-1/2 " 表示设定成功。

### •记忆位置查询

短按一次 $S$ 或 $T$ 键，显示器闪烁显示对应的记忆高度。

### •记忆位置运行

双击 $S$ 或 $T$ 键，桌面自动运行到记忆位置的高度，运行中，任意键能够停止运行。

## 机械零点复位

- 同时按住 $\triangle$ 和 $\nabla$ 按键，直到显示三个"---"，自动进入初始化模式，桌子会自动运行，等待停止后，表示初始化成功。

## 零点位置复位 重新学习机械最低点

- 显示器显示rST或显示E16时，通过长按 $\nabla$ 键5S等待控制器运行指示闪烁"---"，然后松开按键 $\nabla$ 进入到复位模式，桌面自动向下运行，到达机械最低零点后，桌面会自动向上运行到固定位置，复位过程结束。


# 常见错误代码及处理方式

故障代码	原因	处理方式
E01、E02	桌腿与控制盒连接松动	1. 重新按“^”或者“v”键，如代码仍存在，请检查桌腿电机线是否松动； 2. 如1操作后代码仍存在，请对调桌腿电机线，若代码不变，则控制盒故障，若代码改变（如：E01 -> E02 或 E02 -> E01），则桌腿故障。请联系当地客服更换部件。
E03、E04	桌腿负载过重或电机故障	对调桌腿电机线，若代码不变，则控制盒故障，若代码改变（如：E03 -> E04 或 E04 -> E03），则桌腿故障。请联系当地客服更换部件。
E05、E06	桌腿位置传感器异常	1. 重新按“^”或者“v”键，如代码仍存在，请检查桌腿电机线是否松动； 2. 如1操作后代码仍存在，请对调桌腿电机线，若代码不变，则控制盒故障，若代码改变（如：E05 -> E06 或 E06 -> E05），则桌腿故障。请联系当地客服更换部件。
E07	控制盒电源异常	断电10秒后重连，如代码仍存在，则控制盒故障。 请联系当地客服更换部件。
E08、E09	桌腿故障	断电10秒后重连，如代码仍存在，则控制盒故障。 请联系当地客服更换部件。
E10、E11	控制盒故障	断电10秒后重连，如代码仍存在，则控制盒故障。 请联系当地客服更换部件。
E12	桌腿位置异常	恢复出厂设置操作：长按“v”约5秒，直到显示“---”后松开。
E13	通讯中断	断电10秒钟后重连，如代码仍存在，则控制盒故障。 请联系当地客服，更换部件。
E14、E15	桌腿机械卡死	请对调桌腿电机线，若代码不变，则控制盒故障，若代码改变（如：E14 -> E15 或 E15 -> E14），则桌腿故障。请联系当地客服更换部件。
E16	两侧桌腿位置不平衡	恢复出厂设置操作：长按“v”约5秒，直到显示“---”后松开。
E17	控制盒关键数据丢失	断电10秒后重连，如代码仍存在，则控制盒故障。 请联系当地客服更换部件。
E18	桌面倾斜保护	取下控制盒摆放水平后，未消除故障，更换桌子。
rST	控制盒系统异常掉电	恢复出厂设置操作：长按“v”约5秒，直到显示“---”后松开。
接电后显示屏不亮	控制盒故障或接触不良； 电源器故障或者连接松动等	检查电源线，以及控制盒与电源间的连接线是否松动（建议重新拔插所有连接线口）；若进行上述操作后仍然无法正常运行，请联系当地客服更换部件。



注意：请把控制盒水平安装在桌子上或者水平放置后再通电使用，否则会出现E16或者E18的提示

# BUTTON DESCRIPTIONS

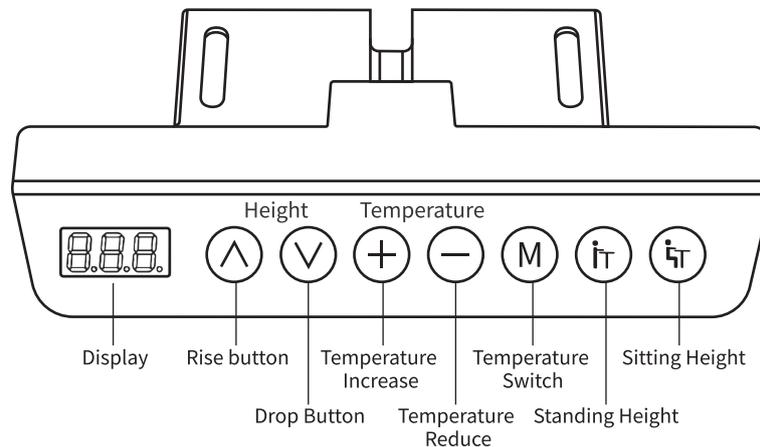

## Adjust the height

- When you press "▲", the desk goes upward until it reaches the highest point.
- When you press "▼", the desk goes downward until it reaches the lowest point.
- When you press "▲" or "▼" briefly, the desk goes a small distance correspondingly.

## Temperature on/off

- After the temperature is powered on, by long pressing "M", the display shows HOT, indicating that the desktop heating starts. The display automatically shows the current desktop temperature.
- Temperature off. In temperature on mode, by long pressing "M", the display shows OFF, which means the desktop heating is off. The display automatically shows the current desktop height.

## Temperature adjustment

- By clicking "+" or "-", you can adjust the temperature of the desktop. When adjusting the temperature, the number flashes, indicating that the target temperature is set. After the setting is completed, the current temperature will be displayed, and then the controller will adjust the temperature of the desktop to reach the set temperature.

## Position memory / memory position search / memory position restore

### •Position memory

Up to 2 positions can be memorized. The method is as follows: adjust the desktop to your desired sitting or standing height by "▲" or "▼" key, then press and hold the "☞" or "☛" button, wait for the digital tube to display "S-1/2" to indicate successful setting.

### •Memory position search

Short press the "☞" or "☛" button once, the display will flash to show the corresponding memory height.

### •Memory position restore

Double-click the "☞" or "☛" button, the desktop will automatically run to the height of the memory position. Press any button to stop its operation.

## Initial setup

(Perform this procedure in normal operation, or when the control box is replaced for the first time)

- Press "▲" and "▼" at the same time until the display flashes "---". The system will enter the initialization mode and the desk will automatically move up and down. Once the desk stops, the initial setup process is complete.

## Factory Reset

- When the display shows rST or E16, press and hold the "▼" key for 5 seconds until the controller flashes "---", then release the "▼" key to enter the reset mode. The desktop will automatically move downwards. After reaching the lowest mechanical zero point, it will automatically move upwards to a fixed position, and then the reset process is done.

# ERROR CODES AND TROUBLESHOOTING


ERROR CODES	CAUSE	SOLUTION
E01、 E02	Loose connection between the legs and the control box	1. Press " ^ " or " v " again. If the code still exists, please check whether the leg cables are loose. 2. If the code still exists after step 1, please switch the leg cables. If the code does not change, the control box is faulty. If the code changes (eg: E01 -> E02 or E02 -> E01), the leg is faulty. Please contact our local customer service team for replacement parts.
E03、 E04	Overload or motor failure	Please switch the leg cables. If the code does not change, the control box is faulty. If the code changes (eg: E03 -> E04 or E04 -> E03), the leg is faulty. Please contact our local customer service team for replacement parts.
E05、 E06	Faulty leg sensor	1. Press " ^ " or " v " again. If the code still exists, please check whether the leg cables are loose. 2. If the code still exists after step 1, please switch the leg cables. If the code does not change, the control box is faulty. If the code changes (eg: E05 -> E06 or E06 -> E05), the leg is faulty. Please contact our local customer service team for replacement parts.
E07	Faulty power supply of the control box	Unplug the desk and plug it back in after 10 seconds. If the code still exists, the control box is faulty. Please contact our local customer service team for replacement parts.
E08、 E09	Faulty leg	Unplug the desk and plug it back in after 10 seconds. If the code still exists, the control box is faulty. Please contact our local customer service team for replacement parts.
E10、 E11	Faulty control box	Unplug the desk and plug it back in after 10 seconds. If the code still exists, the control box is faulty. Please contact our local customer service team for replacement parts.
E12	Faulty leg position	Factory reset: press " v " for about 5 seconds until the display shows "- - -".
E13	Communication interruption	Unplug the desk and plug it back in after 10 seconds.If the code still exists,the control box is faulty.Please contact our local customer service team for replacement parts.
E14、 E15	Leg stuck	Please switch the leg cables. If the code does not change, the control box is faulty. If the code changes (eg: E14 -> E15 or E15 -> E14), the leg is faulty. Please contact our local customer service team for replacement parts.
E16	Unbalanced legs	Factory reset: press " v " for about 5 seconds until the display shows "- - -".
E17	Key data of the control box lost	Unplug the desk and plug it back in after 10 seconds. If the code still exists, the control box is faulty. Please contact our local customer service team for replacement parts.
E18	Desktop tilt protection	After removing the control box and placing it horizontally, if the fault is not eliminated, replace the desk
rST	Control box system suddenly turning off	Factory reset: press " v " for about 5 seconds until the display shows "- - -".
The display does not work after the desk is plugged in.	Faulty control box or poor electrical contact; Faulty power supply or loose connection, etc.	Check the power cord and whether the connection between the control box and the power supply is loose (to replug all cables is recommended). If the display still does not work properly, please contact our local customer service team for replacement parts.



Note: Please install the control box horizontally on the table or place it horizontally before powering on it, otherwise the prompt of E16 or E18 will appear.

MODEL # ERK-ED87-GY-5

# ZEN EXECUTIVE DESK

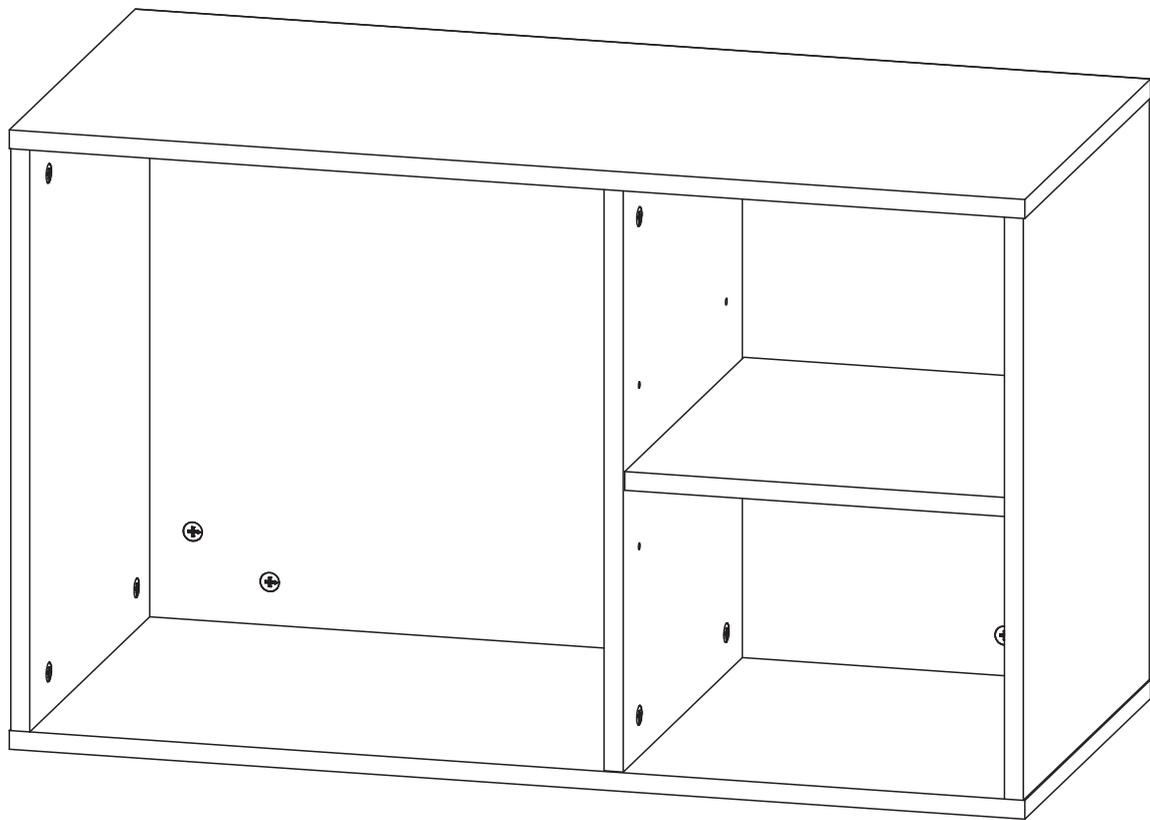









If you need to return the goods, please keep all the packaging materials and return it in the original packaging.

Si vous devez retourner la marchandise, veuillez conserver tous les matériaux d'emballage et le retourner dans l'emballage d'origine.






Si necesita devolver los productos, conserve todos los materiales de embalaje y devuélvalos en el embalaje original.

如需退货请保留好所有包装材料，并按原包装包好退回。

# PARTS / PIÈCES / PARTES / 部件清单

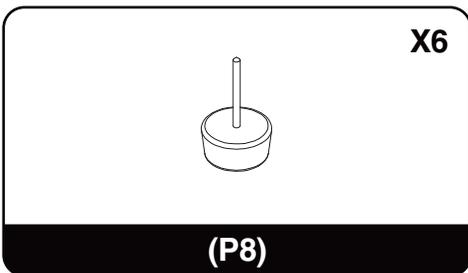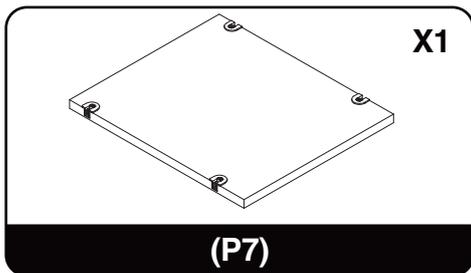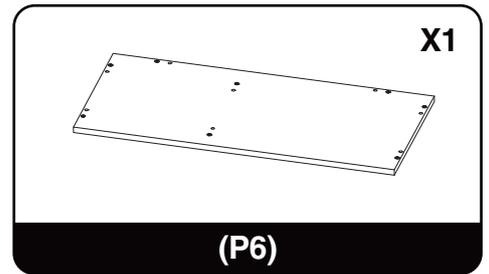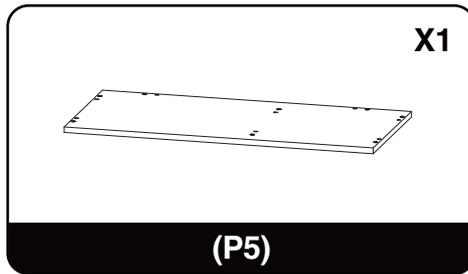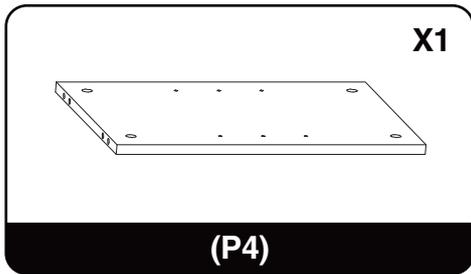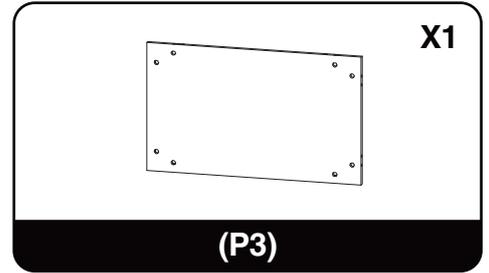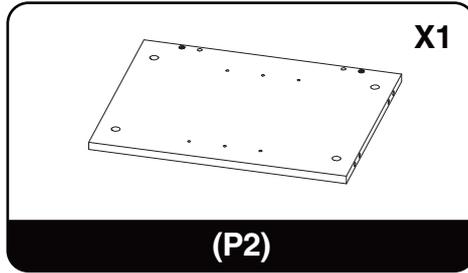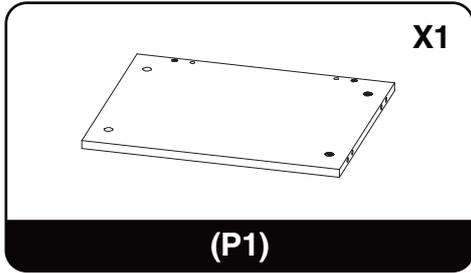

# HARDWARE / MATÉRIEL / HARDWARE / 配件清单

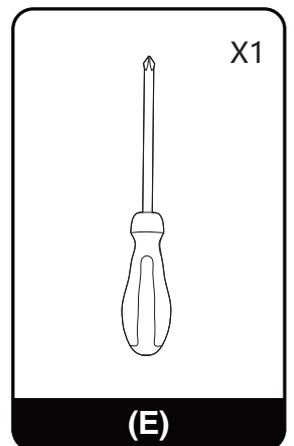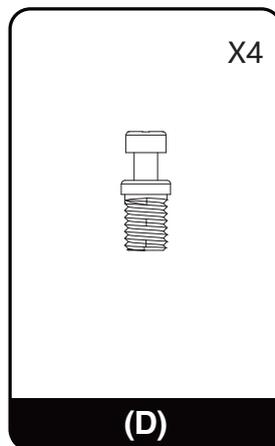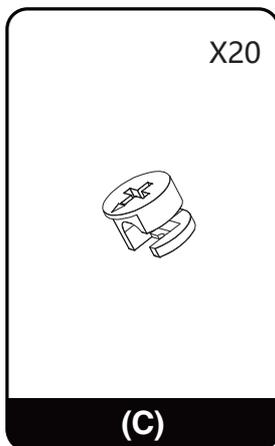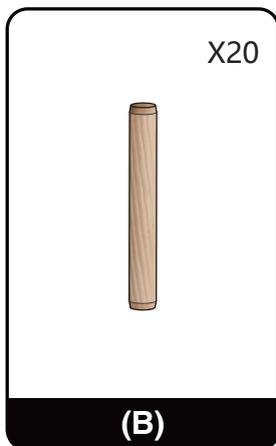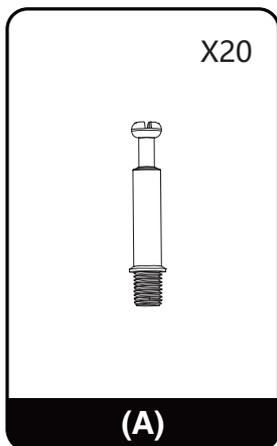

# ASSEMBLY INSTRUCTIONS

# INSTRUCTIONS DE MONTAGE








# INSTRUCCIONES DE MONTAJE

# 安装步骤







Do not tighten the screws until all of them are fastened into the holes.  
Ne serrez pas les vis tant qu'elles ne sont pas toutes fixées dans les trous.  
No apriete los tornillos hasta que todos estén fijados en los orificios.  
安装时先不要把螺丝拧紧，等所有螺丝都拧到螺纹孔上再将全部螺丝拧紧。






## STEP 1

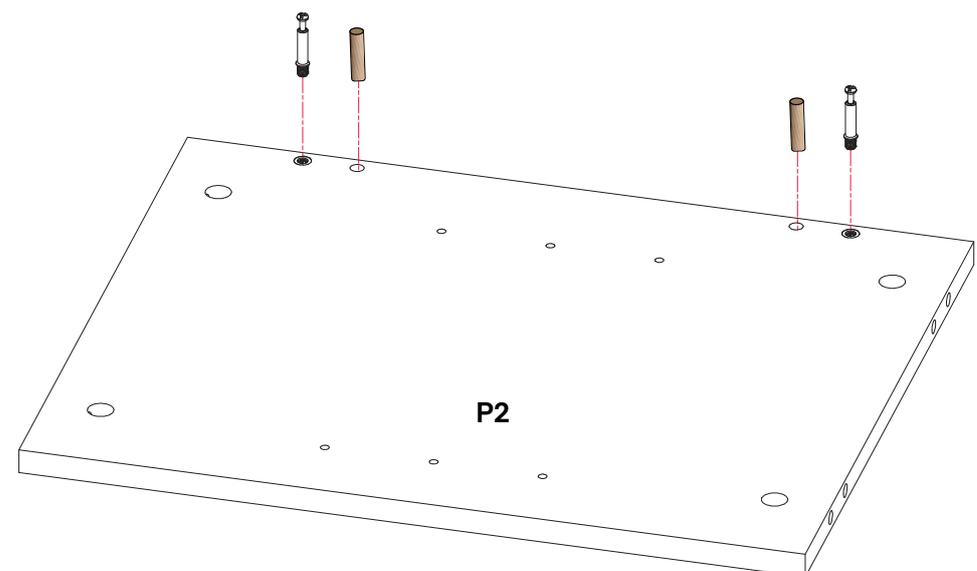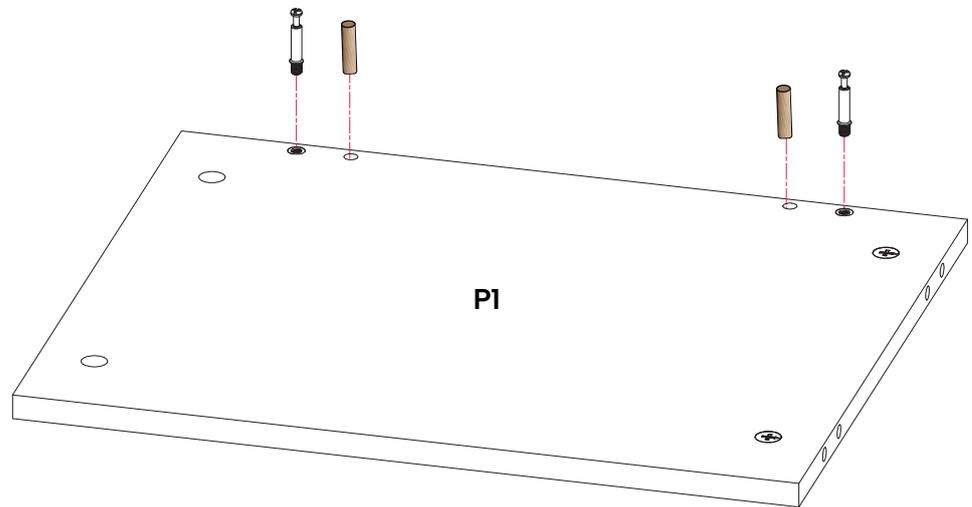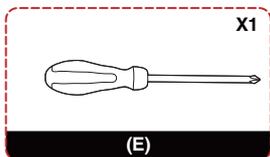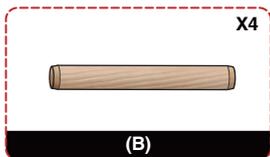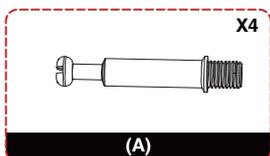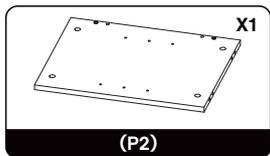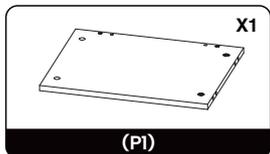




## STEP 2

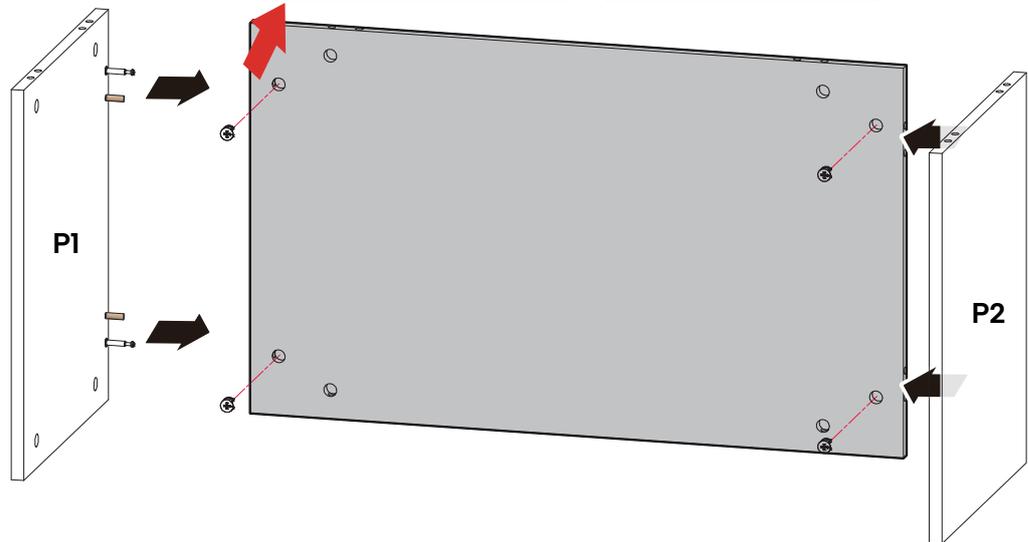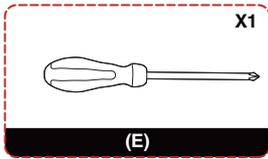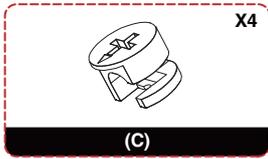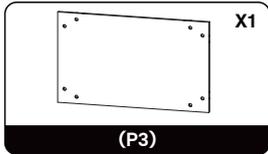





## STEP 3

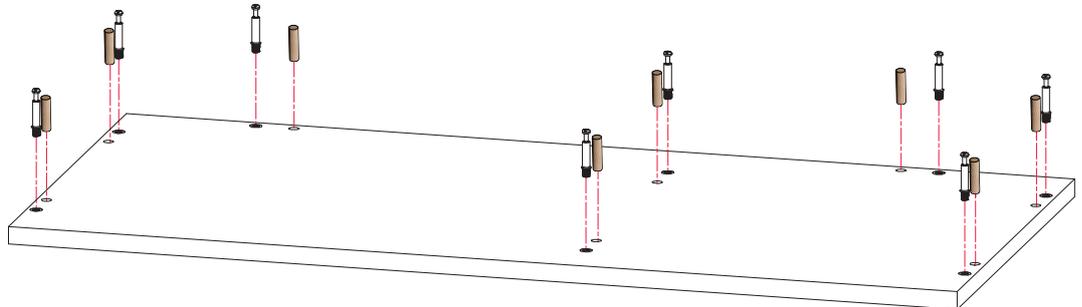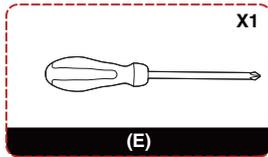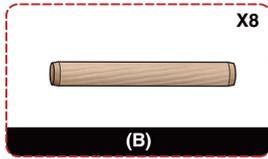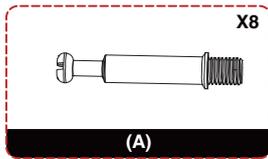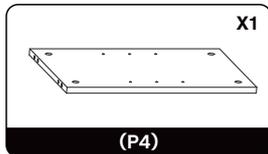





# STEP 4

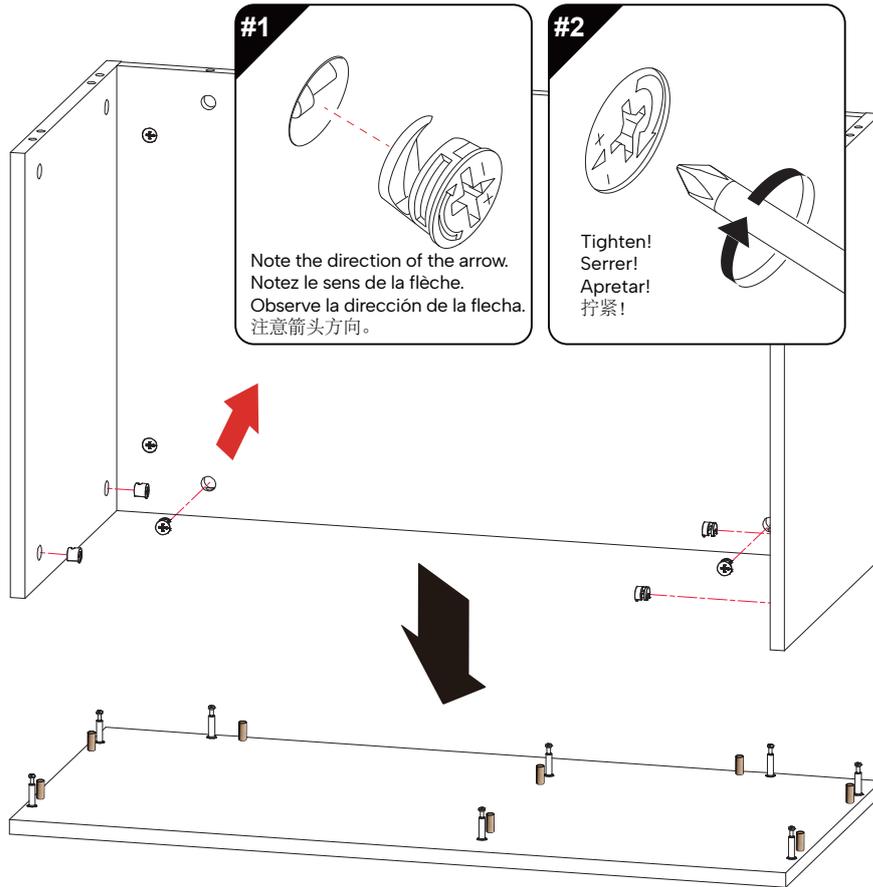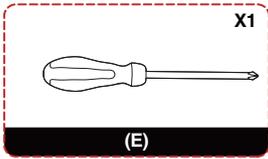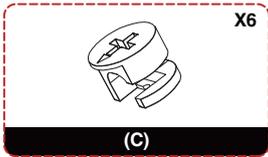


# STEP 5

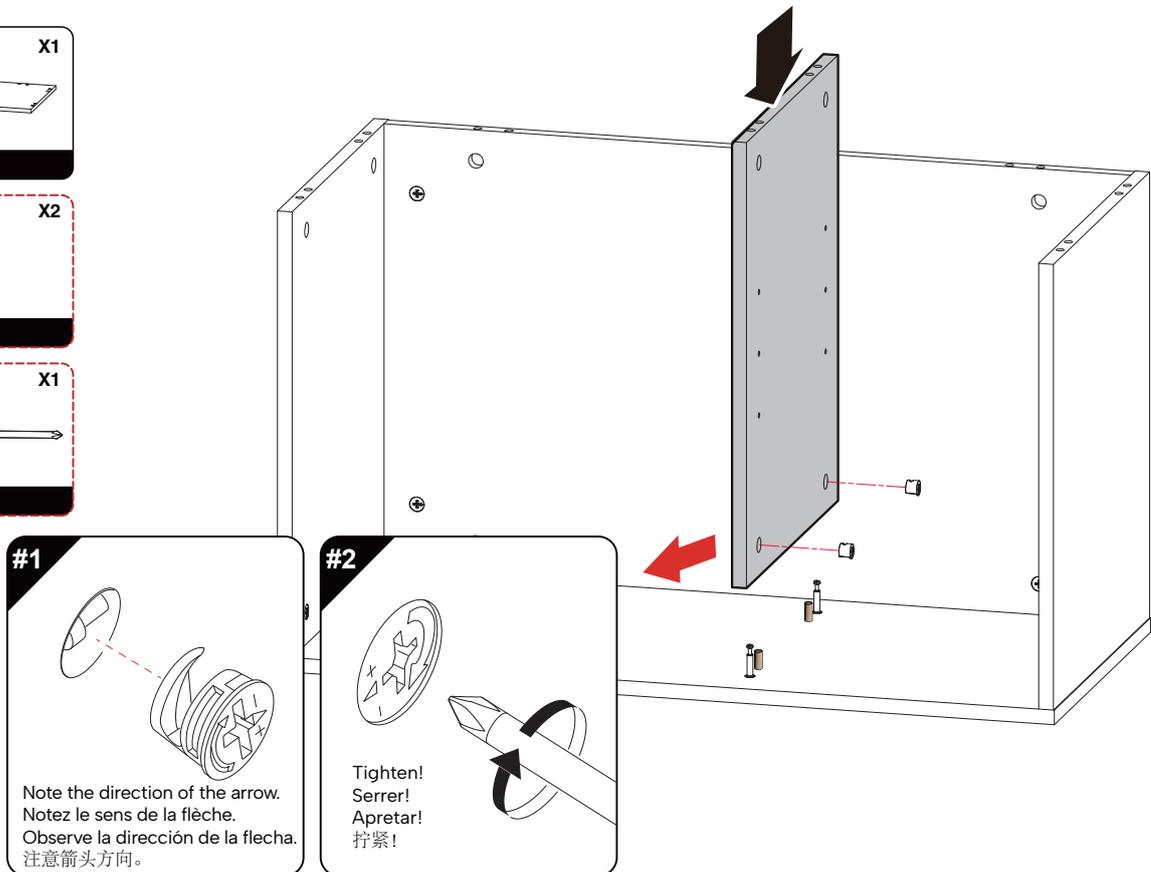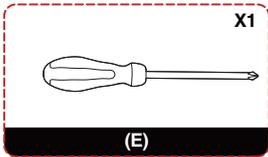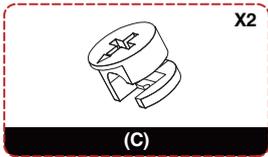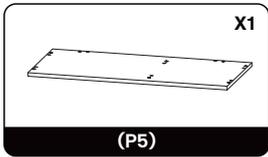




# STEP 6

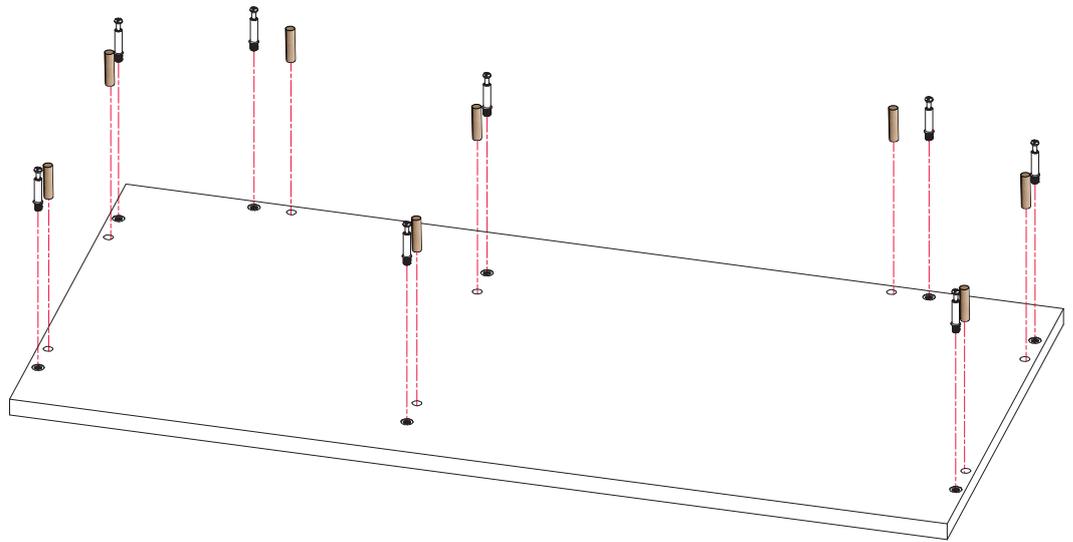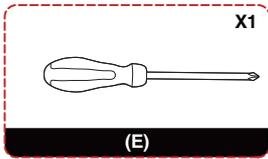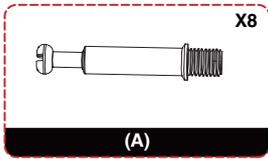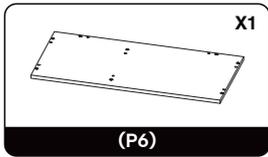




# STEP 7

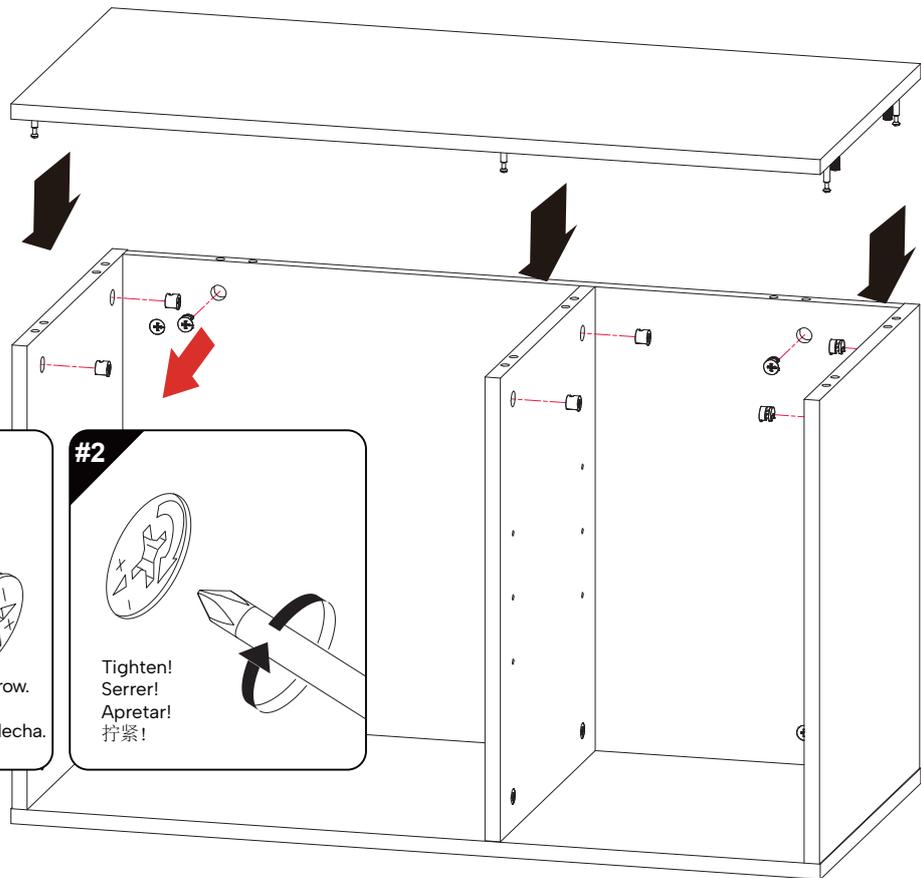




# STEP 8

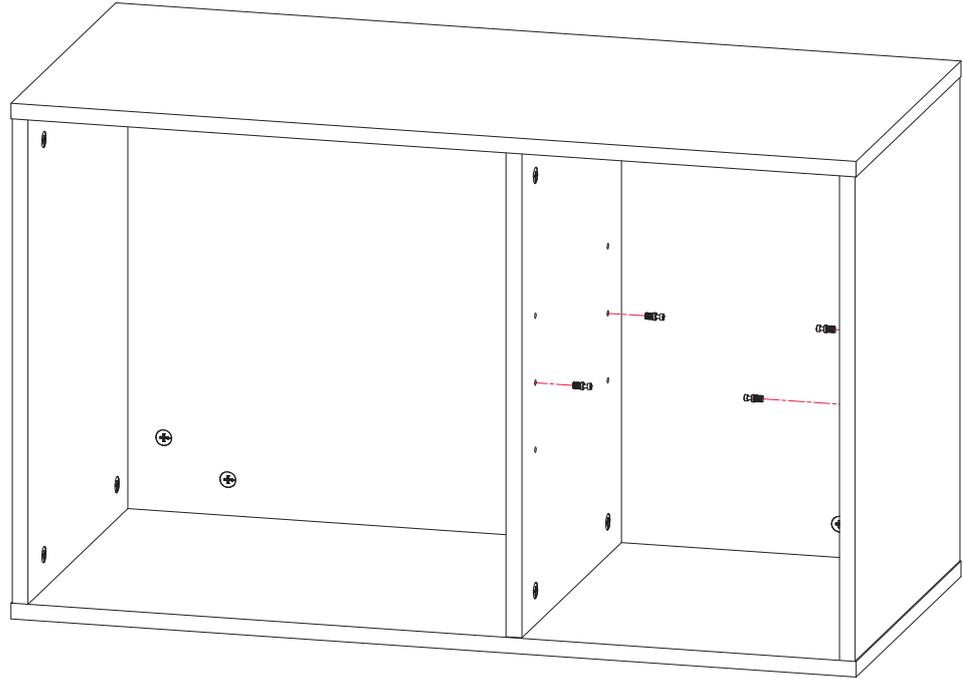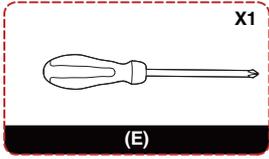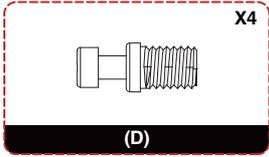



# STEP 9

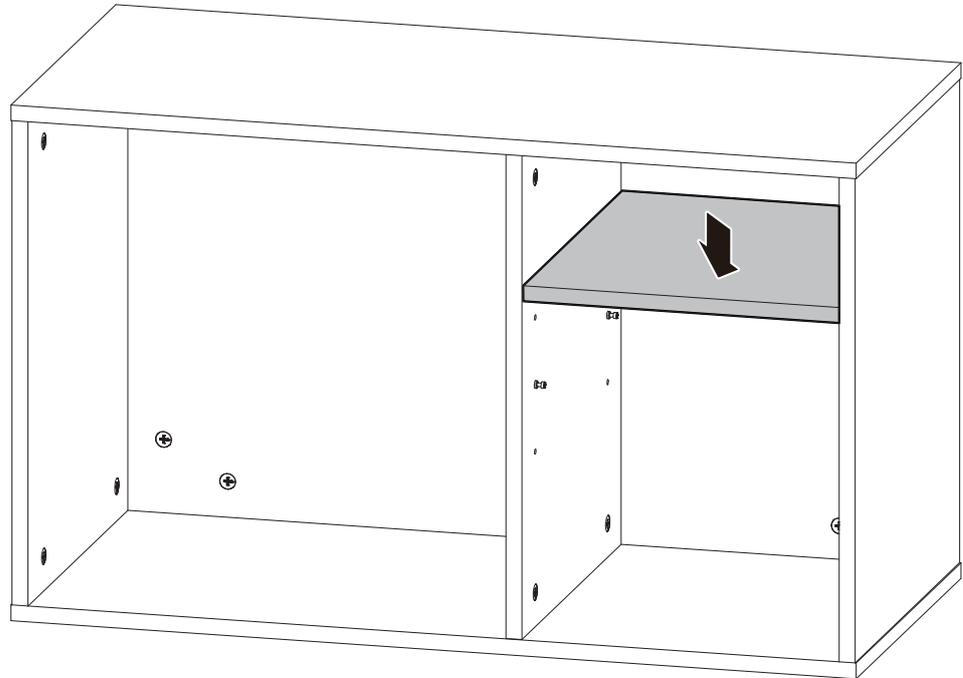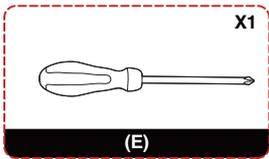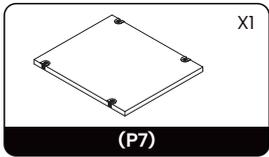

# STEP 10

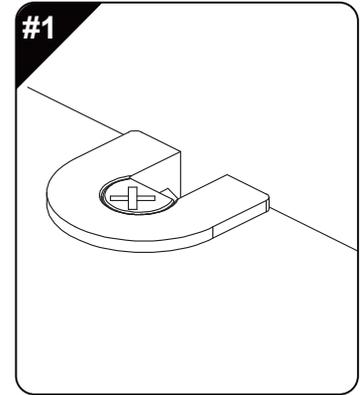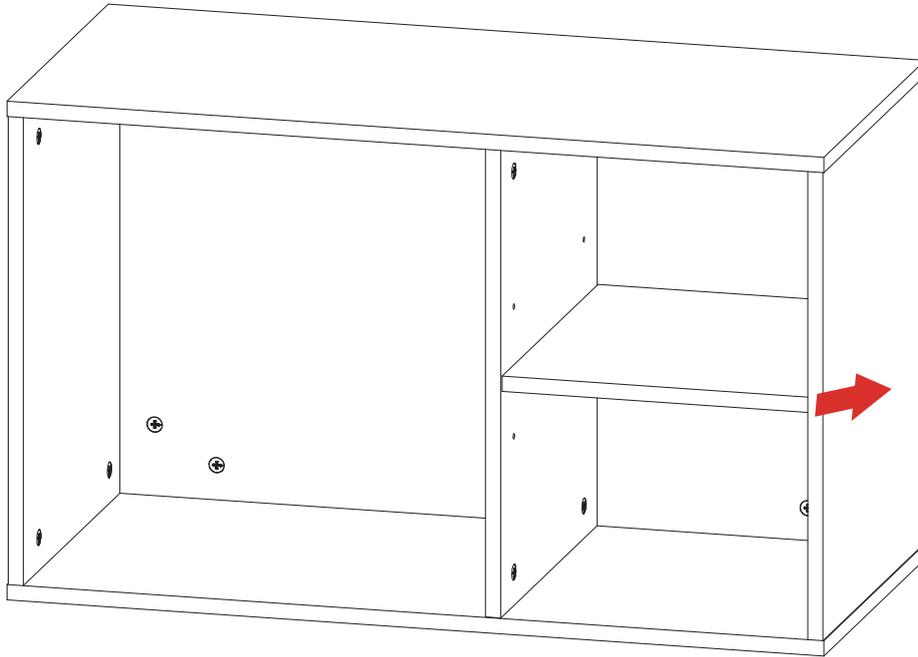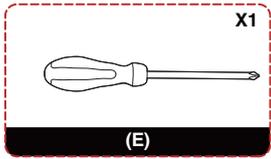


# STEP 11

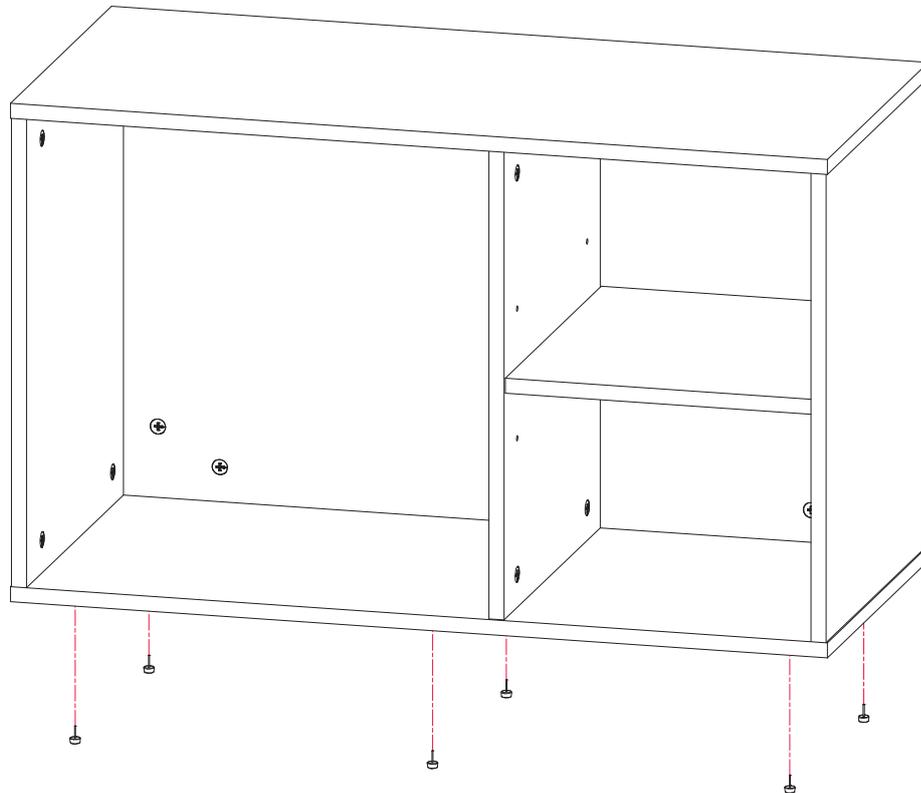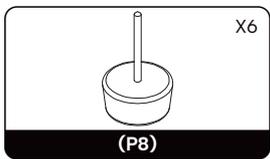

MODEL # ERK-ED87-GY-6

# ZEN EXECUTIVE DESK

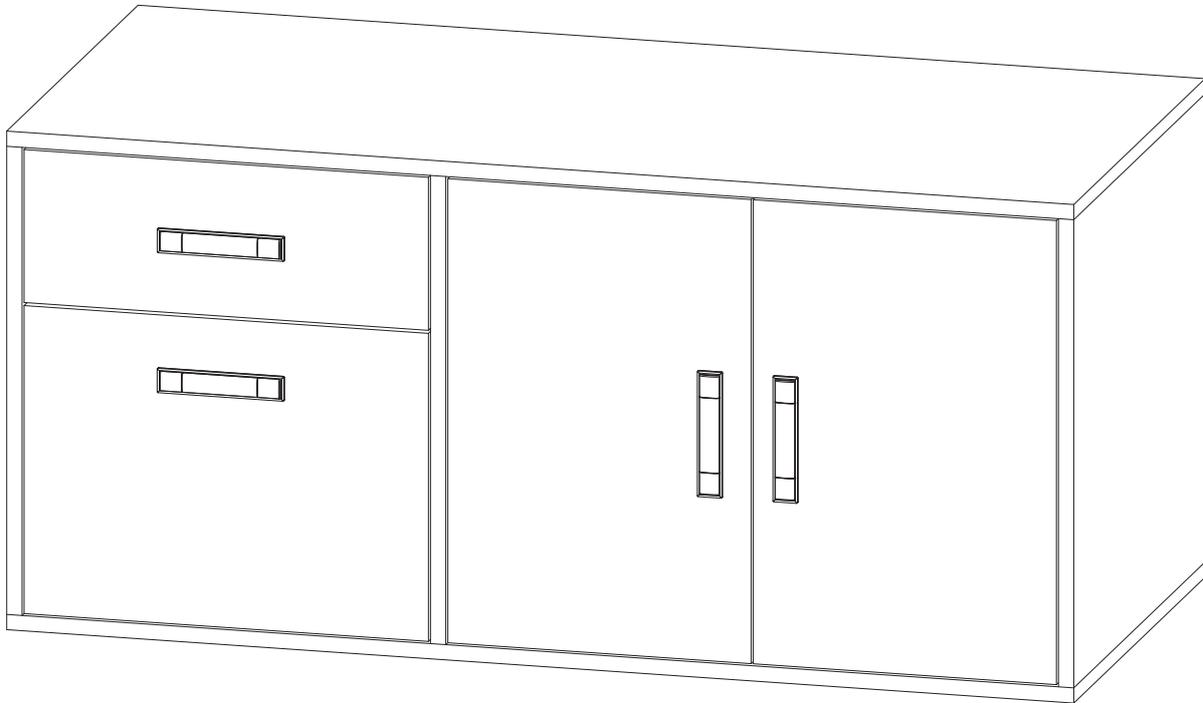


















If you need to return the goods, please keep all the packaging materials and return it in the original packaging!

Si vous devez retourner la marchandise, veuillez conserver tous les matériaux d'emballage et le retourner dans l'emballage d'origine!

Si necesita devolver los productos, conserve todos los materiales de embalaje y devuélvalos en el embalaje original!

如需退货请保留好所有包装材料，并按原包装包好退回!

# PARTS / PIÈCES / PARTES / 部件清单

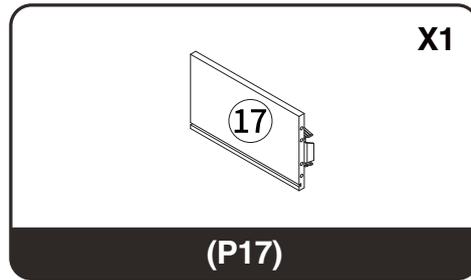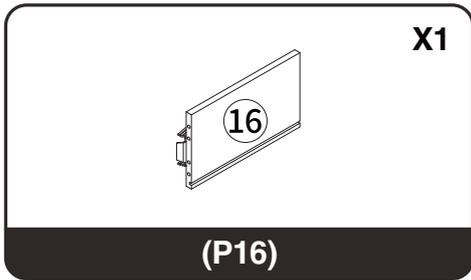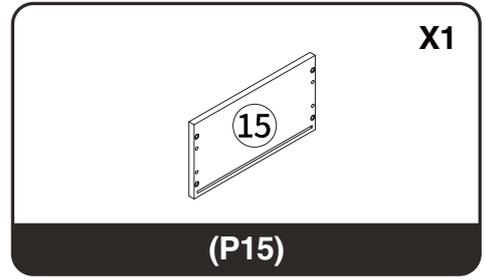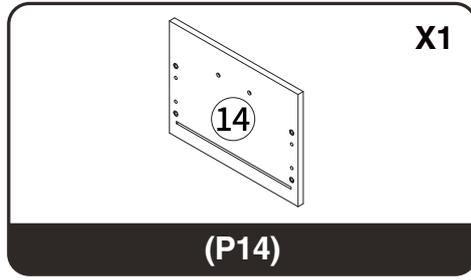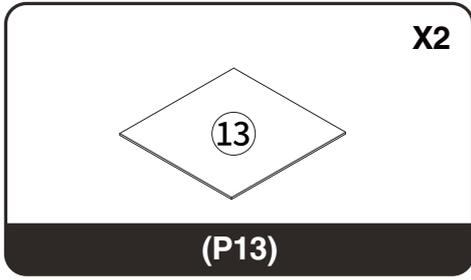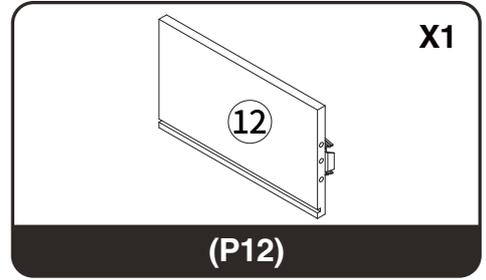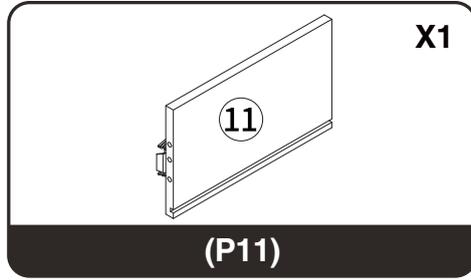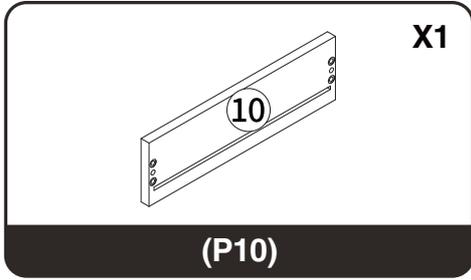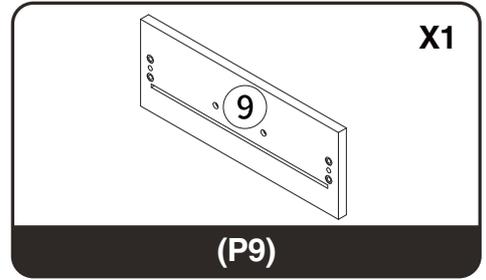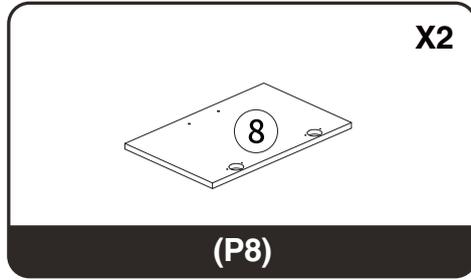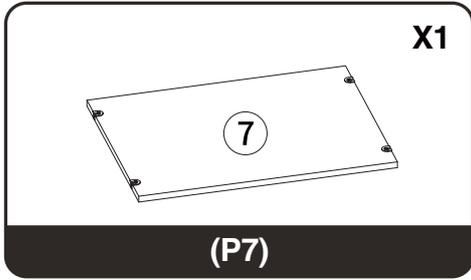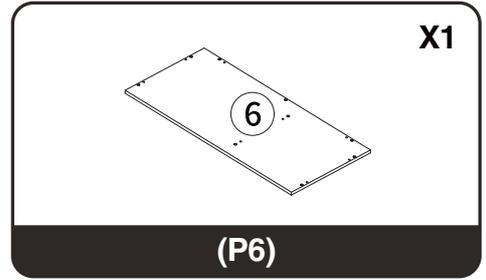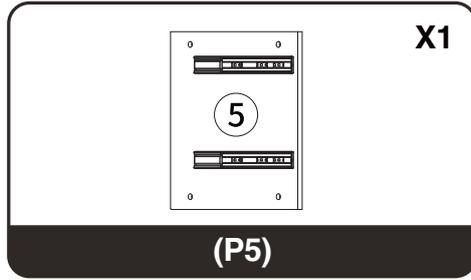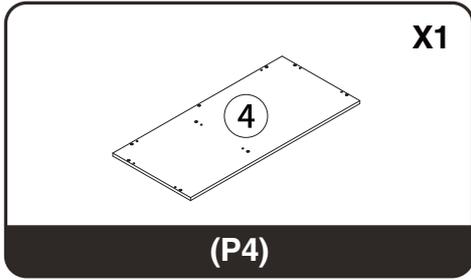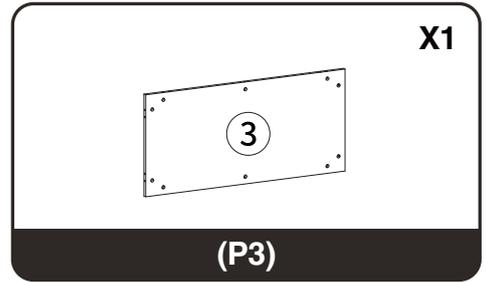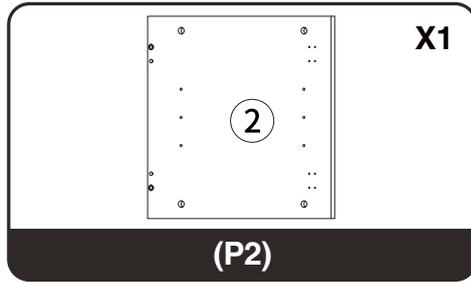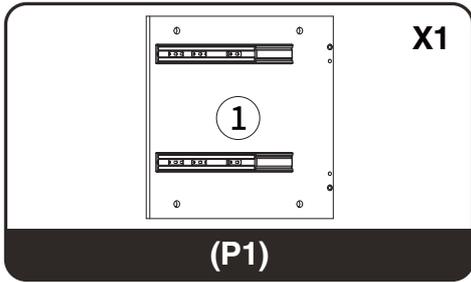

# HARDWARE / MATÉRIEL / HARDWARE / 配件清单

X38




(A)

X32




(B)

X38

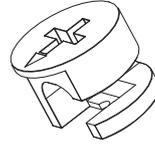

(C)

 X4



(D)

X5




(E)

X24




(F)

X4

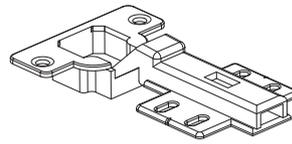

(G)

X4

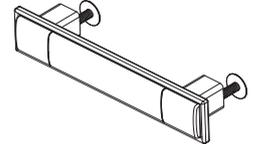

(H)

X1



(I)



Do not tighten the screws until all of them are screwed into the holes.  
Ne serrez pas les vis avant qu'elles ne soient toutes vissées dans les trous.  
No apriete los tornillos hasta que todos estén atornillados en los agujeros.  
安装时先不要把螺丝拧紧, 等所有螺丝都拧到螺纹孔上再将全部螺丝拧紧。









## ASSEMBLY INSTRUCTIONS

## INSTRUCTIONS DE MONTAGE





## INSTRUCCIONES DE MONTAJE

## 安装步骤


### STEP 1

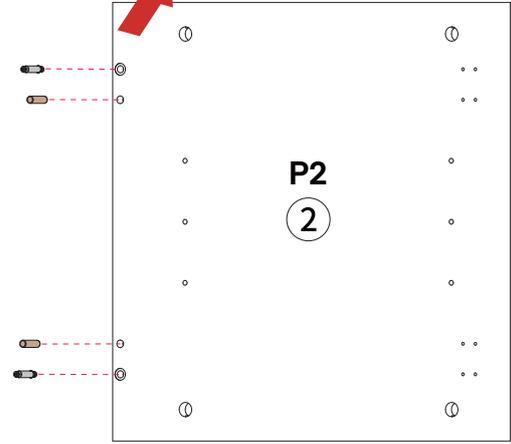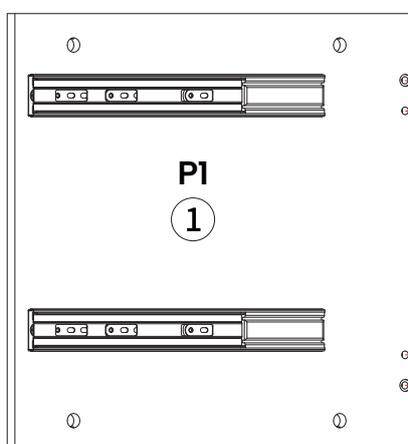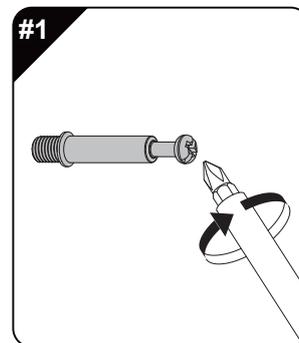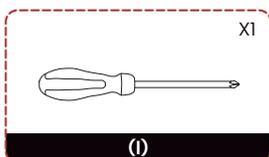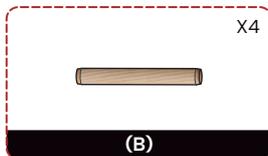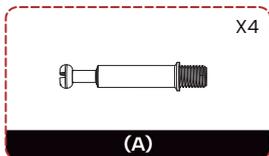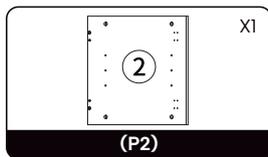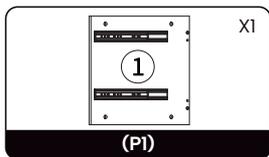







# STEP 2

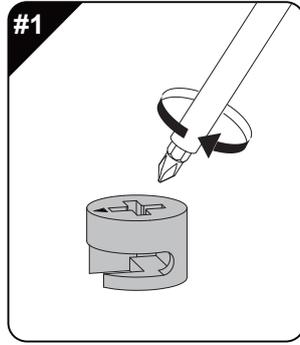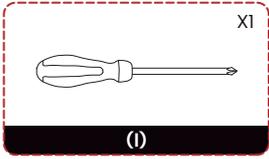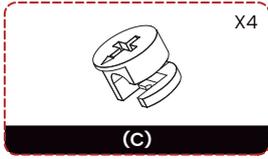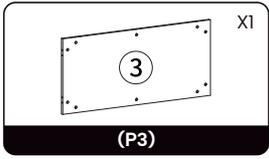





Note the direction of the arrow.  
 Notez le sens de la flèche.  
 Observe la dirección de la flecha.  
 注意箭头方向。

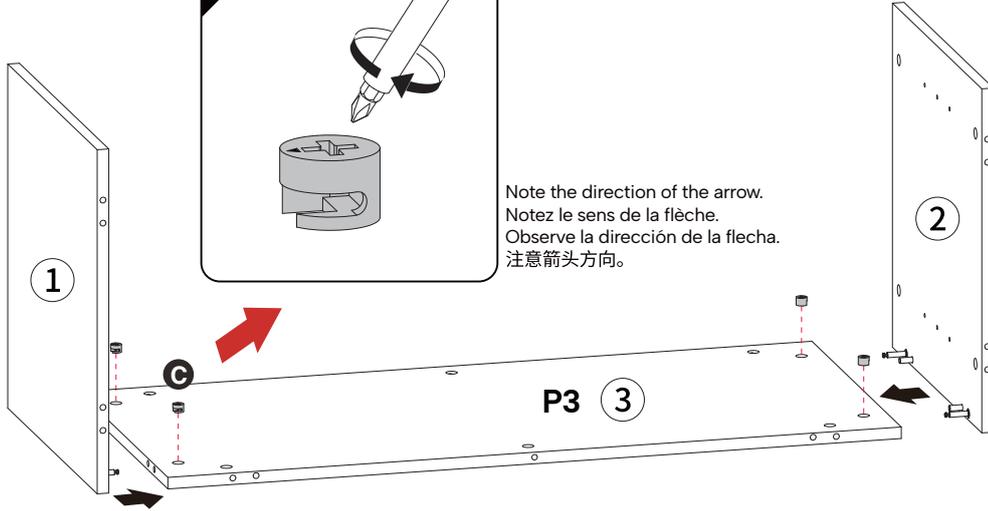

# STEP 3

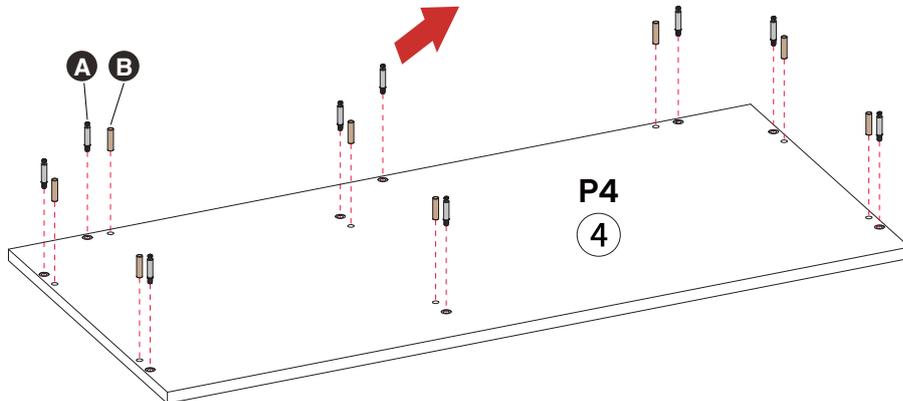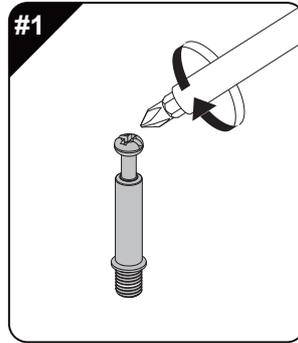
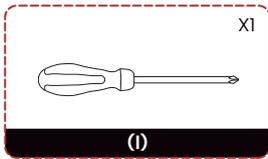
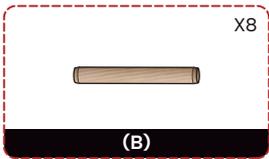
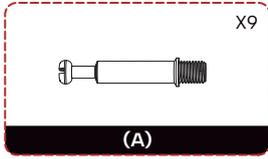
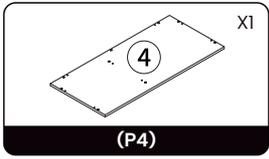


# STEP 4

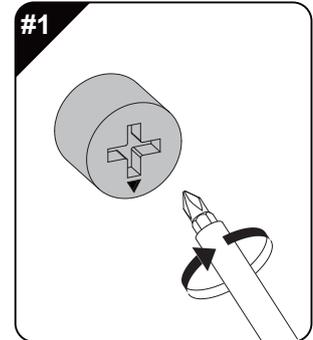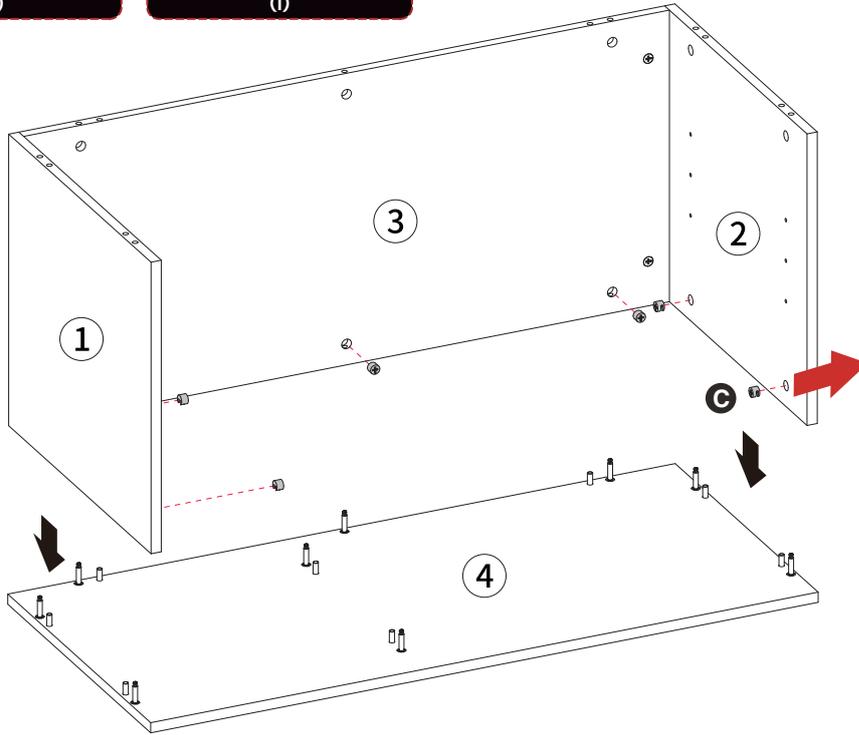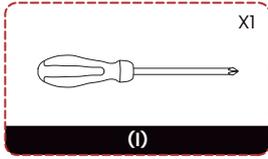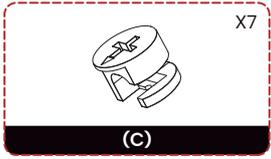






Note the direction of the arrow.  
Notez le sens de la flèche.  
Observe la dirección de la flecha.  
注意箭头方向。

# STEP 5

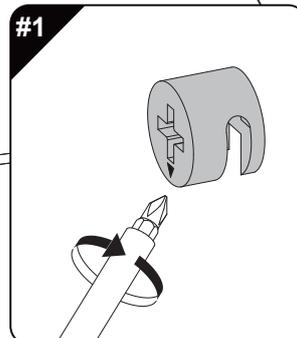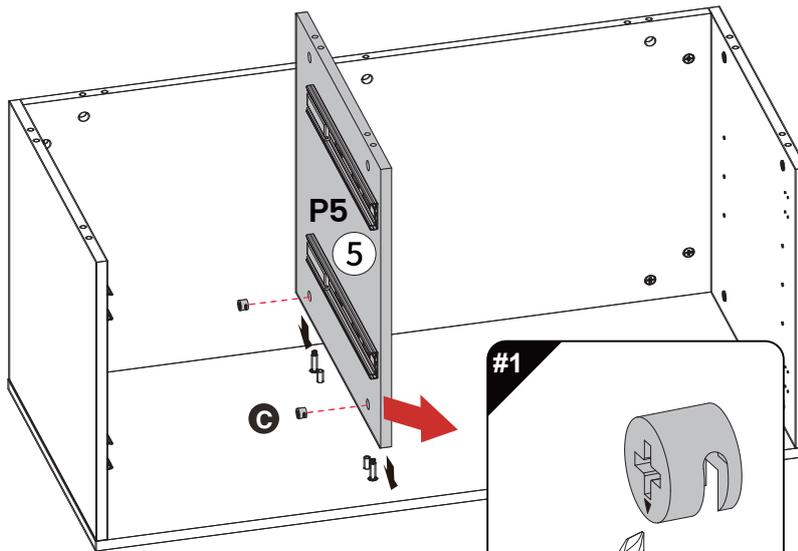
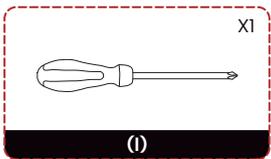
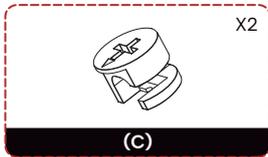
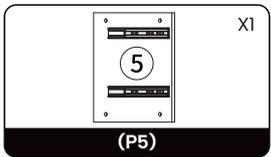


Note the direction of the arrow.  
Notez le sens de la flèche.  
Observe la dirección de la flecha.  
注意箭头方向。

# STEP 6


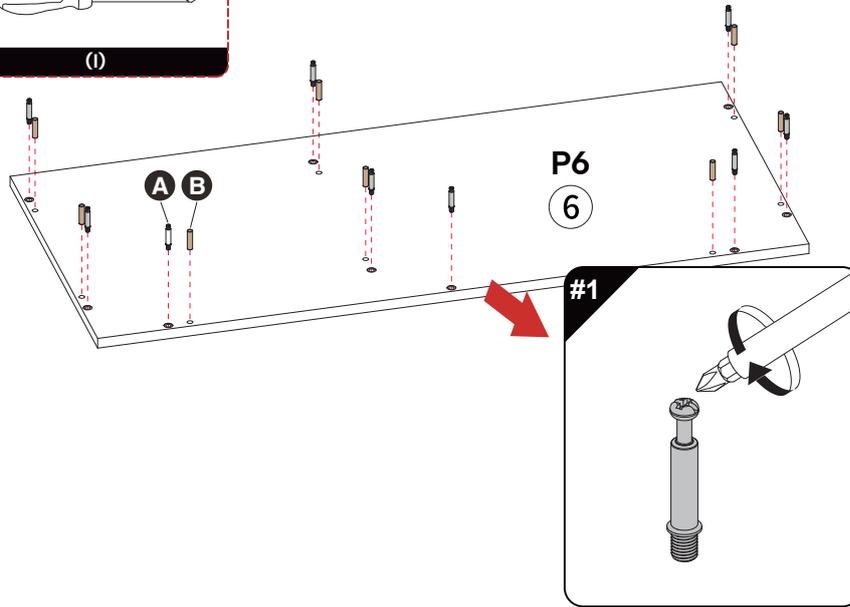
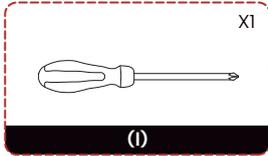
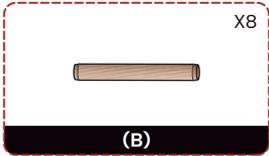
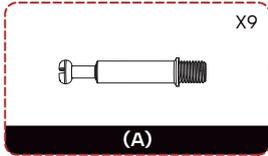
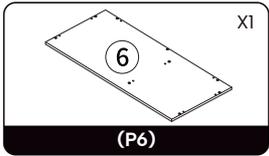


# STEP 7



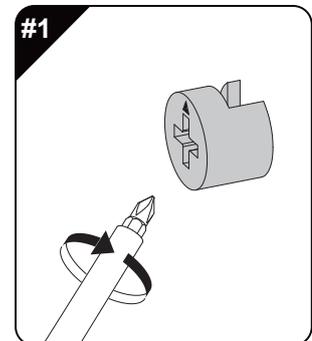
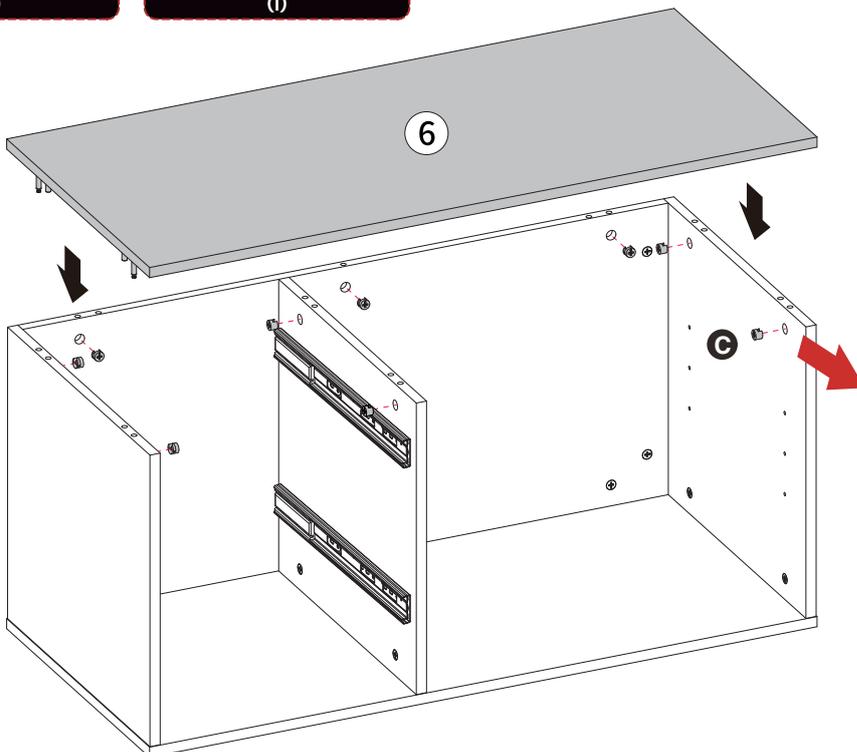
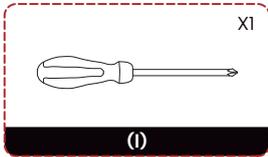
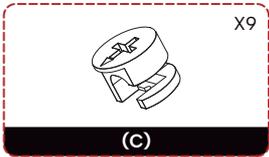


Note the direction of the arrow.  
Notez le sens de la flèche.  
Observe la dirección de la flecha.  
注意箭头方向。





# STEP 8

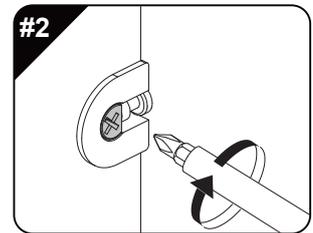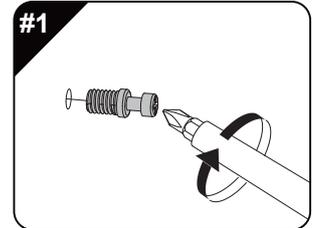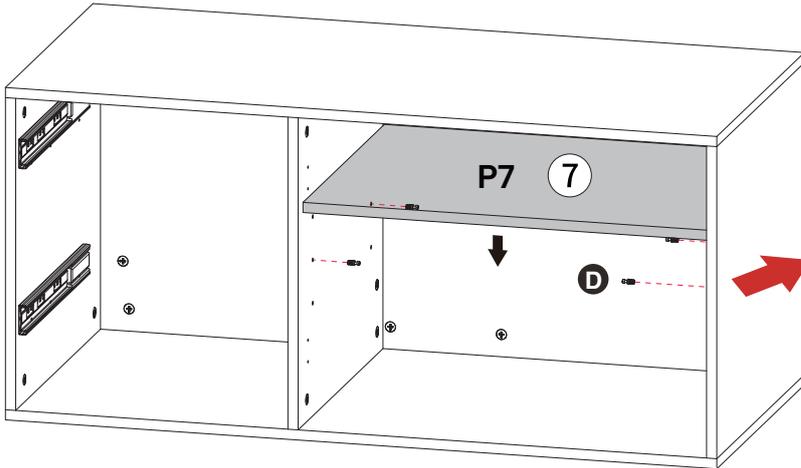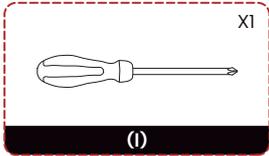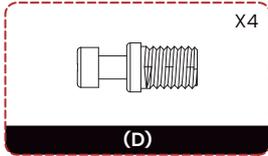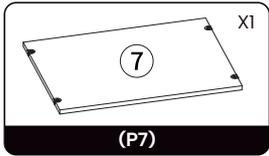

# STEP 9

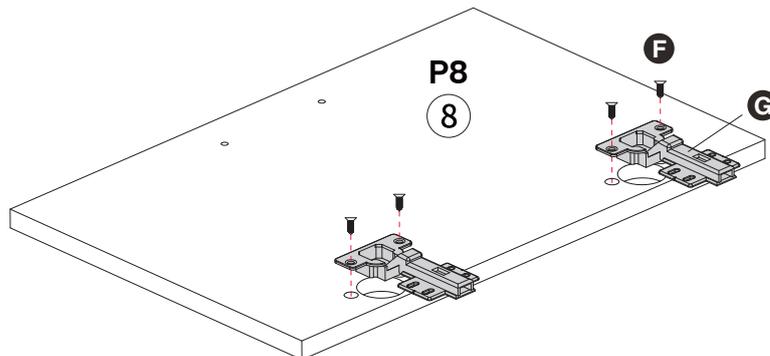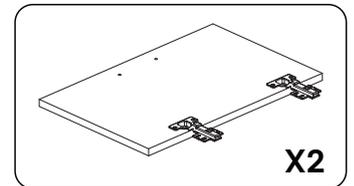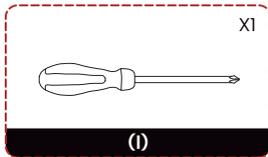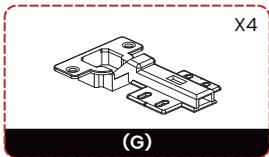
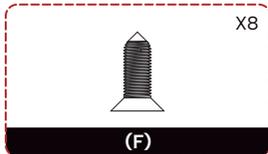
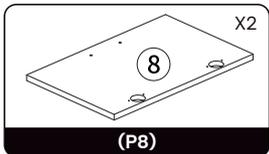


# STEP 10


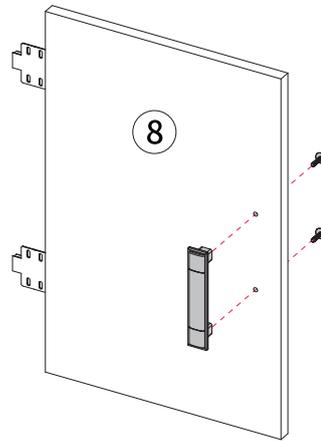
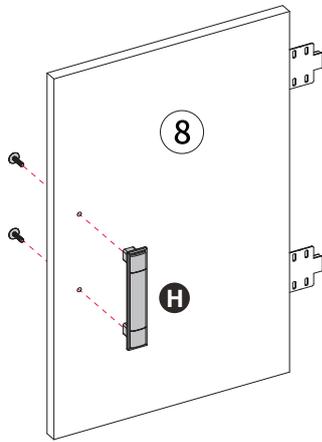
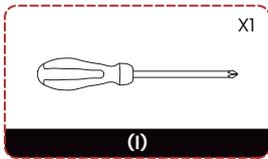
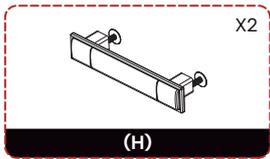


Screw out the screws before installing the handles.  
Dévissez les vis avant d'installer les poignées.  
Atornille los tornillos antes de instalar las manijas.  
先拧出螺丝再安装拉手。






# STEP 11

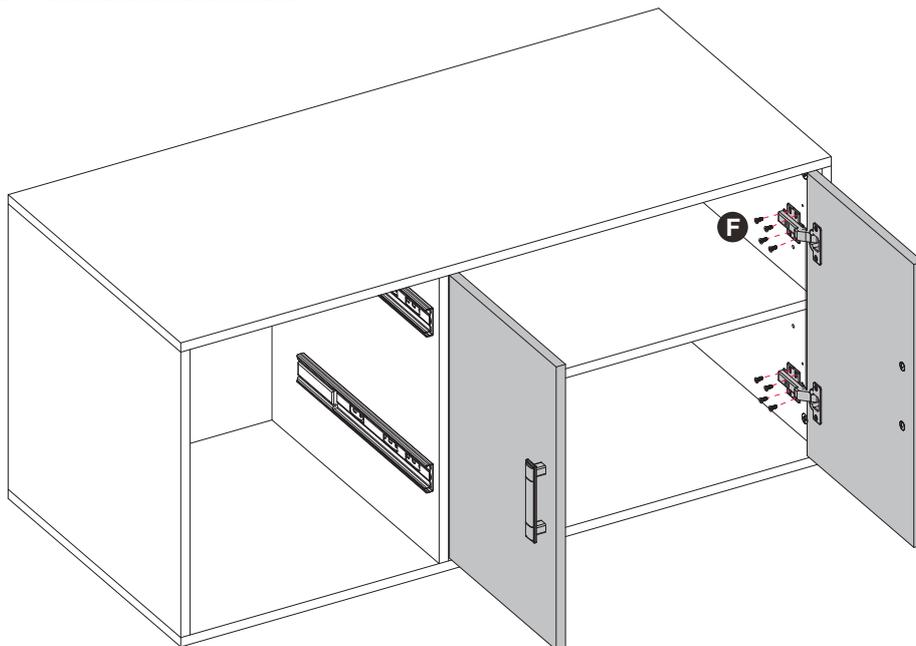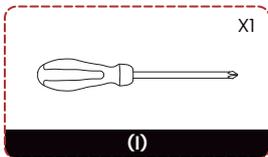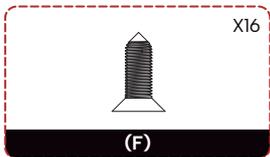






# STEP 12

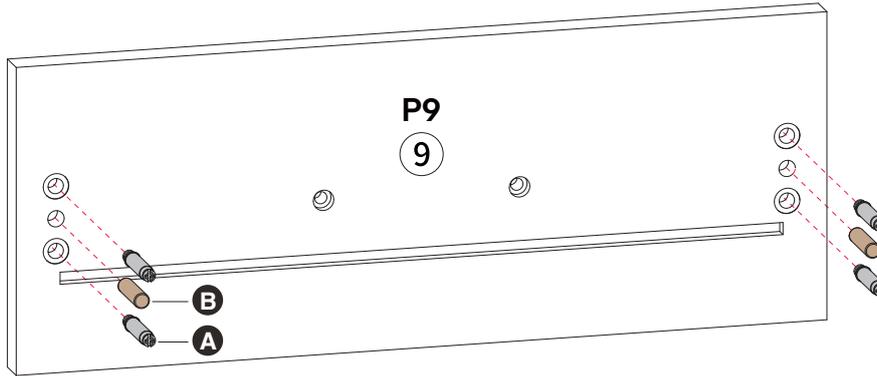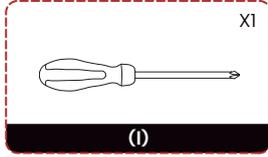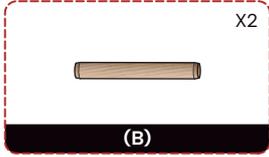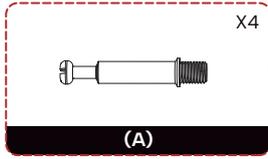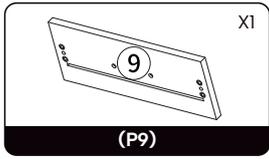



# STEP 13

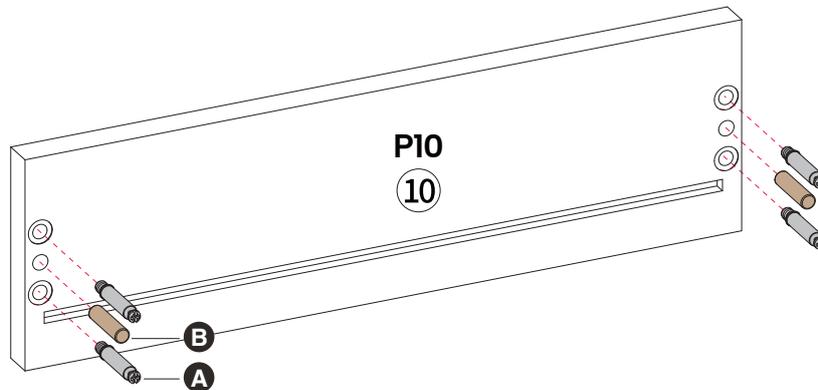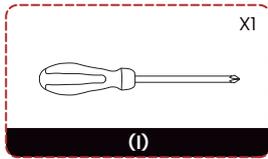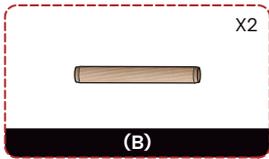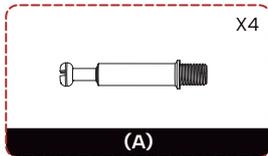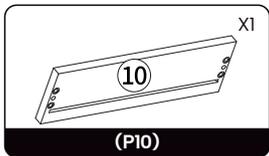




# STEP 14

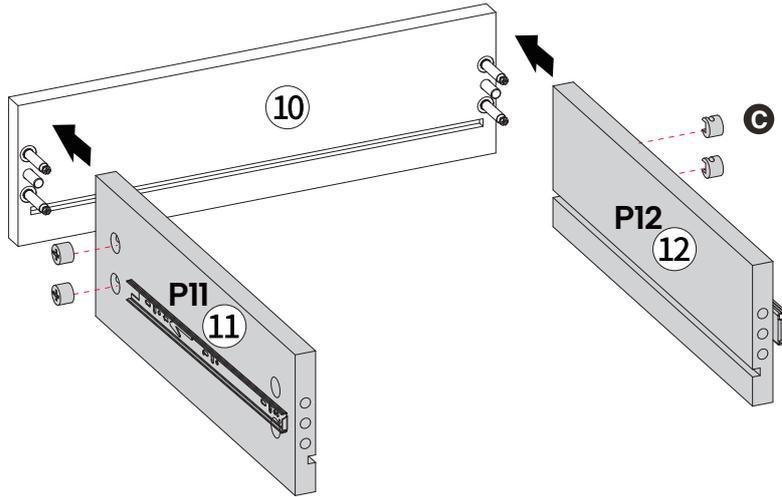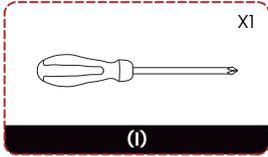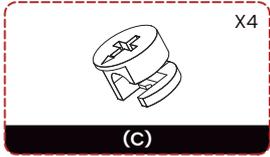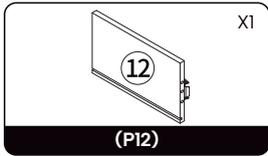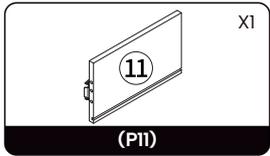




# STEP 15

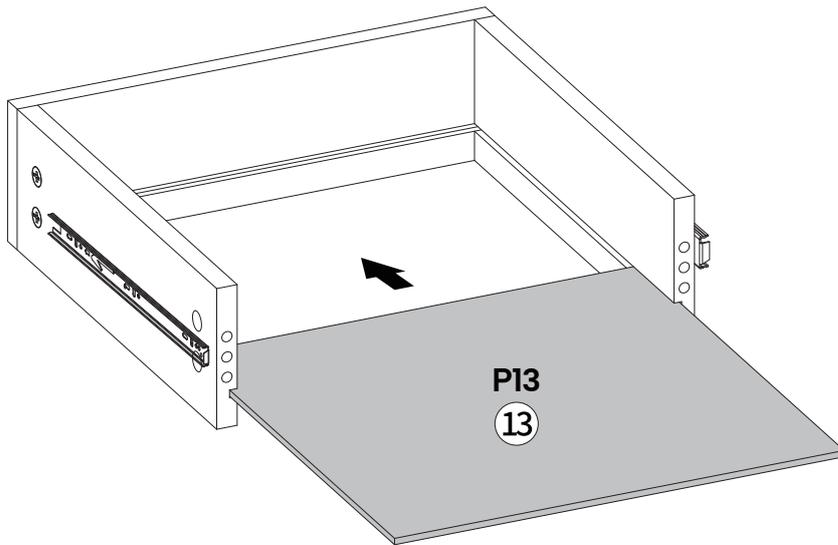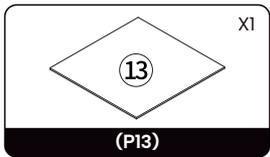

# STEP 16



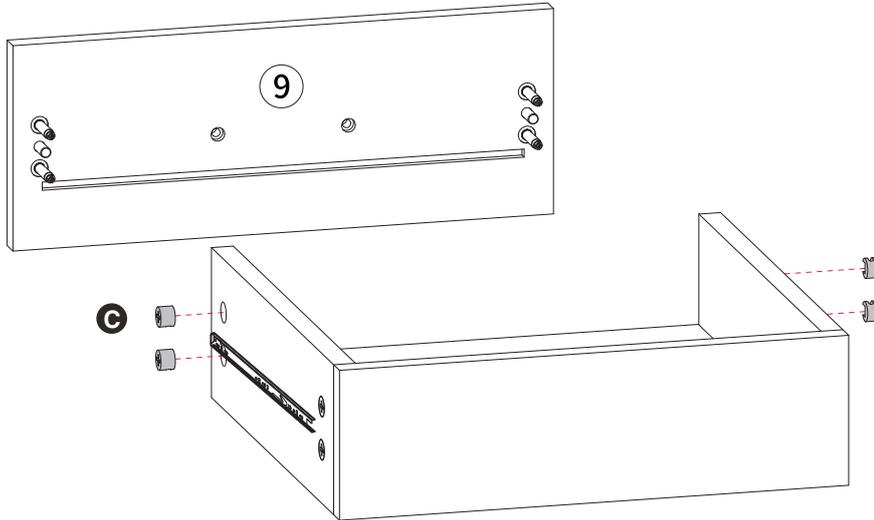
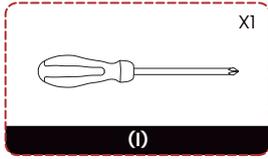
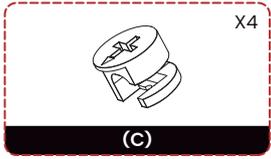


# STEP 17



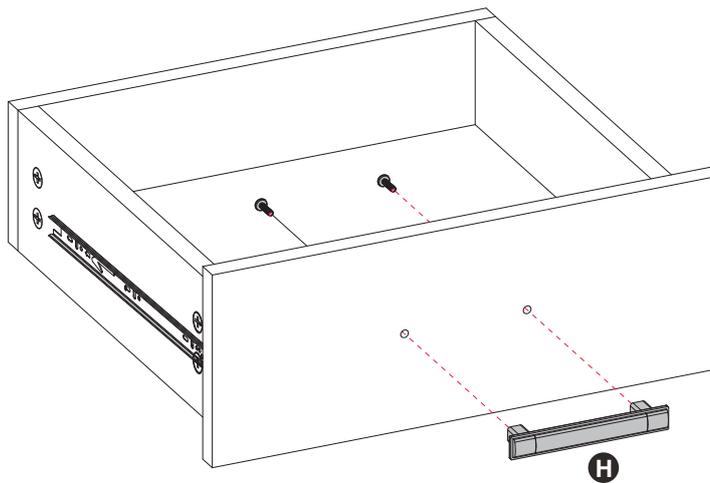
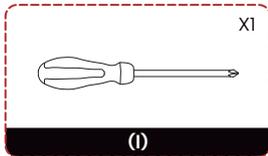
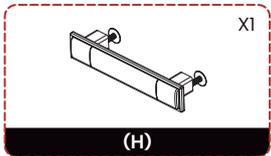


Screw out the screws before installing the handles.  
Dévissez les vis avant d'installer les poignées.  
Atornille los tornillos antes de instalar las manijas.  
先拧出螺丝再安装拉手。






# STEP 18

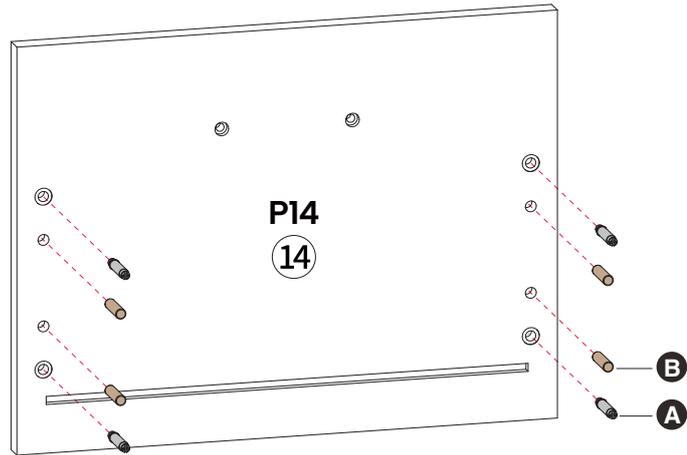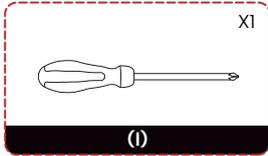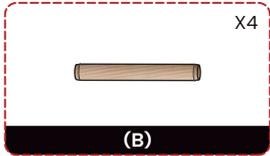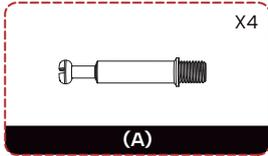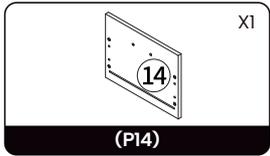



# STEP 19

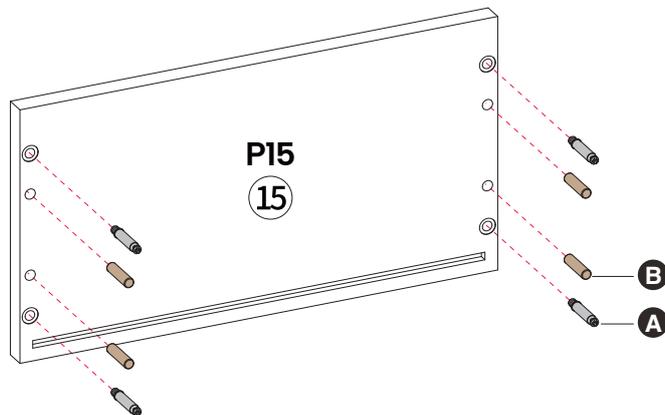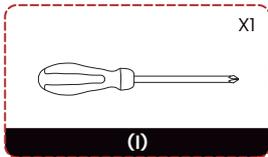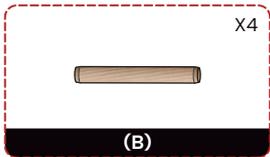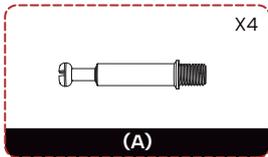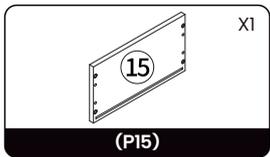




# STEP 20

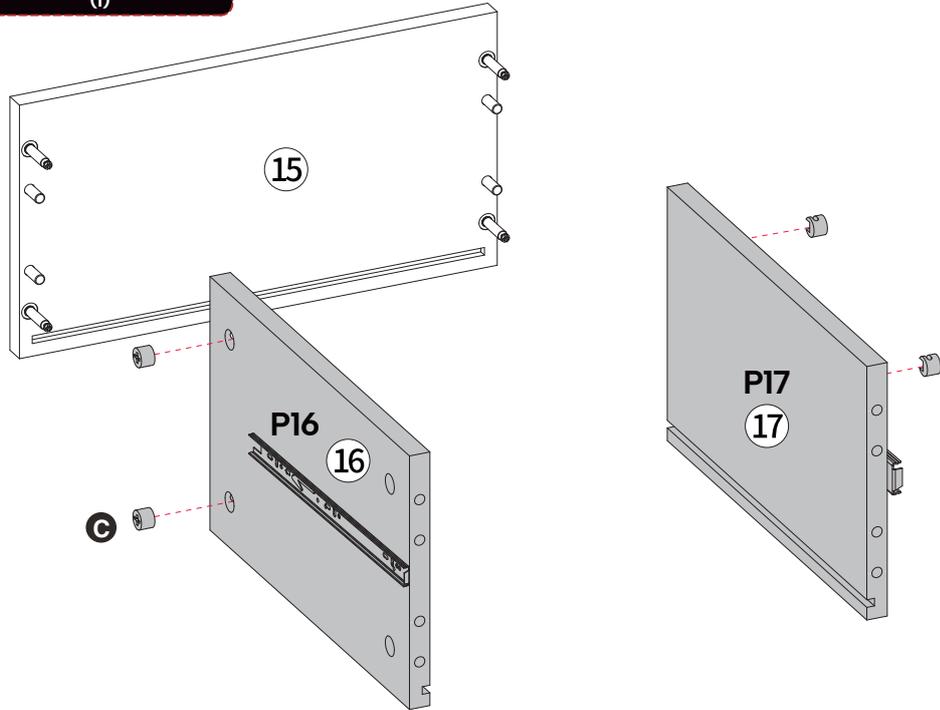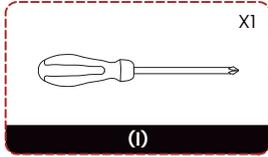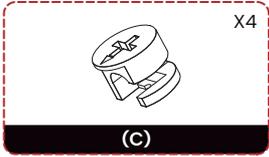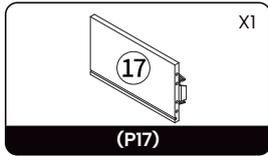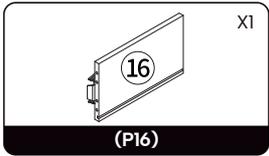




# STEP 21

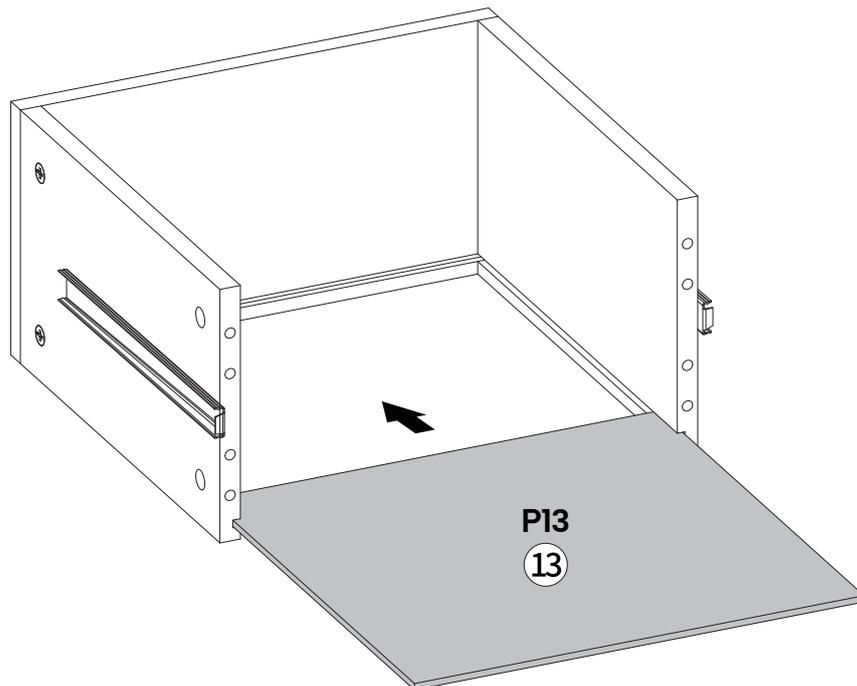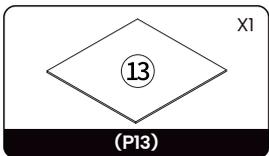

# STEP 22

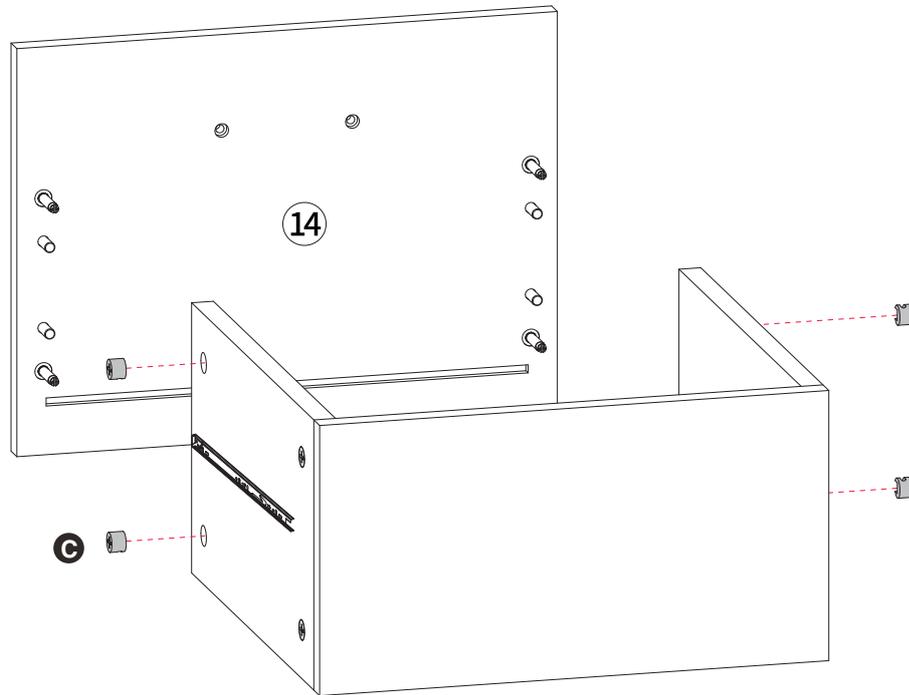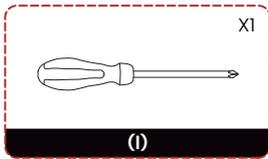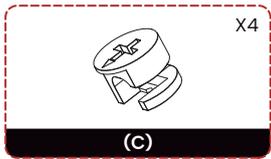


# STEP 23

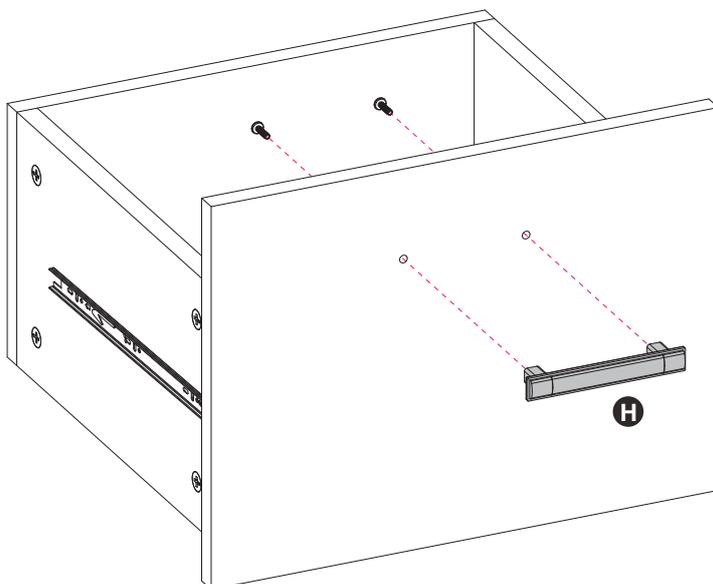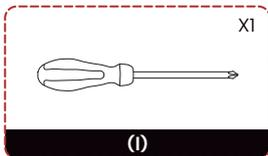
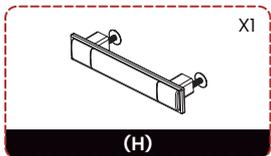


Screw out the screws before installing the handles.  
Dévissez les vis avant d'installer les poignées.  
Atornille los tornillos antes de instalar las manijas.  
先拧出螺丝再安装拉手。

# STEP 24

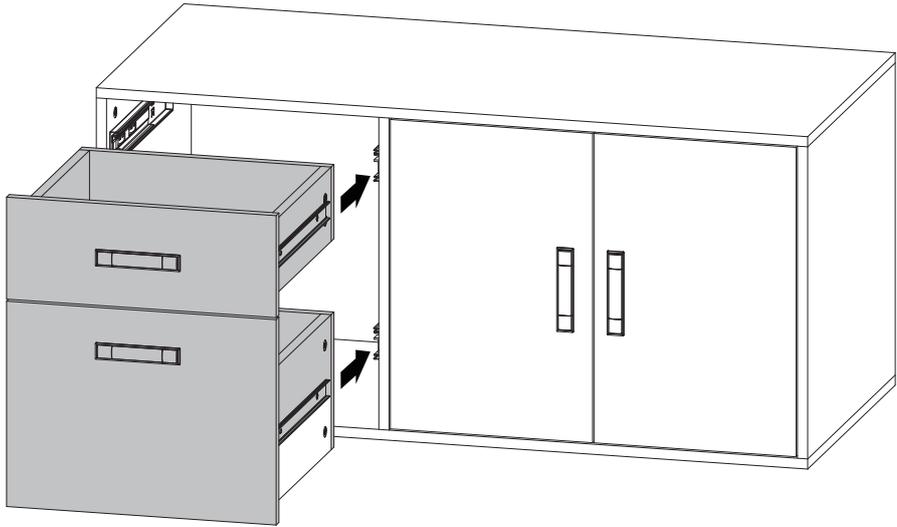


# STEP 25

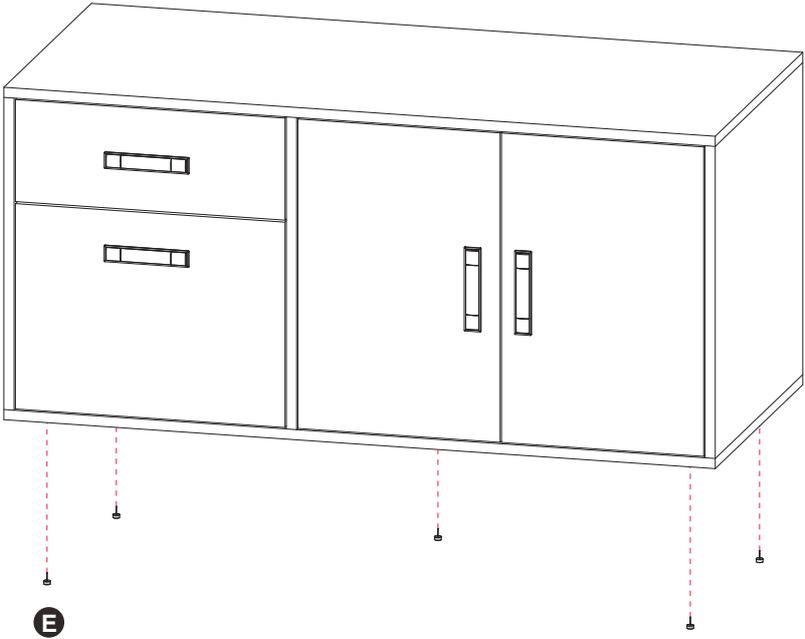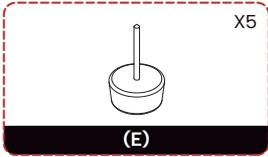













MODEL # ERK-ED87-GY-7

# ZEN EXECUTIVE DESK

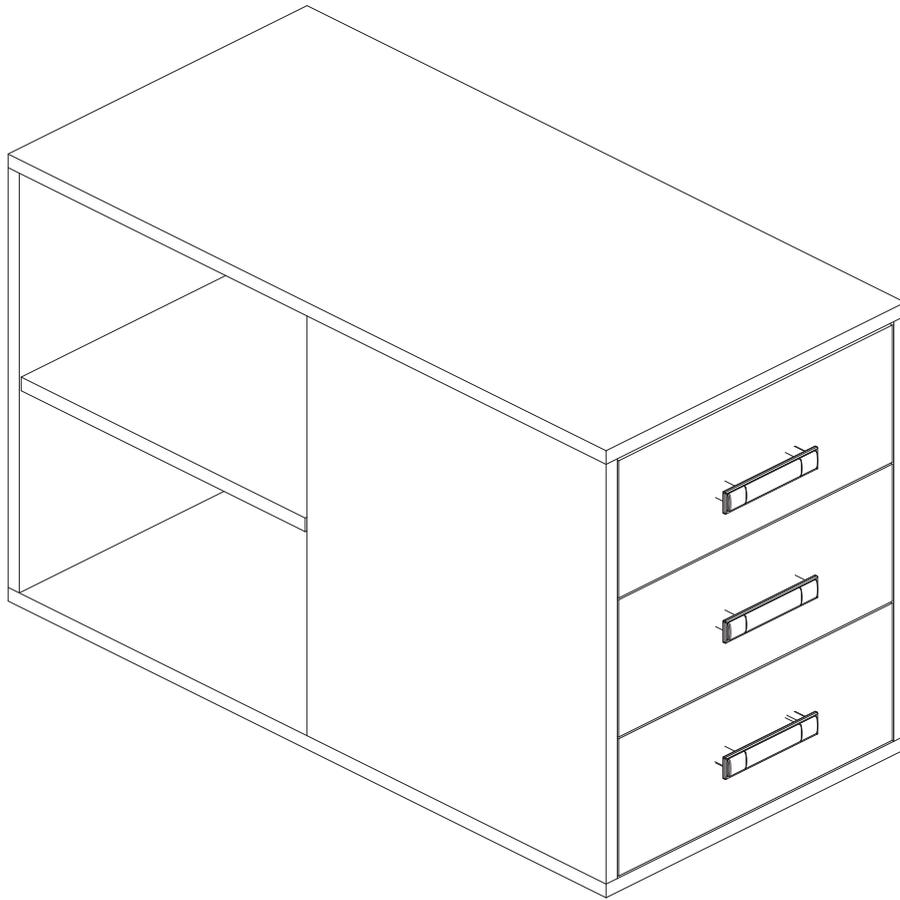

If you need to return the goods, please keep all the packaging materials and return it in the original packaging!  
Si vous devez retourner la marchandise, veuillez conserver tous les matériaux d'emballage et le retourner dans l'emballage d'origine!  
Si necesita devolver los productos, conserve todos los materiales de embalaje y devuélvalos en el embalaje original!  
如需退货请保留好所有包装材料，并按原包装包好退回!

# PARTS / PIÈCES / PARTES / 部件清单

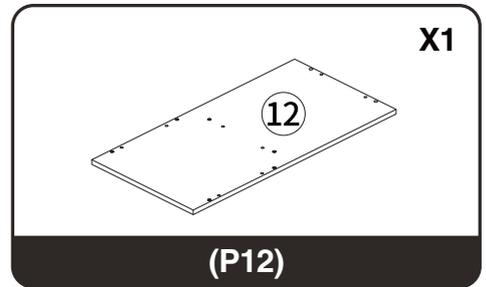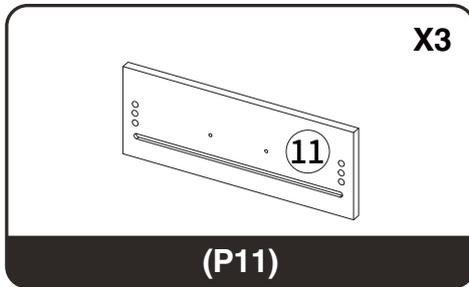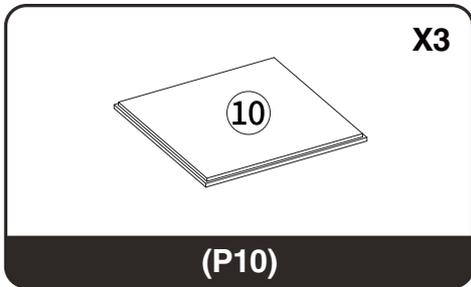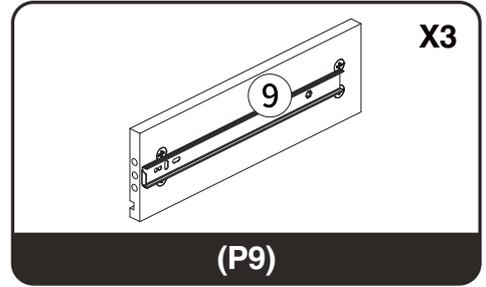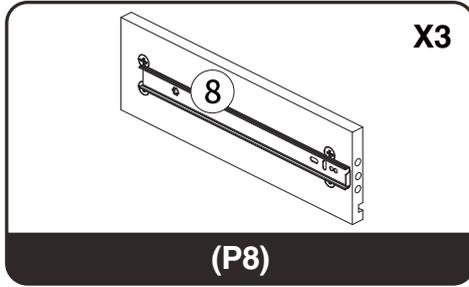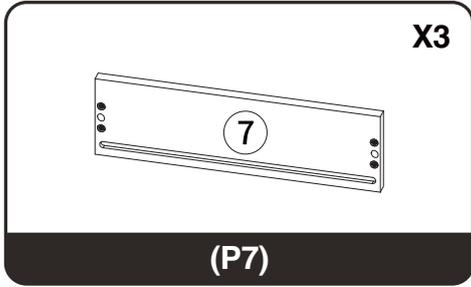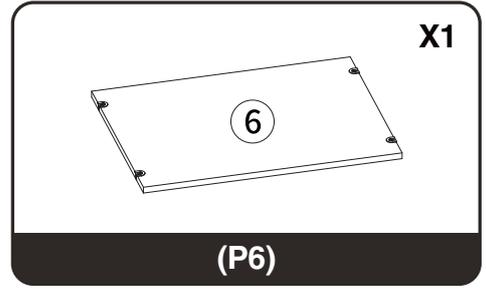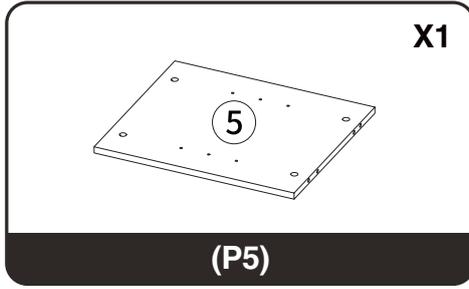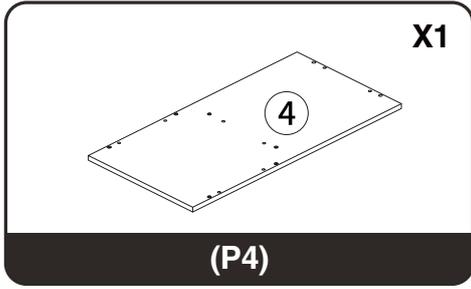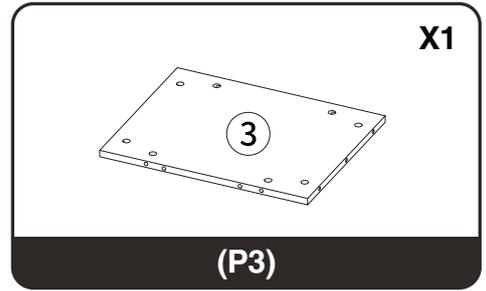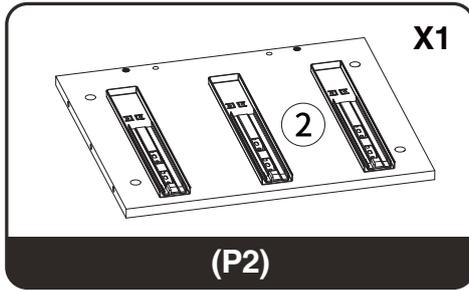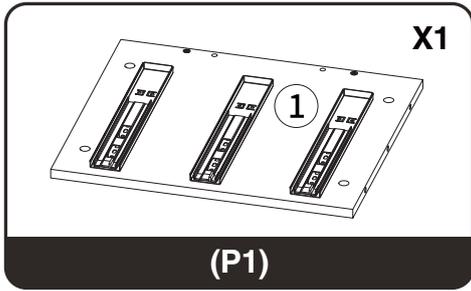

# HARDWARE / MATÉRIEL / HARDWARE / 配件清单

X36



(A)

X24



 
(B)

X44



(C)

X4




(D)

X6



(E)

X3

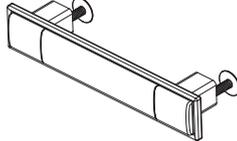

(F)

X1



(G)



Do not tighten the screws until all of them are screwed into the holes.  
Ne serrez pas les vis avant qu'elles ne soient toutes vissées dans les trous.  
No apriete los tornillos hasta que todos estén atornillados en los agujeros.  
安装时先不要把螺丝拧紧, 等所有螺丝都拧到螺纹孔上再将全部螺丝拧紧。









## ASSEMBLY INSTRUCTIONS

## INSTRUCTIONS DE MONTAGE






## INSTRUCCIONES DE MONTAJE

## 安装步骤




### STEP 1

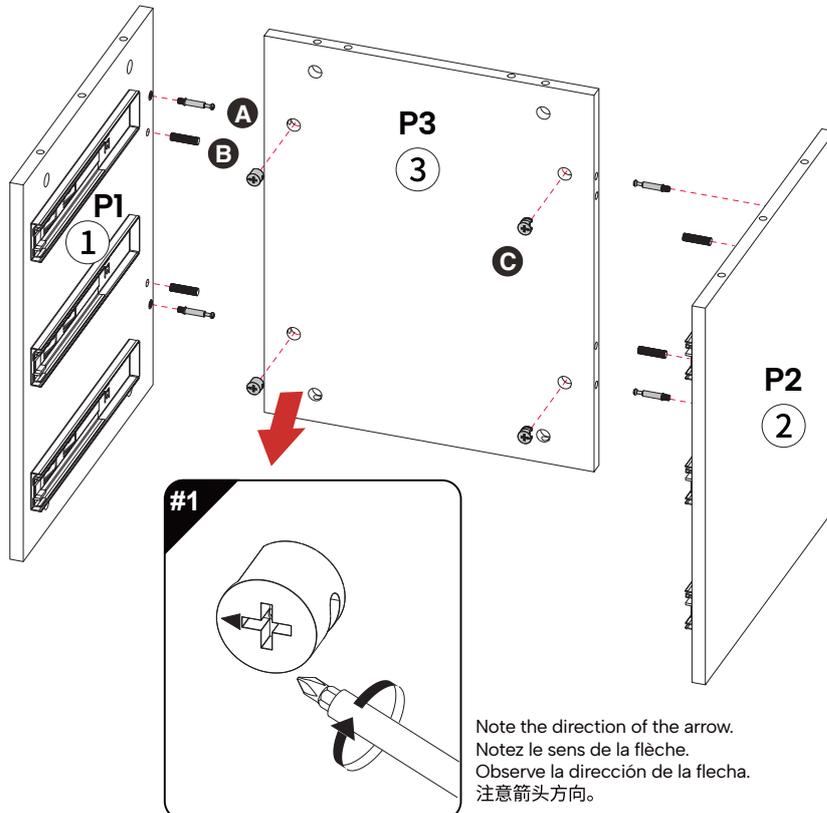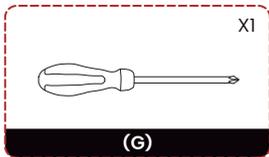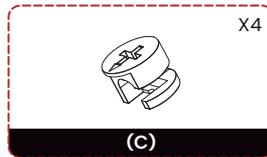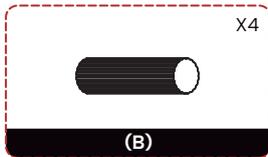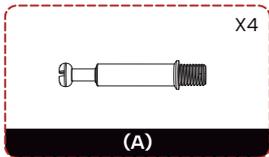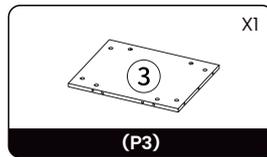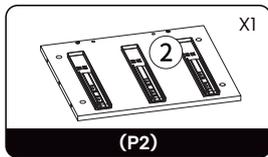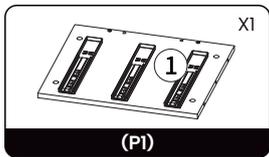







# STEP 2

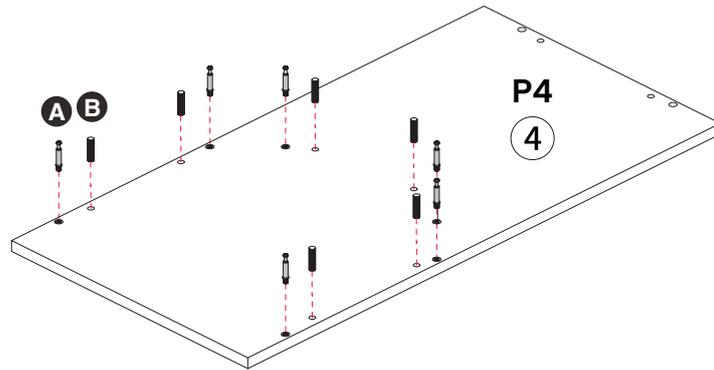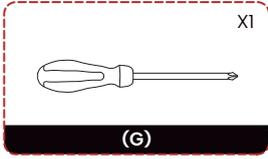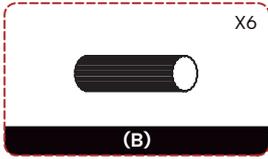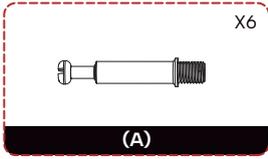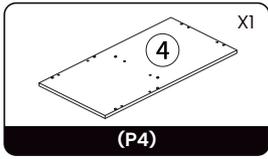





# STEP 3

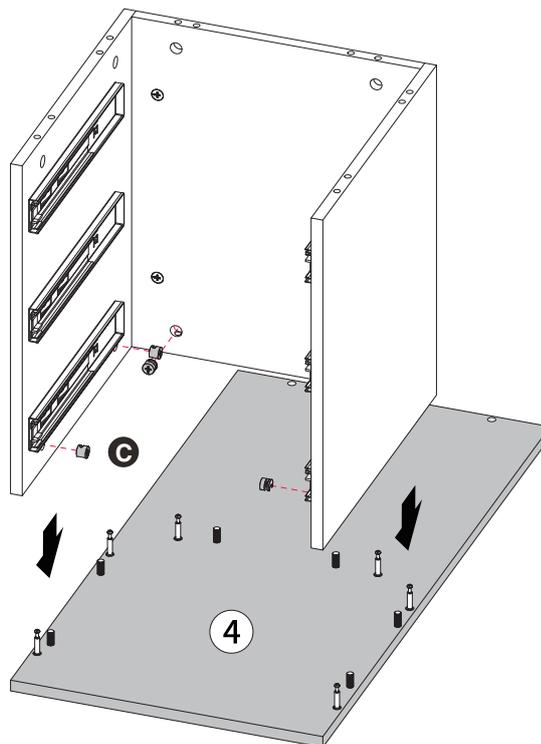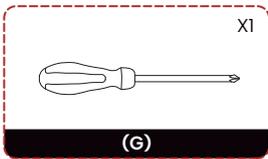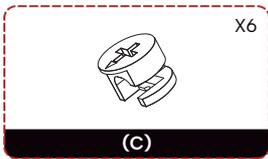







# STEP 4

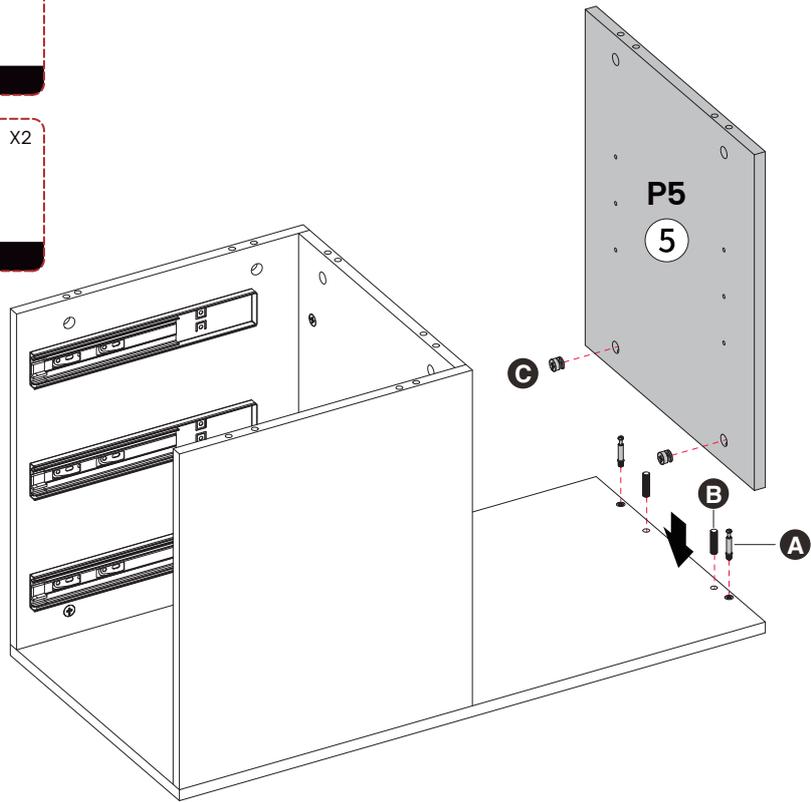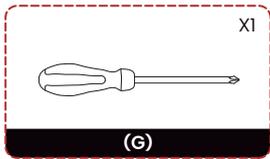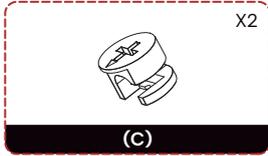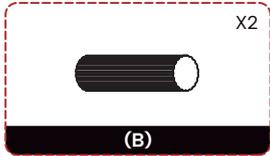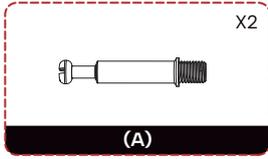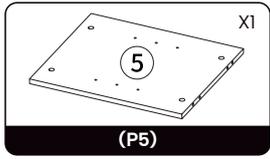







# STEP 5

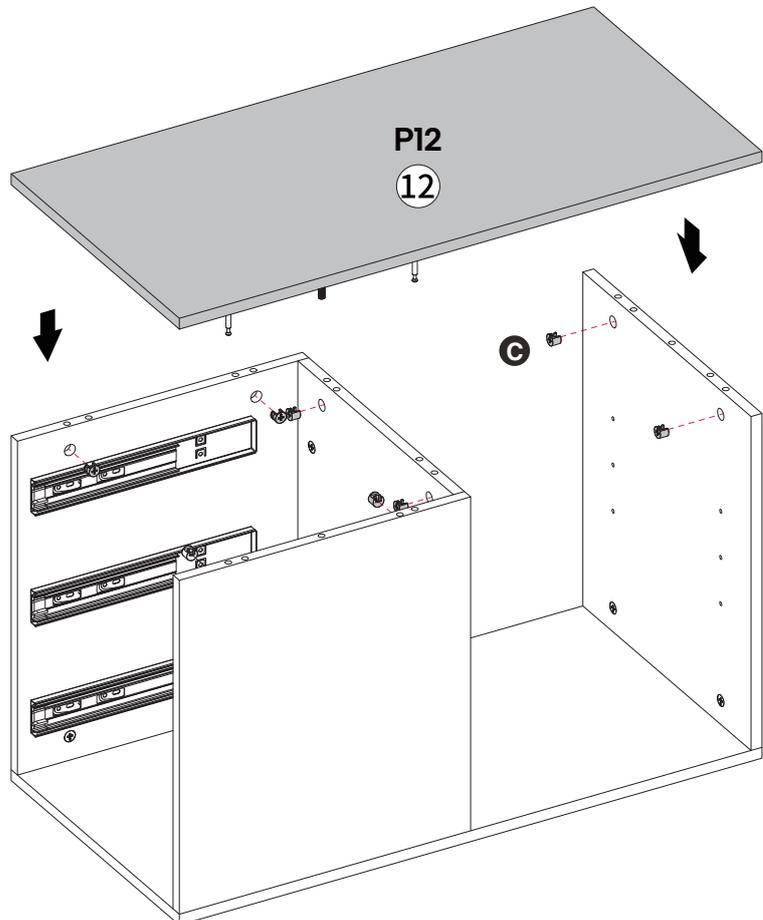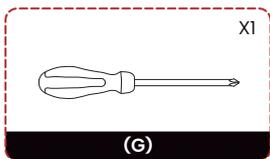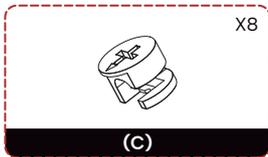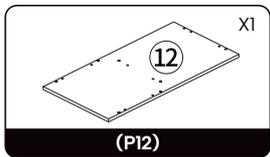






# STEP 6

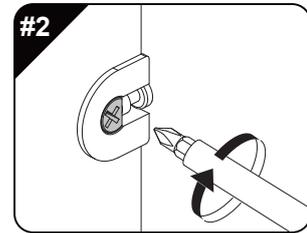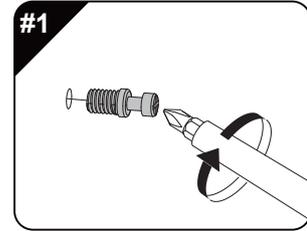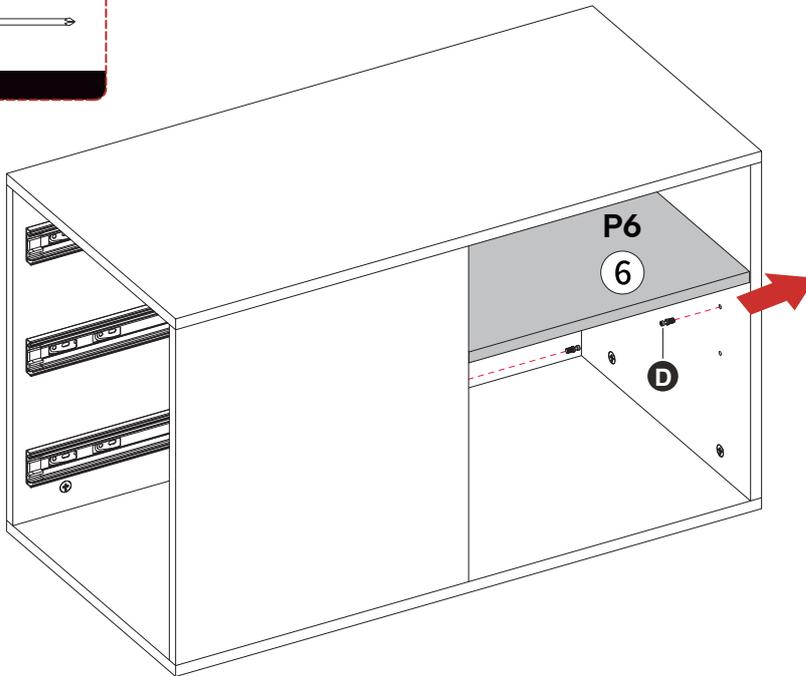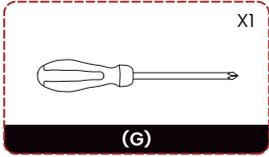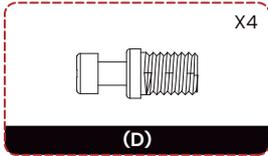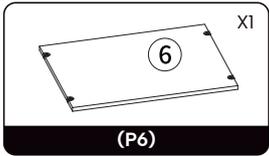



# STEP 7

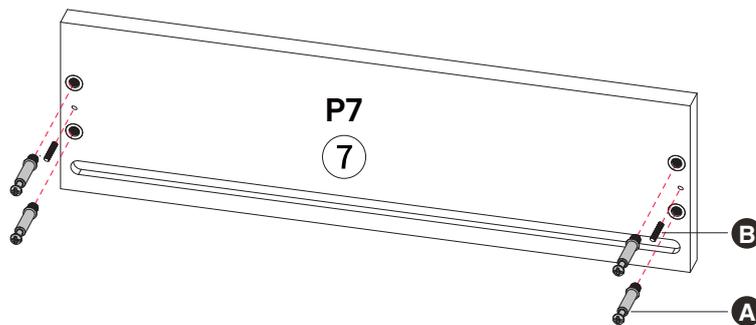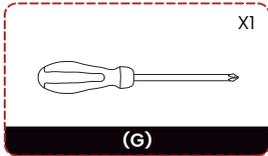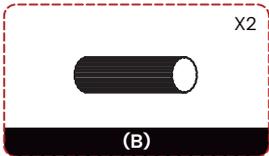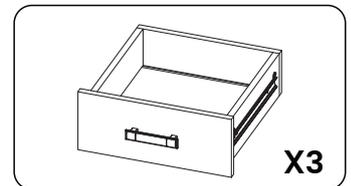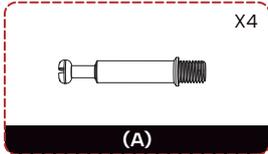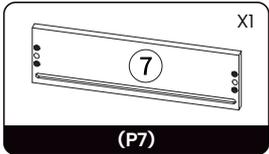







# STEP 8

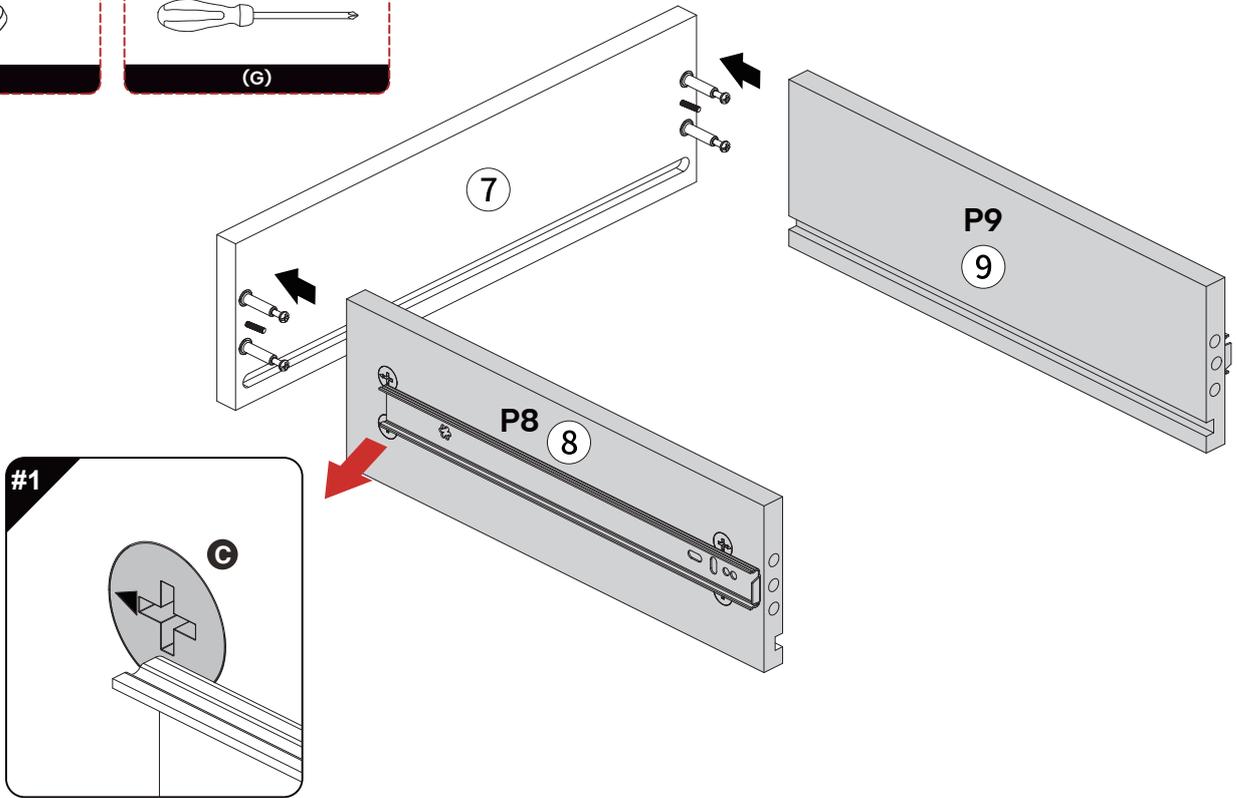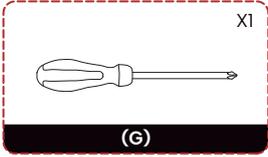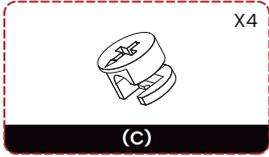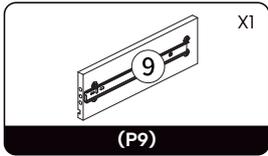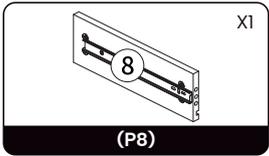




# STEP 9

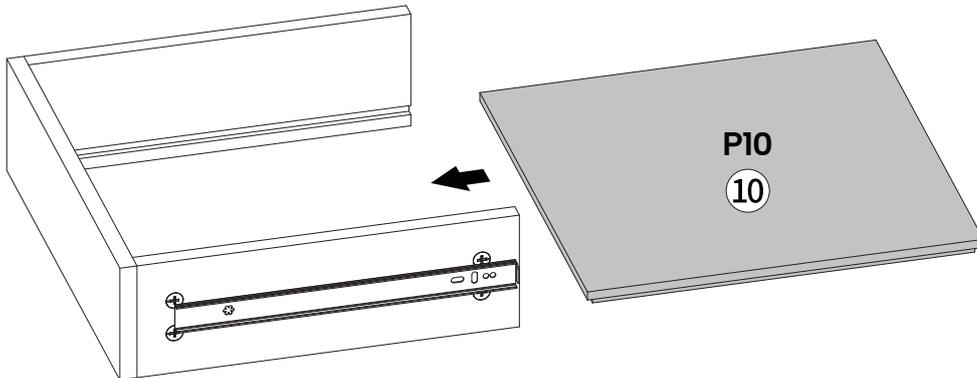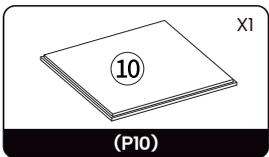

# STEP 10

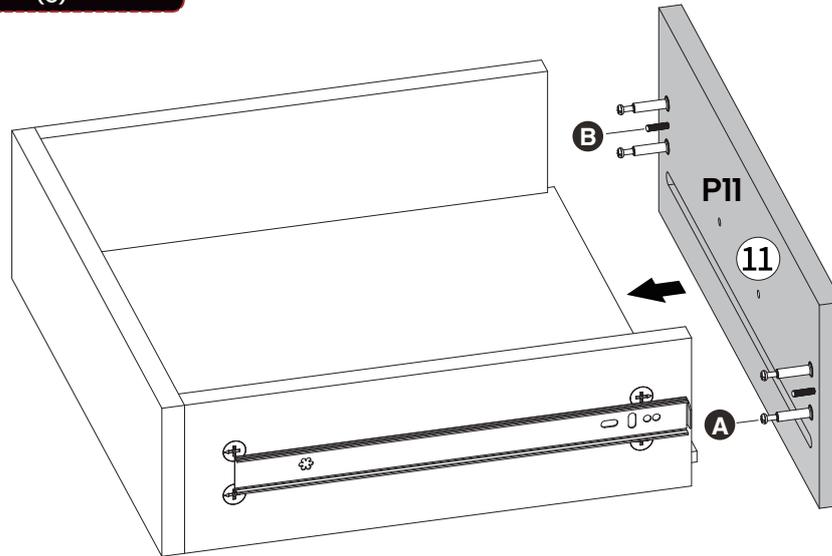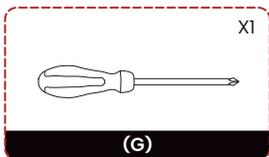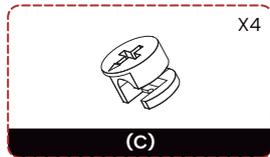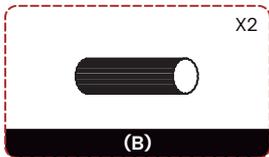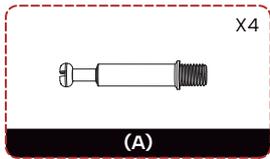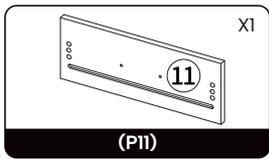


# STEP 11

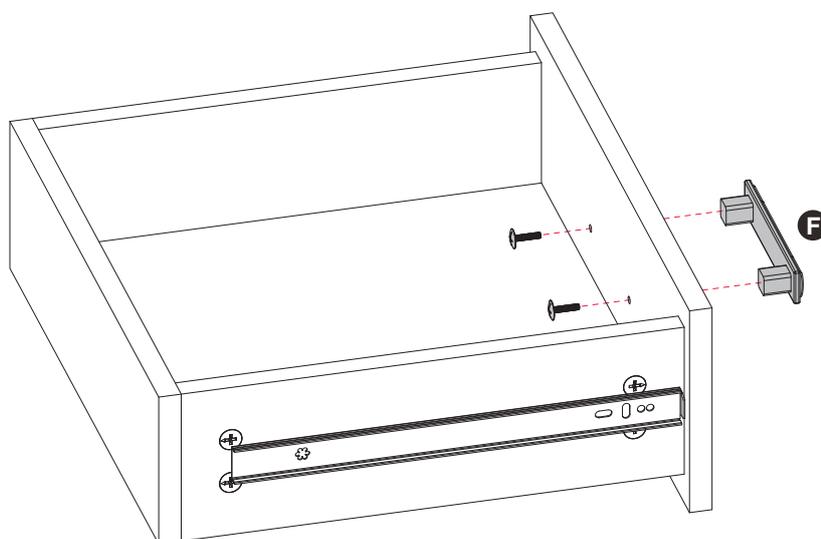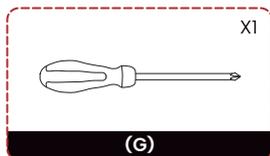
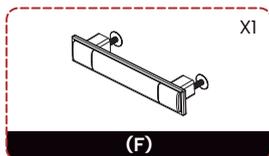


Screw out the screws before installing the handles.  
Dévissez les vis avant d'installer les poignées.  
Atornille los tornillos antes de instalar las manijas.  
先拧出螺丝再安装拉手。

# STEP 12

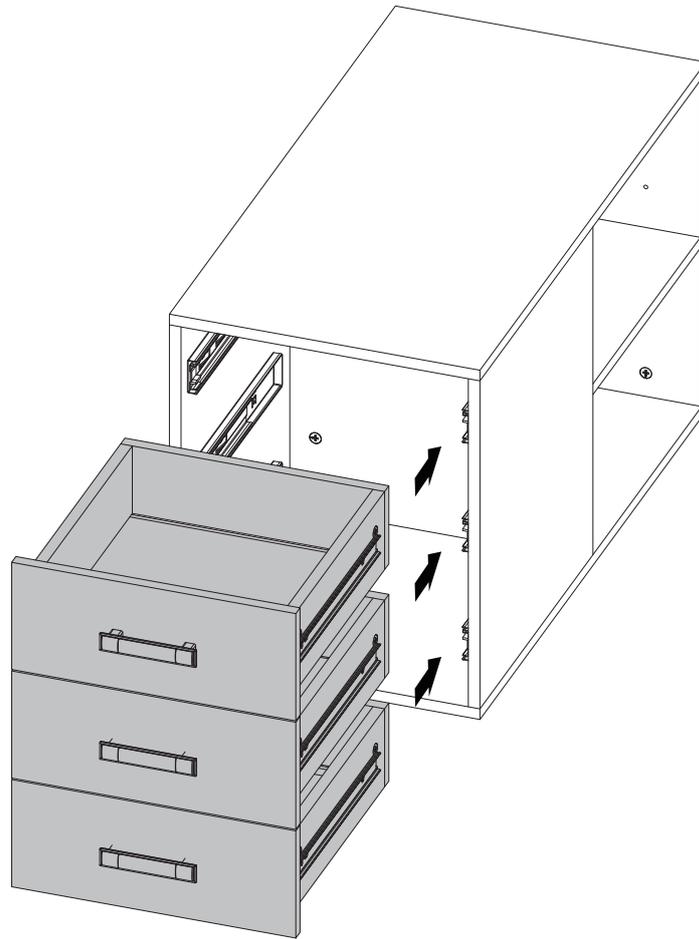

# STEP 13

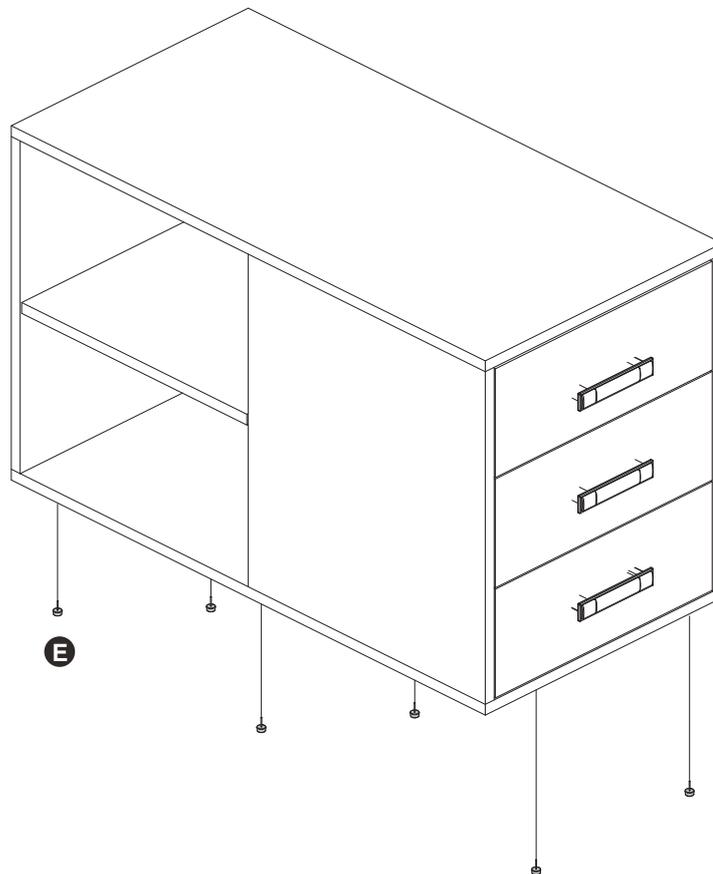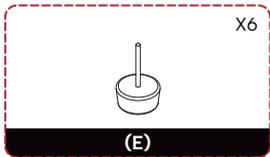



[www.eurekaergonomic.com](http://www.eurekaergonomic.com)