 



Components for Breakdown

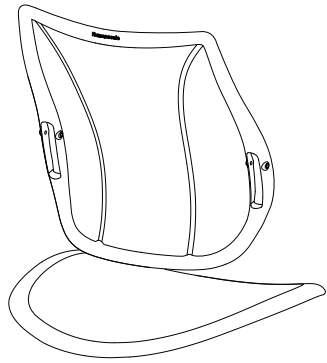


Back & Seat Shells



 Arm Pad & Seat Cushion

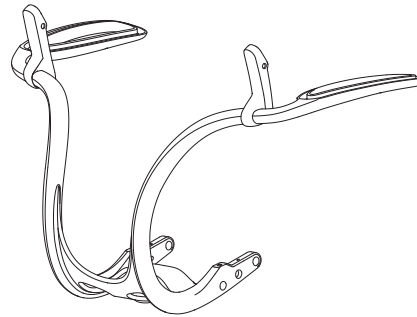

Support Frame

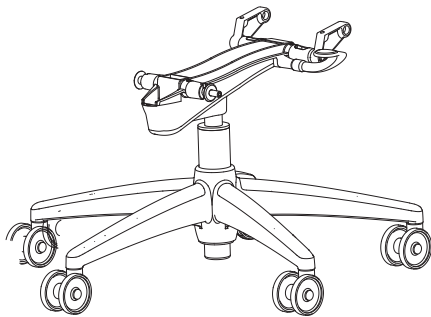 

Base

 


Gas Cylinder

Tools Required



Safety Glasses




Torx T-20, T-30 Driver




Standard Hex Key Set



 
Knife




Hammer

 

Flat Screwdriver

 

Phillips Screwdriver

 

Snap Ring Pliers

 


Pliers


Tools Required




Safety Glasses



Hammer

 

Knife

 


Flat Screwdriver



Pliers

1. Back Removal

 
Remove pins attaching the Back to Flex Frame.

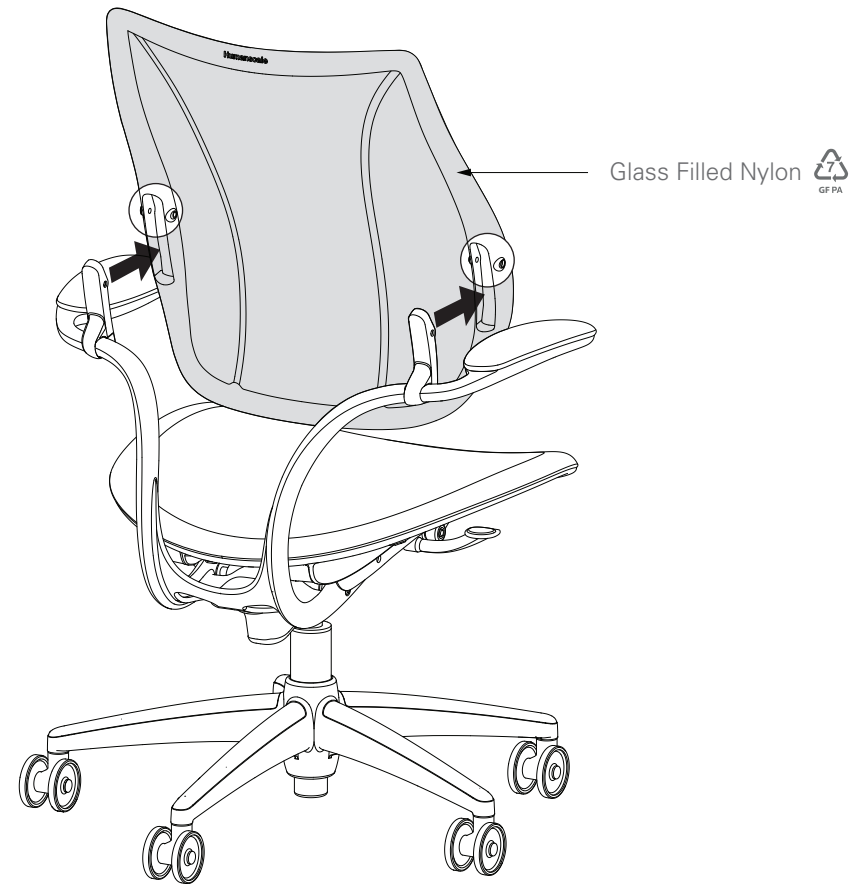


Tools Required



 Safety Glasses



Torx T-20 Driver

 


Phillips Screwdriver



Standard Hex Key Set

2. Seat Cushion & Arm Pad Removal

 
Using Torx/Flat Screwdriver remove screws and release cushion & arm pad.

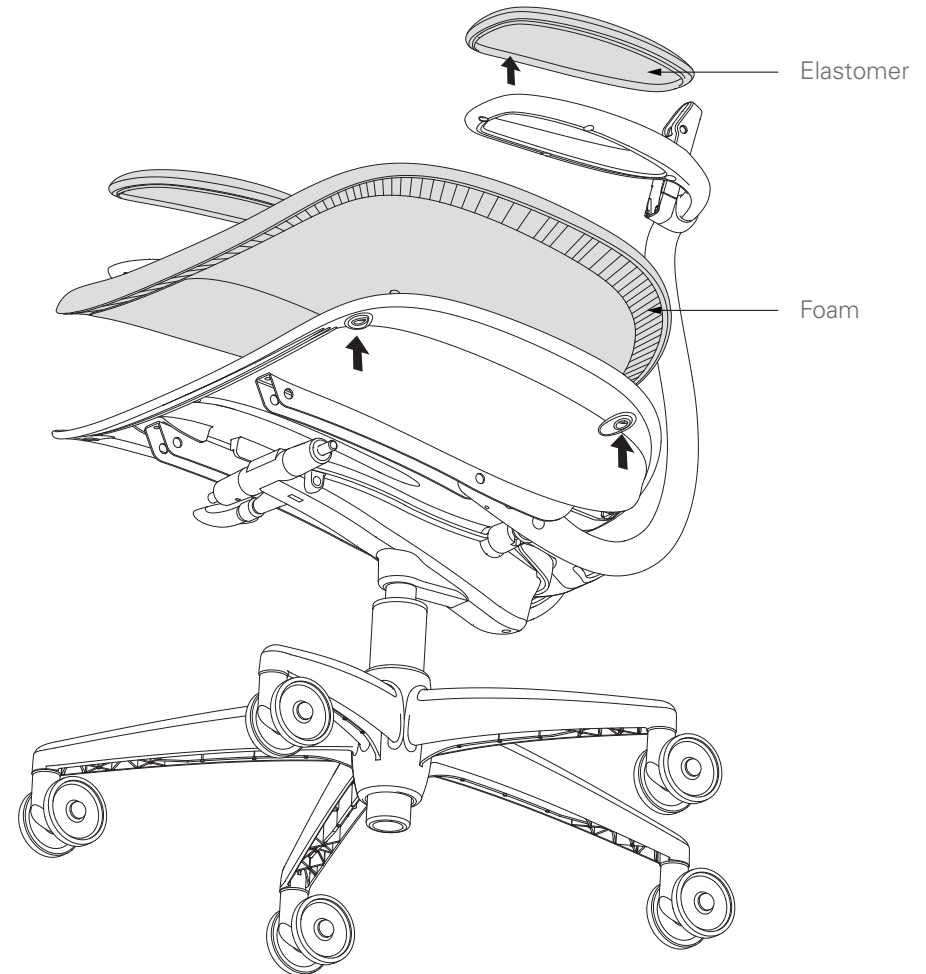

Tools Required



 Safety Glasses




Snap Ring Pliers

3. Seat Shell Removal

Remove pins from Seat Support Housing and remove Seat Shell.



 Glass Filled Nylon

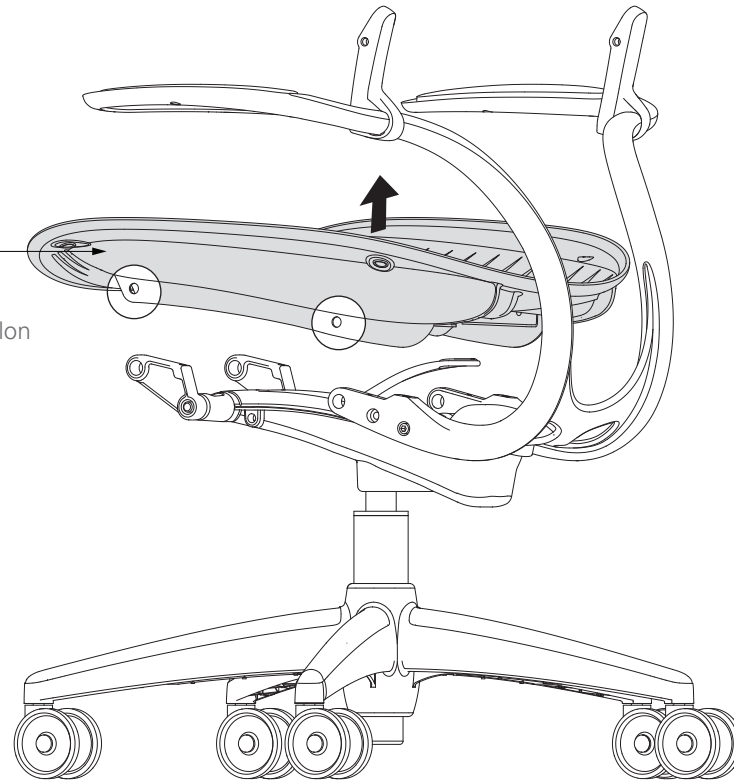

Tools Required



 
Safety Glasses



Standard Hex Key Set

4. Support Frame Removal

Remove pins and release frame support.

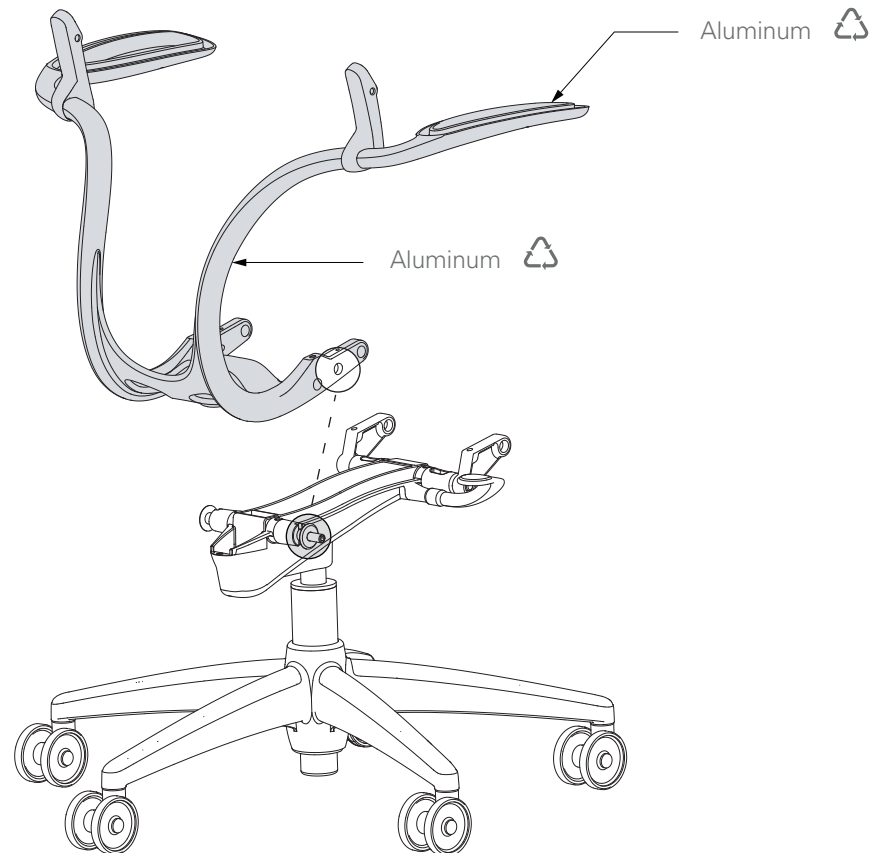

Tools Required



 
Safety Glasses



Standard Hex Key Set

5. Armrest Removal


Remove screws attaching the arms to the support frame.

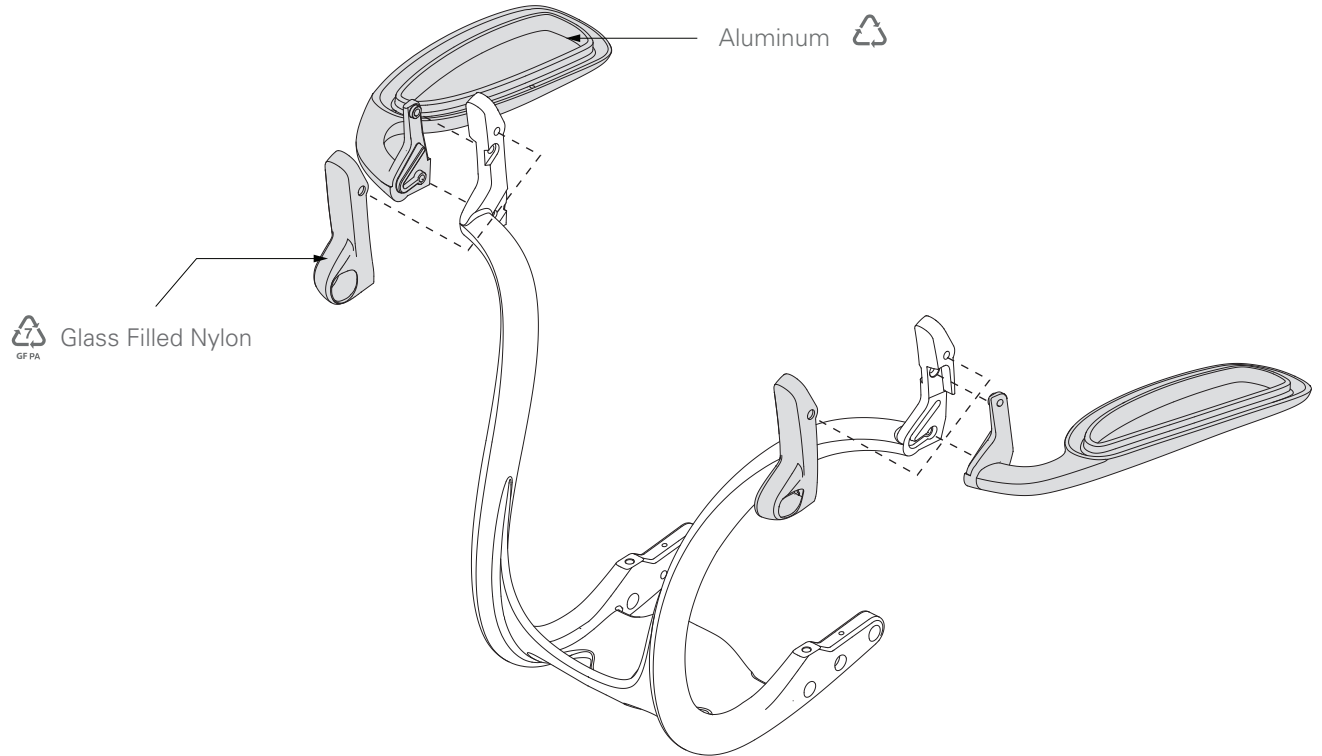

Tools Required



 
Safety Glasses



Flat Screwdriver



 Pliers



Hammer



Standard Hex Key Set

6. Housing, Base & Cylinder Removal

Remove Gas cylinder from housing and base as shown. Remove casters from base and place all in respective materials bin.

Note: Use care when handling the Gas cylinder. Avoid direct application of force using hammer, as it may damage the cylinder.

