

ARLEC

HALLOWEEN INFLATABLES

**SAFE LOW
VOLTAGE****WHITE LED****Internal Low
Voltage LEDs****Durable
Polyester Fabric****Self Inflates
In Minutes****Ideal For
Outdoor Use***

LVE610



LVE611



LVE612



LVE613



LVE614



LVE615



LVE616



LVE617



LVE618

* Your inflatable is suitable for indoor or outdoor use. The transformer must be kept under shelter. Deflate and store away in extreme weather conditions.

INSTALLATION INSTRUCTIONS

TRANSFORMERS AND KIT PRECAUTIONS

The transformers reduce mains voltage from 240V down to a safe low operating voltage. Please note that if the inflatable is used outdoors, the transformers must be kept under proper shelter or plugged in suitable weather protected power outlets.

- Always use the transformers that came with the kit operate it- check the labelling on the transformers matches with the inflatable.
- Do not use incorrect transformers as they can damage the fans and LEDs inside.
- Do not attempt to modify the wiring or 'cut to length'.
- Do not try to run more than one kit off a transformer or try to electrically interconnect two or more transformers.

- The transformers will run warm to touch, always keep it in a well-ventilated position. Do not cover it with carpet, soft furnishings or other materials.
- Keep transformers and 240V wiring at least 4 metres away from a pool or spa.
- Avoid using 'stacked' double adapters, use a power board instead to plug in several kits.
- This product requires two transformers to operate. It is recommended to connect the transformers to a power board or a dual outlet split leads.
- If you use an extension cord, use one that is fitted with 2 outlets. Use one with the right length for the purpose. Do not chain several extension cords or lie the cords in wet areas.

IMPORTANT!

Please read these instructions carefully. Keep these instructions in a safe place for future reference. Ensure there is proper ventilation between the two transformers.

The Arlec Inflatable figures are operated at safe low voltage with heavy-duty fans, suitable for indoor or outdoor use for festive occasions and parties. Deflate and store away the inflatable in extreme weather conditions.

WARNING. ALWAYS UNWIND CORD BEFORE USE

LIGHTS

Both the fan and LEDs are non-replaceable type, but have been manufactured to last for a long time.

INSTALLATION

1. Unpack the inflatable and transformers from the carton.
2. Unwind lead-in cable cords from the transformers.
3. Choose a location for the inflatable. If it is placed outdoors, it is recommended to secure the inflatable due to windy conditions.
4. To secure, use the stakes provided and insert them through the polyester hooks attached at the bottom of inflatable. For the polyester hooks attached to the inflatable body, use the provided ropes and secure them to the stakes firmly. Take care when using ladders for installation. Ensure that you have a stable footing and do not over reach.
5. The recommended angle for the ropes is 45° from top, as this provides the most balance for the inflatable.
6. In the event that you are setting up the inflatable on a hard surface, please use sandbags to secure.
7. Plug transformers supplied with this kit to mains socket outlets and turn the main switches ON. Tighten with weatherproof caps afterwards.
8. The figure will inflate to its right size. If it is not inflating, it is possible that the passage from the fans to the inflatable is obstructed. Turn the transformers off and adjust if required.

Note: Do not put your hands over the fans whilst it is inflating. Do not attempt to put any small objects through the fan grille. Keep out of reach of children as this product is not a toy.

MAINTENANCE AND CLEANING

- Only use mild detergent with cold water to wipe.
- Leave it inflated until it is completely dry.
- To store inflatable away, make sure to unplug, roll up and store in original package or similar size box.
- Do not attempt to wipe the motor.

REPAIR

- If the festive figure is not staying inflated even when the fan are working at full power, it is likely that there is a hole or tear in the inflatable.
- Track down the source of leak, turn the festive figure ON and examine the holes or tear.
- Small holes can be patched up with a tape. A thick clear packaging tape will work, as well as duct tape (not supplied with this kit).
- If you do not want the patch to be too noticeable, look for coloured duct tape that matches the particular inflatable part causing the issue.
- If the tape is not strong enough or holes are especially large, use a polyester patch (not supplied with kit). These patches can be obtained through your local craft & sewing supply stores. The polyester patch can be sewn onto the inflatable using needles and threads.
- Once the hole has been sealed, plug the unit and check.

WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law and all other applicable Australian and New Zealand laws that are unable to be excluded.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer with which this document is given that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has been maintained in accordance with the recommendations specified by Arlec, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

For goods purchased in Australia (only):

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For goods purchased in New Zealand (only):

The Warranty is in addition to, and does not affect, other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that can only be excluded under the New Zealand Consumer Guarantees Act 1993 to the extent you are acquiring the product for a business purpose and it would be fair and reasonable for Arlec to contract out of those guarantees.

Arlec's telephone number, address and email address for purposes of giving the Warranty are:

Telephone Number:

1800 826 859 (in Australia)

0800 003 329 (in New Zealand)

Street Address: Caribbean Park, 36 Lakeview Drive, Scoresby, Victoria 3179

Postal Address: Post Office Box 2596, Rowville, Victoria 3178

Email: cs@arlec.com.au