

WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law and all other applicable Australian and New Zealand laws that are unable to be excluded. Arlec also warrants to the original first purchaser of this product (you) from a retailer with which this document is given that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used or installed other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has been properly installed by a licensed electrician or contractor who is licensed to install electrical products in the place in which the product was installed and in accordance with Arlec's installation instructions, has been maintained in accordance with the recommendations specified by Arlec, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for, or installed in premises which are used for, commercial purposes (Warranty).

If you wish to claim on the Warranty, you must, at your own expense, return the product or that part of the product which you believe is defective in materials and workmanship, and provide proof of original purchase, your name, address and telephone number and a certificate of installation or other document required by law for the installation of electrical products in the place in which the product was installed issued by the licensed electrician or contractor who installed the product, to Arlec at the address below within 12 months from the date of purchase. Please note that the Warranty does not cover removal or re-installation of the product or that part of the product which you believe is defective. Arlec will assess any claim you may make on the Warranty

ARLEC

Arlec Australia Pty. Ltd. ACN 009 322 105 gives the Warranty for goods purchased from a retailer in Australia by you and Arlec New Zealand Limited NZBN 9429030738294 gives the Warranty for goods purchased from a retailer in New Zealand by you (collectively Arlec). Arlec's telephone number, address and email address for purposes of giving the Warranty are:

Telephone Number: 1800 826 859 (in Australia)
0800 003 329 (in New Zealand)

Street Address: Caribbean Park, 36 Lakeview Drive
 Scoresby, VIC 3179, Australia

Postal Address: PO Box 2596, Rowville, VIC 3178, Australia
 Email: cs@arlec.com.au

This product is not endorsed, sponsored, affiliated or approved by Amazon, Apple Inc or Google LLC. Amazon Alexa, App Store, Google Assistant and Google Play are registered trademarks of the above respective companies. © This instruction leaflet is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Arlec Electrical Company Limited.

in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense replace the product (or part of the product) with the same or similar product (or part of the product) or repair the product (or part of the product) and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

For goods purchased in Australia (only):

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For goods purchased in New Zealand (only):

The Warranty is in addition to, and does not affect, other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods may come with guarantees that can only be excluded under the New Zealand Consumer Guarantees Act 1993 to the extent you are acquiring the product for a business purpose and it would be fair and reasonable for Arlec to contract out of those guarantees.

ARLEC

USER MANUAL

Battery Powered Ribbon Light

LVX1774



IMPORTANT!

Please read these instructions carefully.

Keep these instructions in a safe place for future reference.

Test your ribbon light prior to being set up in the desired location.

KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE.

LIGHTS

The LEDs inside are non-replaceable LED types but have been manufactured to last for a long time. Please return to the place of purchase if the lights do not light up when powered.

GENERAL HANDLING AND INSTALLATION

1. Check that all LEDs in the ribbon light are operating before you begin installation.
2. Handle the ribbon light with care; do not allow heavy contact of light with hard surfaces.
3. The ribbon light can be left loose or can be mounted to an object, but should be secured at each end. This ribbon light is for indoor use only.
4. Ensure the ribbon light and transformer are not positioned where they can be inadvertently damaged by doors, moving objects, people or animals.
5. The ribbon light cannot be cut to size.
6. Take care if using ladders for installation. Ensure that you have a stable footing and do not over reach.
7. Lights should be kept out of reach of small children. Although the voltage is a safe low voltage, small children may tamper with the lights.
8. Mount the ribbon light out of reach of children, it should not be treated as a toy.
9. Do not cover the ribbon light as this may cause the ribbon light to overheat, melt or ignite.
10. Avoid bending it carelessly. Do not subject the ribbon light or lead-in cable to mechanical stress. Do not hang any fixed objects to the ribbon light. Always ensure that the ribbon light and lead-in cable are free from pull or torsion force.
11. Do not pierce the ribbon light or the lead-in cable with nails during the installation process.

OPERATION

Use the ON/OFF button on the battery box to turn the light set ON or OFF or to enable the timer function.

TIMER FUNCTION

1. Single press the button to enable timer function. It allows the light to turn on for 6 hours, then turn off for 18 hours in every 24 hours.
2. When you turn off the light by pressing the button three times, the timer will be disabled.

BATTERY REPLACEMENT

1. When the light becomes dim, the batteries need replacing.
2. Open the battery box.
3. Replace all the batteries with fresh batteries (Alkaline recommended).
4. Observe the correct polarities as marked when replacing the batteries.
5. Refit the cover.

CAUTION

- Do not leave spent batteries for long periods in the battery box.
- Do not mix any old or new battery types, replace all batteries at the same time.
- Remove batteries if the rope light is unlikely to be used for extended periods.
- Do not operate the unit in the box.
- Do not expose to direct heat or flame or submerge in water.
- If the light kit is damaged, it should be discarded appropriately.
- LEDs are non-replaceable. Do not attempt to remove them.
- **This is not a toy. Do not leave children unsupervised with this item.**