

WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law and all other applicable Australian and New Zealand laws that are unable to be excluded. Arlec also warrants to the original first purchaser of this product (“you”) from a retailer with which this document is given that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has been maintained in accordance with the recommendations specified by Arlec, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes (“Warranty”).

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec’s reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

For goods purchased in Australia (only):
The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For goods purchased in New Zealand (only):
The Warranty is in addition to, and does not affect, other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that can only be excluded under the New Zealand Consumer Guarantees Act 1993 to the extent you are acquiring the product for a business purpose and it would be fair and reasonable for Arlec to contract out of those guarantees.



Arlec Australia Pty. Ltd. ACN 009 322 105 (“Arlec”) gives the Warranty.

Customer Service: 1800 826 859
New Zealand Toll Free: 0800 003 329

Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130 Blackburn North LPO, P.O.
Box 1065, Blackburn North, 3130
Email: custservice@arlec.com.au

© This instruction leaflet is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Arlec Australia Pty Ltd (A.C.N. 009 322 105).



1500W / 2000W / 2400W

OIL HEATER

WITH ADJUSTABLE THERMOSTAT

OCH207TBK
1500W

OCH209TBK
2000W

OCH211TBK
2400W



USER MANUAL

FOR PERSONAL INDOOR USE ONLY

WARNING!

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY, READ,
UNDERSTAND AND FOLLOW INSTRUCTIONS BEFORE USING THIS HEATER

KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

- This heater becomes hot during operation. To avoid burns, do not let exposed skin come into contact with hot surfaces.
- Use the handles provided when moving this heater. Ensure combustible material, such as drapery and other furnishings, is at least 1 metre from the heater at all times.
- Unplug the heater when not in use.
- When in use, ensure, the power cord does not come into contact with the heater body. Completely unwind the power cord before first time use.
- Do not twist or kink the power cord as this may cause the insulation to weaken and split.
- Do not operate the heater with a damaged power cord or plug, if the heater has malfunctioned, or has been dropped or damaged in any manner. Return the heater to an authorised service representative for examination.
- This heater is designed only for indoor household use.
- Do not run the power cord under carpeting or cover the power cord with combustible material such as throw rugs runners.
- Keep the power cord away from traffic areas to avoid tripping hazards.
- Before inserting or removing the plug, switch the heater to the off position and turn the power off at the power outlet. Always remove the plug by holding the plug top. Do not pull the power cord.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage to the heater.
- To reduce the risk of fire, do not block the grilles in any manner.
- Do not use in areas where petrol, paint, or other flammable liquids are used or stored.
- The use of extension leads is not recommended. If this cannot be avoided, follow the manufacturer’s instructions provided with the extension lead. Caution must be taken to not exceed the ratings marked on the extension lead.
- Do not use this heater with any device that switches the heater on automatically, as a fire risk may exist if the appliance is covered or positioned incorrectly.
- To avoid a circuit overload when using this heater, do not operate another high-wattage product on the same electrical circuit. Make sure that your power outlet voltage and circuit frequency corresponds to the AC 220V-240V, 50Hz.
- Do not use the heater to dry clothes.
- To reduce the risk of fire, do not leave this heater unattended during use, especially when children or pets are present. Unplug the product from the power outlet when it is not in use.

- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of the heater, along with all packaging material and promotional labels.
- There are no user serviceable parts in the heater. Maintenance other than cleaning must be performed by an authorised service representative.
- For additional protection when using this product, you can install a residual current device (safety switch). A safety switch with a rated residual operating current not exceeding 30mA is recommended for installation in the electrical circuit supplying power to the heater. Contact a suitably qualified electrical contractor for advice.
- To avoid electric shock, do not touch this heater with any part of the body that is damp or wet.

CAUTION

- Only Operate this heater in the upright position.
- When heater is not in use, store in a cool, dry location.
- Do not store until the heater cools down.

WARNING

- The heater must not be located immediately below a power outlet.
- Do not use this heater within the vicinity of a bath, shower or swimming pool.
- This product must be connected to an earthed socket-outlet of AC 220V-240V, 50Hz.
- The heater is designed for indoor household use only.
- In order to avoid overheating, do not cover the heater. All items must be at least 1 metre from the top, bottom, front, sides and rear of the heater.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the heater by a person responsible for their safety.
- The heater is filled with a precise quantity of special oil. Repair requiring opening of the oil container must only be conducted by authorised service representative.
- When disposing of the heater, please contact your local council for any special requirements regarding safe disposal of the oil.



Fig.1

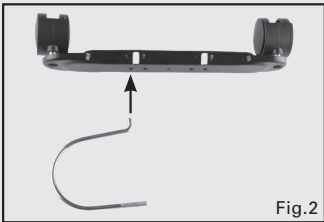 


Fig.2



Fig.3



Fig.4



Fig.5

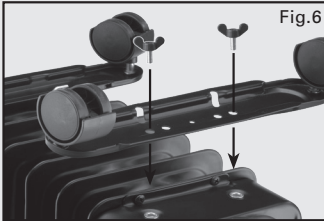 


Fig.6

ASSEMBLY INSTRUCTIONS

Do not operate the heater without the wheel base assemblies in place. The heater must always be used in the upright position. Remove any promotional material or any packaging from the heater.

1. Ensure the heater is switched off and unplugged, then turn the heater upside down. **(Fig.1)**
2. Insert the curved end of the U-bolt into one of the holes in the base of the wheel assembly. **(Fig.2)**
3. Place the wheel assembly between the fins. **(Fig.3 & 4)**
4. Hook the U-bolt around the circular joint between the fins and insert into the second hole in the wheel assembly. Use the wing nut provided to tighten and position securely. **(Fig 5)**
5. Repeat the above steps to secure the second wheel assembly to the two rear fins.

FOR OCH 207TBK ONLY.

Place the base plate on the bottom of the control panel and align the 2 x holes. Tighten 2 x Screws securely. **(Fig 6)**

OPERATING INSTRUCTIONS

1. Unwind the cord to it’s full length and place the heater on a firm, level surface in a stable, upright position.
2. Visually inspect the air inlets and outlets to ensure that there are no blockages.
3. Turn the thermostat knob to the minimum position and set the power switch to OFF. Then insert the plug into a suitable wall outlet (10Amp).
4. Turn the power switch from “0” to either “I” (Minimum heating), “II” (Medium heating) or “III” (Maximum heating). When the heater is set to ‘Maximum Heating’, it will operate at this level for 10 minutes. After 10 minutes, the level will automatically drop to low heat setting & continue to operate at this power until the heater is turned off.
5. Turn the thermostat knob clockwise to maximum position, once the room temperature rises to comfortable level, To maintain the ambient temperature, turn the knob anti-clockwise until you the indicator light turns off. The heater will turn off, but will automatically turn back on when it detects that the ambient temperature has decreased. To lower the temperature, turn the knob further anti-clockwise. To increase the temperature, turn the knob further clockwise.

Note: There may be some non-harmful odour emitted from the heater initially. This is normal during the break-in period or after long-term storage. Place the heater is used in a well- ventilated area and continue running it until the odour disappears.

 
Note: The time duration 10 minutes will vary on lower or higher end depending on the room temperature and the temperature of the oil.

Note: To avoid overloading a circuit do not plug the heater into a circuit that already has other appliances working.

Caution: Make sure there is nothing flammable or heat sensitive within 1 metre (40 inches). Operating the heater in any other position could cause a hazard

Warning: This product generates heat during operation. Proper precautions must be taken to prevent the risk of burns, scalds, fire or other damage to individuals or property.

TIMER OPERATION

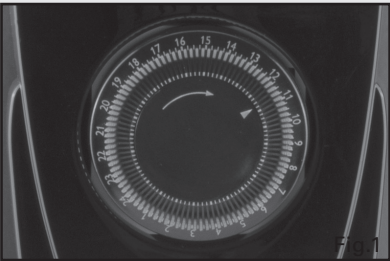

- Each red slider represents 15 minutes.
- Push the sliders outwards to turn ON the heater.
- Push the sliders inwards to turn OFF the heater.

To set the timer:

- Rotate the dial clockwise until it corresponds to the current time (based on the 24hr clock).
- To keep the heater ON for a certain amount of time and then switch OFF automatically at the desired time, move the relevant sliders outwards.
- Example: If it is 5pm (17:00), turn the dial clockwise until the number 17 aligns with the arrow indicator. To turn ON the heater for 60 minutes at 5pm and then automatically switch off at 6pm, move the 4 red sliders on the timer dial between 17 and 18 outwards. Once the set time is elapsed the heater will be turned OFF.

Caution: Never rotate the dial anti-clockwise as it will damage the mechanism inside the timer.

Note: The timer remains effective while the heater is plugged in to the main power. If the heater is disconnected from the main power, or if there is a power failure, the timer will need to be reset.

Power Settings	OCH207TBK	OCH209TBK	OCH211TBK
Low	700W	1000W	1000W
Medium	800W	1000W	1400W
High	1500W	2000W	2400W

SAFETY CUT-OFF

THERMAL PROTECTIVE DEVICE

The heater has an overheat protection system that shuts off the heater in the event of overheating.

If the heater stops working:

1. Turn off the heater and inspect the air inlets and outlets for blockages.
2. Unplug the heater and wait for it to cool (approximately 30 minutes).

If the unit does not restart, the permanent thermal fuse has operated, and the unit will not function. Do not attempt to operate the unit, since the overheat protection system cannot be reset by the user. Do not open the unit and rest by yourself. There are no user serviceable parts inside.

TIP OVER SWITCH

This heater incorporates a tip over switch. If the unit is tilted or knocked over the power will be cut automatically. When the heater is returned to the upright position, it will function normally.

MAINTENANCE AND CLEANING

1. Before cleaning, turn off the heater, unplug it from the power outlet and allow the heater to cool (approximately 30 minutes).
2. Carefully wipe the exterior of the heater with a soft damp cloth and dry thoroughly with a dry cloth.

Note: Do not immerse the power cord, plug or heater into water or any liquid or pour water or any other liquid over the heater.

3. Over time, dust may accumulate. This can be removed by wiping with a damp cloth, or by using the brush attachment on your vacuum cleaner.
4. Make sure that the heater is dry before plugging it back into the power outlet.

Any other servicing should be performed by an authorized service representative. Do not use the heater if it has malfunctioned or become damaged in any way. When the heater is not in use, store in a cool dry location. Do not store until the heater is cool.

DISPOSAL OF THE UNIT

At the end of its working life, do not dispose of the heater with your household waste. Observe any local requirements regarding appropriate disposal or recycling of electrical goods. Contact your local authorities for advice regarding recycling facilities in your area.

TECHNICAL SPECIFICATIONS			
Model	OCH207TBK	OCH209TBK	OCH211TBK
Rated Power	1500W	2000W	2400W
Rated Frequency	50Hz	50Hz	50Hzv
Voltage	220-240V~	220-240V~	220-240V~