

ARLEC

QUICK START GUIDE

PFOOI

AUTOMATIC PET FEEDER



IMPORTANT!
PLEASE READ THESE INSTRUCTIONS CAREFULLY

ARLEC

1 PRODUCT OVERVIEW

This programmable automatic pet feeder can be easily customized to suit you and your pet's needs, whether you are at home or not. It can be programmed using an integrated LCD control panel to accommodate a 24-hour period, automatically dispensing convenient, portion-controlled meals for your pets up to 8 times a day.

 
2 IN THE BOX

- 1x Pet feeder
- 1x USB Power cable
- 2x Adhesive safety locks
- 1x Instruction manual


Tips:

Dry and solid pet food only, recommended food diameter between 5 to 10mm.

For Indoor use only

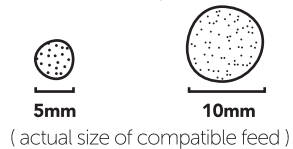**ARLEC**

 3 PRODUCT STRUCTURE

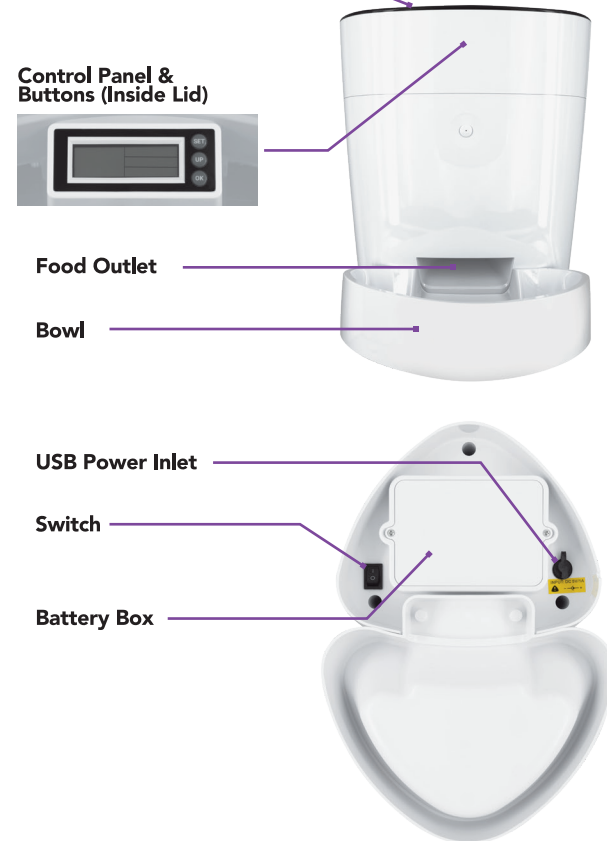Lid**Control Panel & Buttons (Inside Lid)****Food Outlet****Bowl****USB Power Inlet****Switch****Battery Box**



4 BATTERY INSTALLATION

Always use 3 good quality 1.5V alkaline D cell batteries. This will ensure the best performance of your automatic pet feeder. This product is not designed for use with rechargeable batteries.

1. Please turn off the device before you change the battery.
2. Use the screwdriver to open the battery compartment.
3. Insert 3 x D batteries. Ensure the +/- symbols on the batteries match the symbols on the unit itself.
4. Put the battery cover back and tighten the screws.

5 POWER SWITCH

■ When ON, ○ When OFF.

6 USB POWER INLET

A USB cable is provided inside the package. Please choose a 5Vdc 1.0A power source.

7 PRODUCT ASSEMBLY

Attention: all assembly parts must be locked into position before use.


- Locking the lid to the food barrel: Place the lip on the top of the barrel and push it down to lock it into position.
- Installing the bowl to the base: Insert pins of the bowl into two pillars beneath the base. Press down to lock the bowl.




8.1 PROGRAMMING OPERATION

A. Local time setting, number of daily meals selective.


Turn on the device first, then press the **SET** button (Step 1), and HOUR will flash. Set the current hour by pressing the **UP** button (Step 2). Please press **OK** to confirm (Step 3).

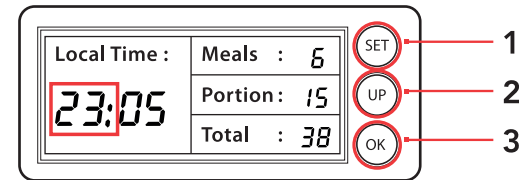

Further, the MINUTE will flash. Press the **UP** button (Step 4) until the correct minute is selected. Then press **OK** to confirm (Step 5).

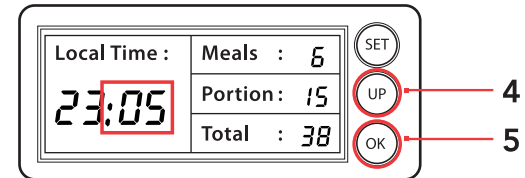

After the time is set, then the MEALS will flash. Press the **UP** button (Step 6) to select the number of meals to serve per day. If "6" is chosen, it means there will be 6 meals served per day. **You may select up to 8 meals per day.** After you select the desired number of meals to be served per day, press **OK** (Step 7) to confirm.

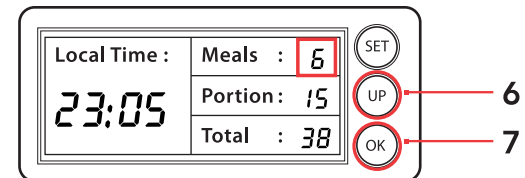

ARLEC

8.2 PROGRAMMING OPERATION


B. Set the feeding time and the portion of each meal

Note: you may select up to 15 portions. 1 portion is about 15g of dry food.

Example: you select 3 meals per day, 8 portions for each meal.


B1. Setting the first meal:

After setting the desired number of meals to 3 and pressing OK, "A-1" will show. Then setting the feeding time for the first meal (Please refer to part A). After finishing the time setting, the PORTION will flash, select the number of the portion you want by pressing the UP button. Then press OK to confirm. In this example, we press the UP button 8 times and press the OK button.

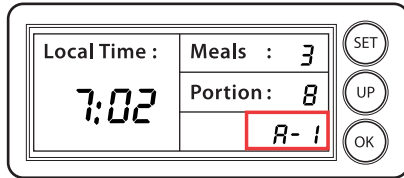

B2. Setting the second meal:


After setting the first meal, "A-2" will show. Please repeat the steps in B1, then press OK to confirm.

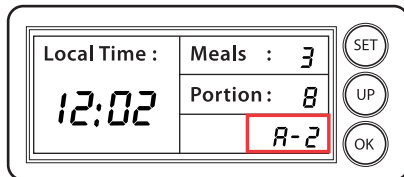**ARLEC**

8.3 PROGRAMMING OPERATION

B3. Setting the third meal:

After setting the second meal, "A-3" will show. Please repeat the steps in B1, then press OK to confirm. Now the LCD screen stops flashing, and the feeding schedule is setting successfully. The program is back to Normal mode.

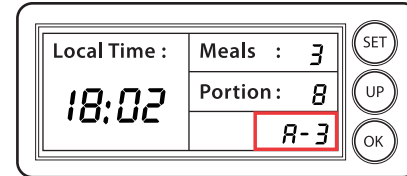


C. Manual feeding

You can also operate the device manually. Simply just press the OK button in normal mode and the pet feeder will release one portion of food for one button press.

D. Total portion calculation

As you can see "TOTAL" section is shown on the LCD screen. It records the total number of meals this pet feeder has served from start.

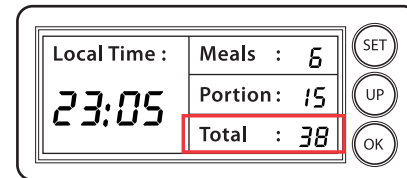

9 BATTERY REPLACEMENT

- When the LCD screen becomes vague, the batteries need to be changed
- Repeat the above Battery installation part to replace all new fresh batteries.


Note: your programming information is stored and will not be lost when you switch off or replace batteries. But you need to reset the current time once your product is powered up.



APPENDIX A -SAFETY LOCK INSTALLATION

Large, persistent or excited pets may be able to access the hopper. To prevent unintentional feed access it is recommended to use the safety locks (provided). Excessive food consumption may be harmful to your pet. Install as per the installation instructions below. Replace the adhesive should the safety locks show signs of failing adhesive over time. Make sure to secure the safety locks after refilling the hopper.

Peel the adhesive backing off the safety locks and apply them to either side of the hopper, ensure the hooks firmly secure the lid as shown below.

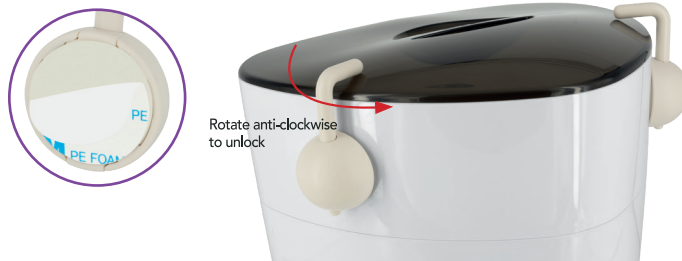

CAUTIONS

- Do not mix any old or new battery types, replace all the batteries at the same time.
- Please use alkaline-type batteries only. Do not use any rechargeable batteries for this product.
- Observe the correct polarities as marked when inserting the batteries. Do not short-circuit the power supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire, as may leak or explode.
- It's not a toy, keep it out of reach of small children.
- Hand clean with a slightly damp cloth. Do not soak or submerge the product in water.
- Remove all tags and packaging before using this product.
- Inspect the product every time before use. Immediately discontinue use, and discard if any parts of this product are broken or contain any sharp edges.
- Do not insert fingers, tools, or any other objects into the hopper.
- Always supervise your pet and monitor its chewing habits. Do not allow your pet to swallow, damage, chewing any parts of this product.
- Always keep away from open flames or other heat sources to avoid fire risks.
- Your pet's health and safety are your responsibility, please take care of your pet.



WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law and all other applicable Australian and New Zealand laws that are unable to be excluded.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer with which this document is given that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has been maintained in accordance with the recommendations specified by Arlec, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

For goods purchased in Australia (only):

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For goods purchased in New Zealand (only):

The Warranty is in addition to, and does not affect, other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that can only be excluded under the New Zealand Consumer Guarantees Act 1993 to the extent you are acquiring the product for a business purpose and it would be fair and reasonable for Arlec to contract out of those guarantees.

Arlec Australia Pty. Ltd. ACN 009 322 105 gives the Warranty for goods purchased from a retailer in Australia by you and Arlec New Zealand Limited NZBN 9429030738294 gives the Warranty for goods purchased from a retailer in New Zealand by you (collectively Arlec).

Arlec's telephone number, address and email address for purposes of giving the Warranty are:

Telephone Number:

1800 826 859 (in Australia) • 0800 003 329 (in New Zealand)

Street Address:

Caribbean Park, 36 Lakeview Drive, Scoresby, Victoria 3179, Australia

Postal Address:

Post Office Box 2596, Rowville, Victoria 3178, Australia

Email: cs@arlec.com.au

[illegible]

