

CARE & CLEANING

- Ensure fixture is turned off when cleaning. Allow to cool before handling.
- Do not use harsh abrasive or solvent on any part of the fixture.
Clean only with a dilute mild detergent on a damp cloth.

PRODUCT WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law and all other applicable Australian and New Zealand laws that are unable to be excluded.

Arlec also warrants to the original first purchaser of this product (you) from a retailer with which this document is given that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used or installed other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has been properly installed by a licensed electrician or contractor who is licensed to install electrical products in the place in which the product was installed and in accordance with Arlec's installation instructions, has been maintained in accordance with the recommendations specified by Arlec, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for, or installed in premises which are used for, commercial purposes (Warranty).

If you wish to claim on the Warranty, you must, at your own expense, return the product or that part of the product which you believe is defective in materials and workmanship, and provide proof of original purchase, your name, address and telephone number and a certificate of installation or other document required by law for the installation of electrical products in the place in which the product was installed issued by the licensed electrician or contractor who installed the product, to Arlec at the address below within 12 months from the date of purchase. Please note that the Warranty does not cover removal or re-installation of the product or that part of the product which you believe is defective.

Arlec will assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense replace the product (or part of the product) with the same or similar product (or part of the product) or repair the product (or part of the product) and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

For goods purchased in Australia (only):

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For goods purchased in New Zealand (only):

The Warranty is in addition to, and does not affect, other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods may come with guarantees that can only be excluded under the New Zealand Consumer Guarantees Act 1993 to the extent you are acquiring the product for a business purpose and it would be fair and reasonable for Arlec to contract out of those guarantees.

Arlec Australia Pty. Ltd. ACN 009 322 105 gives the Warranty for goods purchased from a retailer in Australia by you and Arlec New Zealand Limited NZBN 9429030738294 gives the Warranty for goods purchased from a retailer in New Zealand by you (collectively Arlec).

ARLEC

Arlec Australia Pty. Ltd. ACN 009 322 105 gives the Warranty for goods purchased from a retailer in Australia by you and Arlec New Zealand Limited NZBN 9429030738294 gives the Warranty for goods purchased from a retailer in New Zealand by you (collectively Arlec).

Arlec's telephone number, address and email address for purposes of giving the Warranty are:

Telephone Number: 1800 826 859 (in Australia)
0800 003 329 (in New Zealand)

Street Address: Building 3, 31-41 Joseph Street,
Blackburn North, Victoria, 3130, Australia

Postal Address: Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130, Australia

Email: custservice@arlec.com.au

© This instruction leaflet is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Arlec Electrical Company Limited.

ARLEC

PUSH ACTIVATED LED BAR LIGHT

UC511



Instruction Manual

IMPORTANT!
PLEASE READ THESE
INSTRUCTIONS CAREFULLY.

INTRODUCTION

The Push-Activated LED Bar Light is a simple solution for providing additional illumination in cabinets, wardrobes and other small areas. The product is battery-powered and comes with adhesive for easy DIY installation.

WARNINGS

- This product is designed for DIY use.
- Read these instructions prior to installation and use.
Please retain the instructions for future reference.
- This product is for indoor use only.
- Ensure the fixture is mounted properly before energising.
- **There are no user replaceable components in this fixture.**
Do not attempt to access internal components.
- **Not suitable for use near flammable liquids, vapour, gases or in explosive environment.**

SPECIFICATIONS

MODEL	UC511
Power	3 x 1.5V AAA batteries
Colour Temperature	6500K (Cool White)
CRI	≥ 80
Dimensions (L x W x H)	150 mm x 34mm x30 mm
Operating Environment	For Indoor Use Only

INSTALLATION

1. Make sure the surface for installation is clean and dry.
2. Remove the battery cover by simultaneously pressing the two clips on the back cover down. Install the 3 x AAA batteries and replace the cover.
3. Fix the light using the adhesive provided on the mounting plate.
4. Once installation is finished, turn ON the light by pressing the push switch.
5. To change batteries, remove the fixture from the mounting plate by sliding. Remove the battery cover as mentioned before and replace all batteries together with 3 x AAA batteries.

