

# **BSV series**

0.5-10 HP

@ 3450 RPM



**IMPORTANT! - Read all instructions in this manual before operating or servicing a pump.**

Before installation, read the following instructions carefully. Failure to follow instruction and safety information could cause serious bodily injury, death and/or property damage. Each Barmesa product is carefully inspected to insure proper performance. Closely following these instructions will eliminate potential operating problems, assuring years of trouble-free service.

**⚠ DANGER** Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

**⚠ WARNING** Indicates an imminently hazardous situation which, if not avoided, MAY result in death or serious injury.

**⚠ CAUTION** Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.

**IMPORTANT! - Barmesa Pumps is not responsible for losses, injury or death resulting from failure to observe these safety precautions, misuse, abuse or misapplication of pumps or equipment.**



**ALL RETURNED PRODUCTS MUST BE CLEANED, SANITIZED, OR DECONTAMINATED PRIOR TO SHIPMENT, TO INSURE EMPLOYEES WILL NOT BE EXPOSED TO HEALTH HAZARDS IN HANDLING SAID MATERIAL. ALL APPLICABLE LAWS AND REGULATIONS SHALL APPLY.**

**⚠ WARNING** Installation, wiring, and junction connections must be in accordance with the National Electric Code and all applicable state and local codes. Requirements may vary depending on usage and location.

**⚠ WARNING** Installation and servicing is to be conducted by qualified personnel only.



Keep clear of suction and discharge openings. Do not insert fingers in pump with power connected; the rotating cutter and/or impeller can cause serious injury.



Always wear eye protection when working on pumps. Do not wear loose clothing that may become entangled in moving parts.



**⚠ DANGER** Pumps build up heat and pressure during operation. Allow time for pumps to cool before handling or servicing the pump or any accessory items associated with or near the pump.



**⚠ DANGER** This pump is not intended for use in swimming pools or water installations where there is human contact with pumped fluid.



**⚠ DANGER** Risk of electric shock. To reduce risk of electric shock, always disconnect pump from power source before handling any aspect of the pumping system. **Lock out power & tag.**

**⚠ WARNING** Do not use these pumps in water over 104 °F. Do not exceed manufactures recommended maximum performance, as this could cause the motor to overheat.



**⚠ DANGER** Do not lift, carry or hang pump by the electrical cables. Damage to the electrical cables can cause shock, burns or death. **Never** handle connected power cords with wet hands. Use appropriate lifting device.

**⚠ WARNING** Ground Fault Circuit Interrupter (GFCI) to be used with plug-in type power cord.



**⚠ DANGER** Failure to permanently ground the pump, motor and controls before connecting to power can cause shock, burns or death.



**⚠ DANGER** These pumps are not to be installed in locations classified as hazardous in accordance with the National Electric Code, ANSI/NFPA 70.

**⚠ WARNING** The Uniform Plumbing Code (UPC) states that sewage systems shall have an audio and visual alarm that signals a malfunction of the systems, that are required to reduce the potential for property damage.

**IMPORTANT! - Prior to installation, record Model Number, Serial, Amps, Voltage, Phase and HP from pump name plate for the future reference. Also record the Voltage and Current Readings at Startup:**

Model Number: \_\_\_\_\_


Serial: \_\_\_\_\_

Amps: \_\_\_\_\_ Volts: \_\_\_\_\_

Phase: \_\_\_\_\_ HP: \_\_\_\_\_

|                                      |                                                                                                                                                                          |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>DISCHARGE:</b>                    | 2", 3" & 4" NPT elbow, vertical.                                                                                                                                         |
| <b>SPHERICAL SLD HNDLG:</b>          | 1.35" (35 mm) for 2" discharge and 1.75" (45 mm) for 3" & 4" discharge                                                                                                   |
| <b>LIQUID TEMPERATURE:</b>           | 104 °F (40 °C) max.                                                                                                                                                      |
| <b>VOLUTE:</b>                       | 316 series stainless steel                                                                                                                                               |
| <b>MOTOR HOUSING:</b>                | 316 series stainless steel                                                                                                                                               |
| <b>SEAL PLATE:</b>                   | 316 series stainless steel                                                                                                                                               |
| <b>IMPELLER:</b>                     | 8 vane, semi-open <i>Vortex</i> . 316 series stainless steel.                                                                                                            |
| <b>SHAFT:</b>                        | 316 series stainless steel                                                                                                                                               |
| <b>HARDWARE:</b>                     | 316 series stainless steel                                                                                                                                               |
| <b>GASKET:</b>                       | Buna-N & Viton®                                                                                                                                                          |
| <b>PAINT:</b>                        | Air dry enamel, water based.                                                                                                                                             |
| <b>SEAL:</b>                         | Double mechanical, oil lubricated. Upper part of carbon-ceramic, lower part of silicone carbide. Viton® elastomer and stainless steel spring.                            |
| <b>CORD ENTRY:</b>                   | 33 ft (0.5-7.5 HP) & 40 ft (10 HP) of neoprene cord                                                                                                                      |
| <b>BEARINGS:</b>                     | Ball, single row, permanently oil lubricated for 60,000 hours of work. Designed for radial and axial loads.                                                              |
| <b>MOTOR:</b>                        | 1 & 3 phase, 115, 230 & 460 volts, 60 Hz, 3450 RPM. For continuous duty, with protector IP68 in winding, insulation class B. Built-in capacitor for single phase motors. |
| <b>HANDLE/<br/>LIFTING BAIL:</b>     | Nylon and/or 316 stainless steel                                                                                                                                         |
| <b>HANDLE/<br/>MAX. SUBMERGENCE:</b> | 32.8 ft (10 meters)                                                                                                                                                      |

► 0.5 - 1 HP

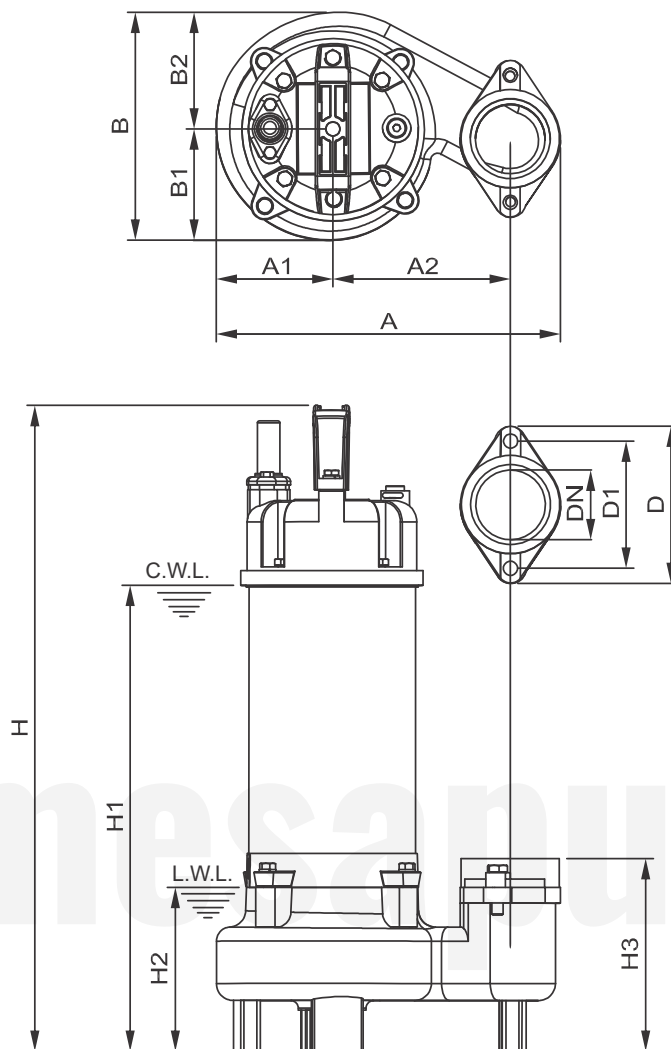

| MODEL      | HP  | VOLTS | PHASE | MAX. AMPS | Ø DISCHARGE | DISCHARGE MAX. (m) | MAX. FLOW (GPM) | CORD (ft) | SPH SLD HNDLG |
|------------|-----|-------|-------|-----------|-------------|--------------------|-----------------|-----------|---------------|
| 2BSV-051DS | 0.5 | 115   | 1     | 8         | 2"          | 11                 | 88              | 33        | 1.35"         |
| 2BSV-054DS | 0.5 | 460   | 3     | 1.4       | 2"          | 11                 | 88              | 33        | 1.35"         |
| 2BSV-101DS | 1   | 115   | 1     | 12        | 2"          | 14                 | 118             | 33        | 1.35"         |
| 2BSV-102DS | 1   | 230   | 1     | 6         | 2"          | 14                 | 118             | 33        | 1.35"         |
| 2BSV-103DS | 1   | 230   | 3     | 4         | 2"          | 14                 | 118             | 33        | 1.35"         |
| 2BSV-104DS | 1   | 460   | 3     | 2         | 2"          | 14                 | 118             | 33        | 1.35"         |



- Built-in capacitor for single phase motors.

| MODEL      | A | A1 | A2  | B   | B1  | B2  | D   | D1  | DN | H    | H1   | H2  | H3  | WT 1PH | WT 3PH |
|------------|---|----|-----|-----|-----|-----|-----|-----|----|------|------|-----|-----|--------|--------|
| 2BSV-051DS | 9 | 3  | 4.7 | 5.9 | 2.8 | 3.2 | 4.3 | 3.5 | 2  | 16.7 | 11.7 | 4.6 | 5.4 | 28.6   | 28.6   |
| 2BSV-054DS |   |    |     |     |     |     |     |     |    |      |      |     |     |        | 27.3   |
| 2BSV-101DS | 9 | 3  | 4.7 | 5.9 | 2.8 | 3.2 | 4.3 | 3.5 | 2  | 17.9 | 12.9 | 4.6 | 5.4 | 33.9   | 33.9   |
| 2BSV-102DS |   |    |     |     |     |     |     |     |    |      |      |     |     |        | 34.5   |
| 2BSV-103DS |   |    |     |     |     |     |     |     |    |      |      |     |     |        |        |
| 2BSV-104DS |   |    |     |     |     |     |     |     |    |      |      |     |     |        |        |

- Dimensions in inches.

\* WT = Weight in pounds, without cable.

► 2 - 3 HP

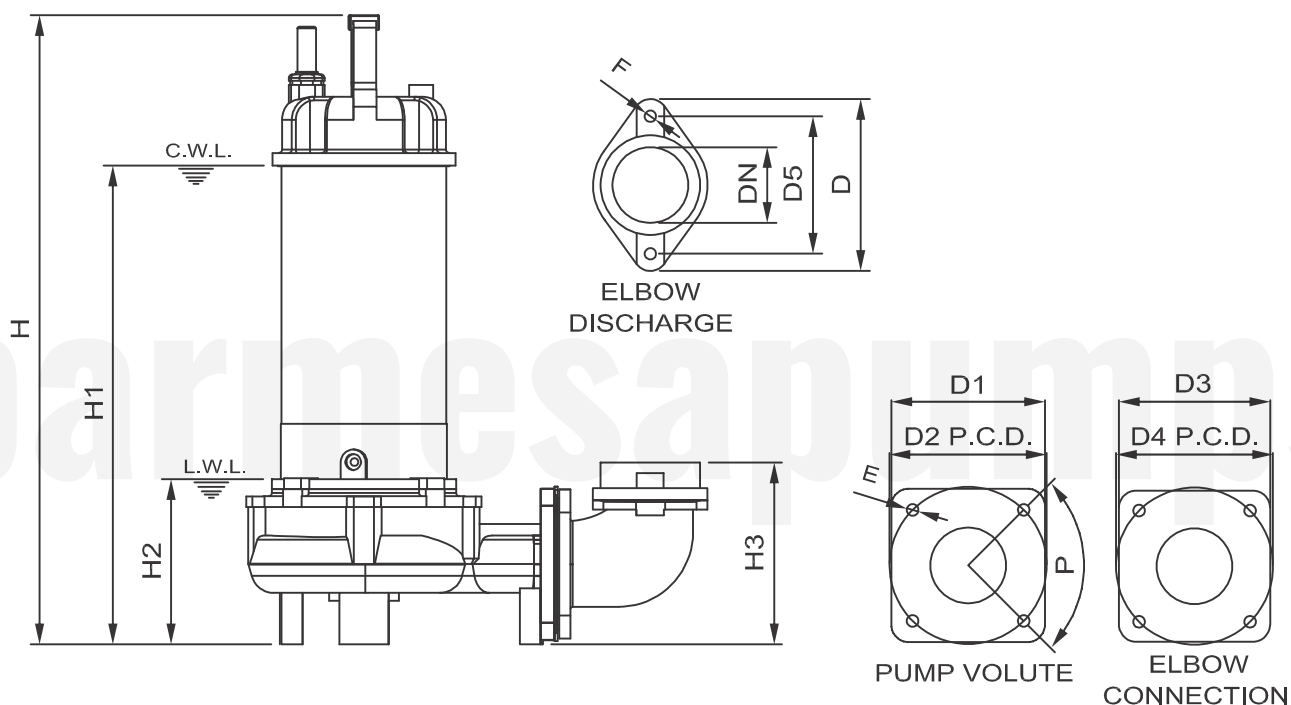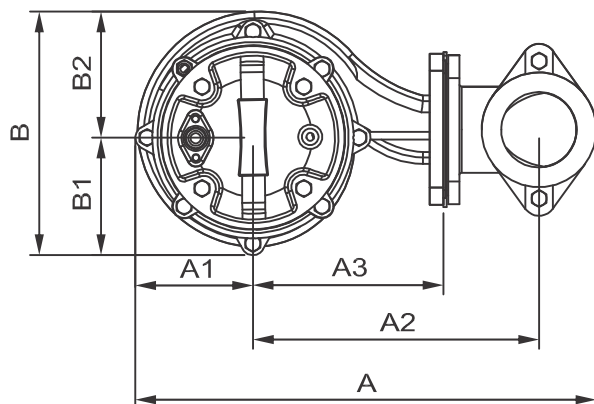

| MODEL      | HP | VOLTS | PHASE | MAX. AMPS | Ø DISCHARGE | DISCHARGE MAX. (m) | MAX. FLOW (GPM) | CORD (ft) | SPH SLD HNDLG |
|------------|----|-------|-------|-----------|-------------|--------------------|-----------------|-----------|---------------|
| 2BSV-202DS | 2  | 230   | 1     | 11        | 2"          | 20                 | 155.8           | 33        | 1.75"         |
| 2BSV-203DS | 2  | 230   | 3     | 7         | 2"          | 20                 | 155.8           | 33        | 1.75"         |
| 2BSV-204DS | 2  | 460   | 3     | 3.5       | 2"          | 20                 | 155.8           | 33        | 1.75"         |
| 2BSV-303DS | 3  | 230   | 3     | 8         | 2"          | 23                 | 177             | 33        | 1.75"         |
| 2BSV-304DS | 3  | 460   | 3     | 4.5       | 2"          | 23                 | 177             | 33        | 1.75"         |


- Built-in capacitor for single phase motor.

| MODEL      | A    | A1  | A2  | A3  | B   | B1  | B2  | D   | D1  | D2  | D3  | D4  | D5  | DN | E   | F   | P   | H    | H1   | H2  | H3 | WT   |
|------------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|-----|-----|-----|------|------|-----|----|------|
| 2BSV-202DS | 15.4 | 4.1 | 9.3 | 6.1 | 8.2 | 4.1 | 4.1 | 5.9 | 5.2 | 5.3 | 5.1 | 5.3 | 4.7 | 2  | 0.4 | 0.4 | 90° | 20.9 | 15.8 | 5.9 | 6  | 65.5 |
| 2BSV-203DS |      |     |     |     |     |     |     |     |     |     |     |     |     |    |     |     |     |      |      |     |    |      |
| 2BSV-204DS |      |     |     |     |     |     |     |     |     |     |     |     |     |    |     |     |     |      |      |     |    |      |
| 2BSV-303DS | 15.4 | 4.1 | 9.3 | 6.1 | 8.2 | 4.1 | 4.1 | 5.9 | 5.2 | 5.3 | 5.1 | 5.3 | 4.7 | 2  | 0.4 | 0.4 | 90° | 21.7 | 16.5 | 5.9 | 6  | 69   |
| 2BSV-304DS |      |     |     |     |     |     |     |     |     |     |     |     |     |    |     |     |     |      |      |     |    |      |

- Dimensions in inches.

\* WT = Weight in pounds, without cable.

► 5 - 7.5 HP

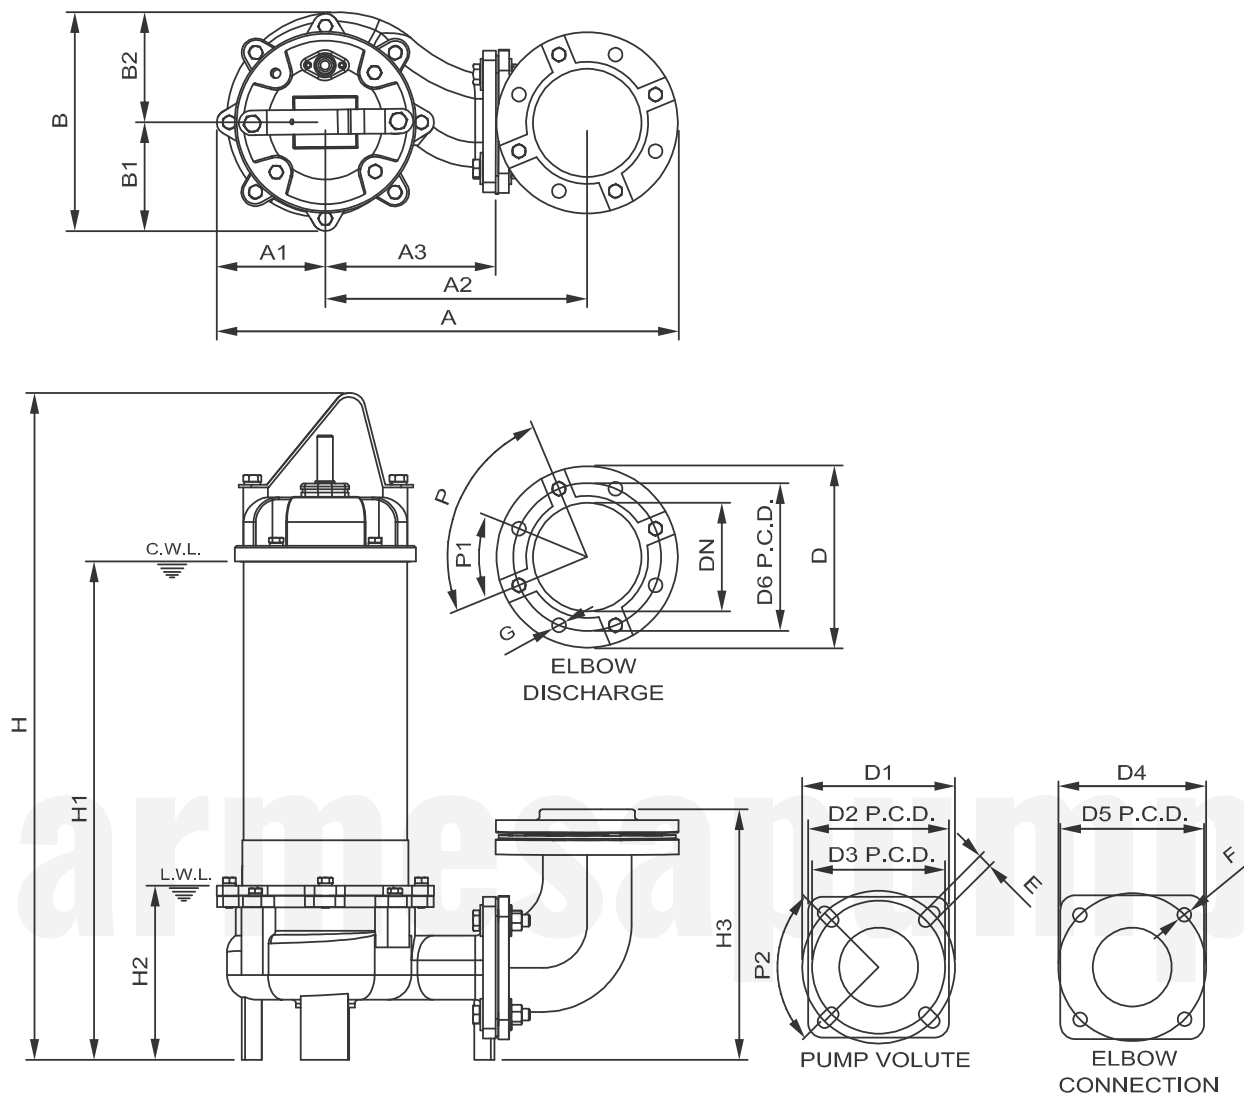

| MODEL      | HP  | VOLTS | PHASE | MAX. AMPS | Ø DISCHARGE | DISCHARGE MAX. (m) | MAX. FLOW (GPM) | CORD (ft) | SPH SLD HNDLG |
|------------|-----|-------|-------|-----------|-------------|--------------------|-----------------|-----------|---------------|
| 3BSV-503DS | 5   | 230   | 3     | 15        | 3"          | 27                 | 275             | 33        | 1.75"         |
| 3BSV-504DS | 5   | 460   | 3     | 8         | 3"          | 27                 | 275             | 33        | 1.75"         |
| 3BSV-753DS | 7.5 | 230   | 3     | 21        | 3"          | 32                 | 290.5           | 33        | 1.75"         |
| 3BSV-754DS | 7.5 | 460   | 3     | 10.5      | 3"          | 32                 | 290.5           | 33        | 1.75"         |


| MODEL      | A    | A1  | A2   | A3 | B   | B1  | B2  | D   | D1  | D2  | D3  | D4  | D5  |
|------------|------|-----|------|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 3BSV-503DS | 18.4 | 3.9 | 10.8 | 7  | 8.3 | 3.7 | 4.5 | 7.2 | 5.6 | 6.1 | 5.3 | 5.5 | 5.9 |
| 3BSV-504DS | 18.4 | 3.9 | 10.8 | 7  | 8.3 | 3.7 | 4.5 | 7.2 | 5.6 | 6.1 | 5.3 | 5.5 | 5.9 |
| 3BSV-753DS | 18.4 | 3.9 | 10.8 | 7  | 8.3 | 3.7 | 4.5 | 7.2 | 5.6 | 6.1 | 5.3 | 5.5 | 5.9 |
| 3BSV-754DS | 18.4 | 3.9 | 10.8 | 7  | 8.3 | 3.7 | 4.5 | 7.2 | 5.6 | 6.1 | 5.3 | 5.5 | 5.9 |

| MODEL      | D6  | DN | E   | F   | G   | P   | P1  | P2  | H    | H1   | H2  | H3  | WT    |
|------------|-----|----|-----|-----|-----|-----|-----|-----|------|------|-----|-----|-------|
| 3BSV-503DS | 5.9 | 3  | 0.6 | 0.6 | 0.6 | 90° | 45° | 90° | 24.9 | 18.4 | 6.3 | 8.9 | 105.8 |
| 3BSV-504DS | 5.9 | 3  | 0.6 | 0.6 | 0.6 | 90° | 45° | 90° | 24.9 | 18.4 | 6.3 | 8.9 | 105.8 |
| 3BSV-753DS | 5.9 | 3  | 0.6 | 0.6 | 0.6 | 90° | 45° | 90° | 26.5 | 20   | 6.3 | 8.9 | 118.6 |
| 3BSV-754DS | 5.9 | 3  | 0.6 | 0.6 | 0.6 | 90° | 45° | 90° | 26.5 | 20   | 6.3 | 8.9 | 118.6 |

- Dimensions in inches.

\* WT = Weight in pounds, without cable.

► 10 HP

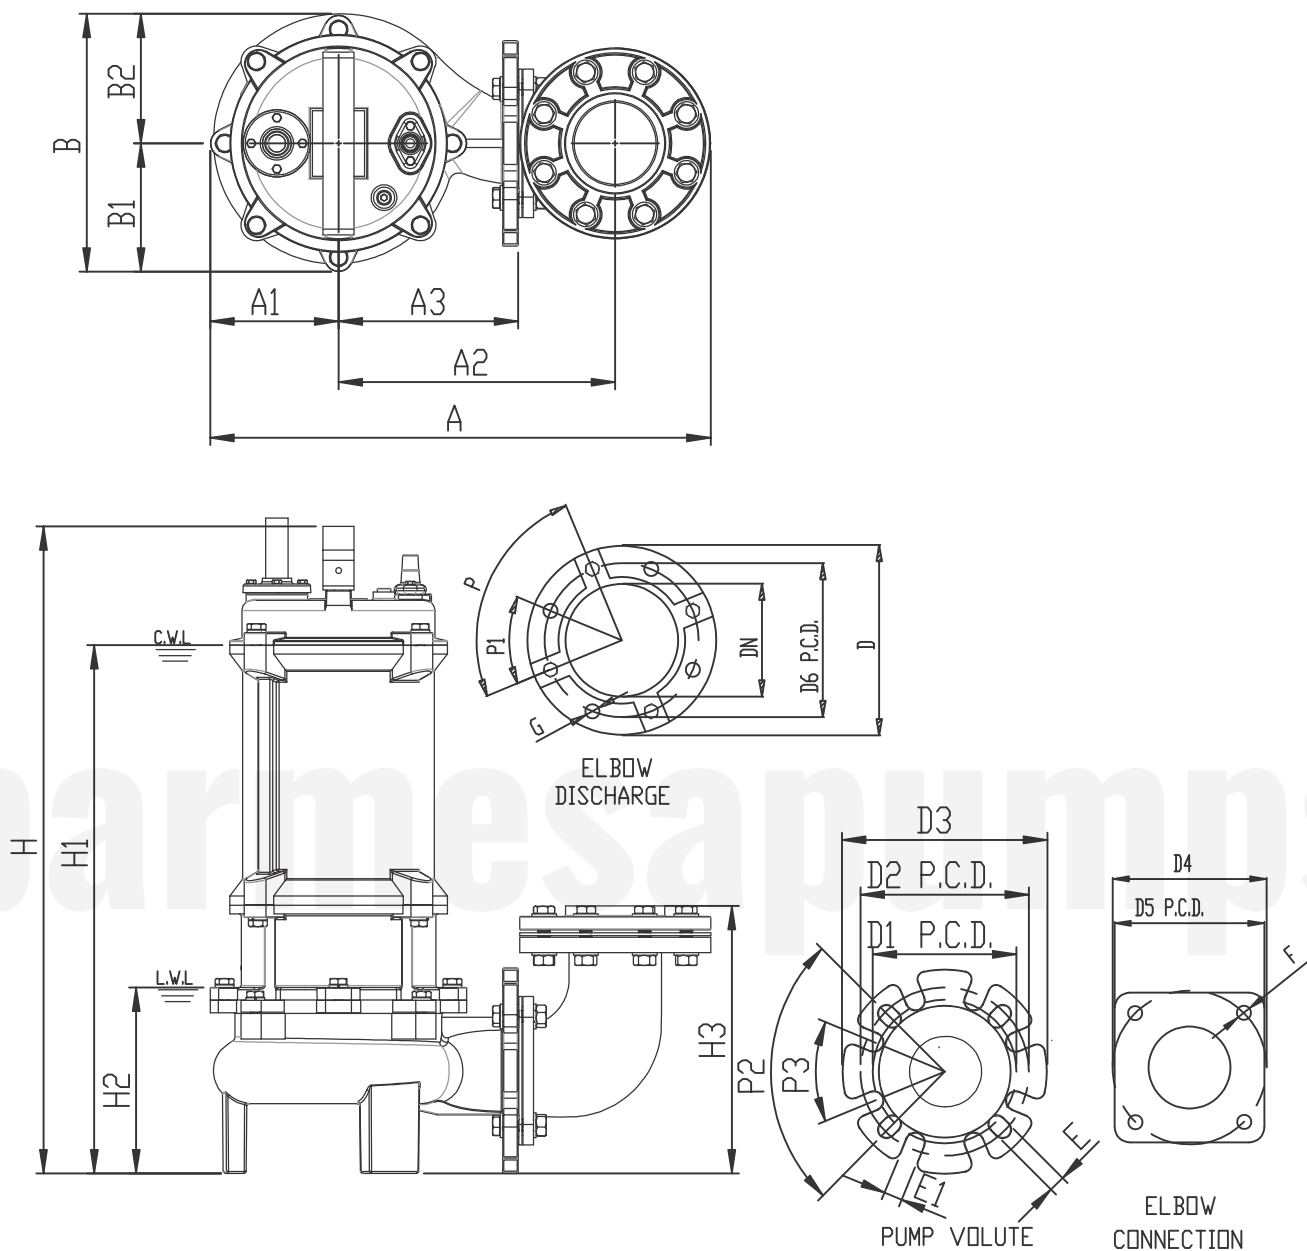

| MODEL      | HP | VOLTS | PHASE | MAX. AMPS | DISCHARGE ELBOW Ø | DISCHARGE MAX. (ft) | MAX. FLOW (GPM) | CORD (ft) | SPH SLD HNDLG |
|------------|----|-------|-------|-----------|-------------------|---------------------|-----------------|-----------|---------------|
| 4BSV1003DS | 10 | 230   | 3     | 28        | 4"                | 128                 | 300             | 47        | 1.75"         |
| 4BSV1004DS | 10 | 460   | 3     | 14        | 4"                | 128                 | 300             | 47        | 1.75"         |


| A    | A1  | A2   | A3  | B   | B1  | B2 | D   | D1  | D2  | D3  | D4  | D5  | D6  |
|------|-----|------|-----|-----|-----|----|-----|-----|-----|-----|-----|-----|-----|
| 19.2 | 4.9 | 10.6 | 6.9 | 9.9 | 4.9 | 5  | 7.2 | 5.5 | 6.5 | 7.9 | 5.5 | 5.9 | 5.9 |

| DN | E   | E1  | F   | G   | P   | P1  | P2  | P3  | H    | H1   | H2  | H3   | WT    |
|----|-----|-----|-----|-----|-----|-----|-----|-----|------|------|-----|------|-------|
| 4  | 0.6 | 0.7 | 0.6 | 0.6 | 90° | 45° | 90° | 45° | 24.8 | 20.3 | 7.1 | 10.3 | 156.5 |

- Dimensions in inches.

\* WT = Weight in pounds, without cable.

## ► 10 HP with Slide Rail Coupling

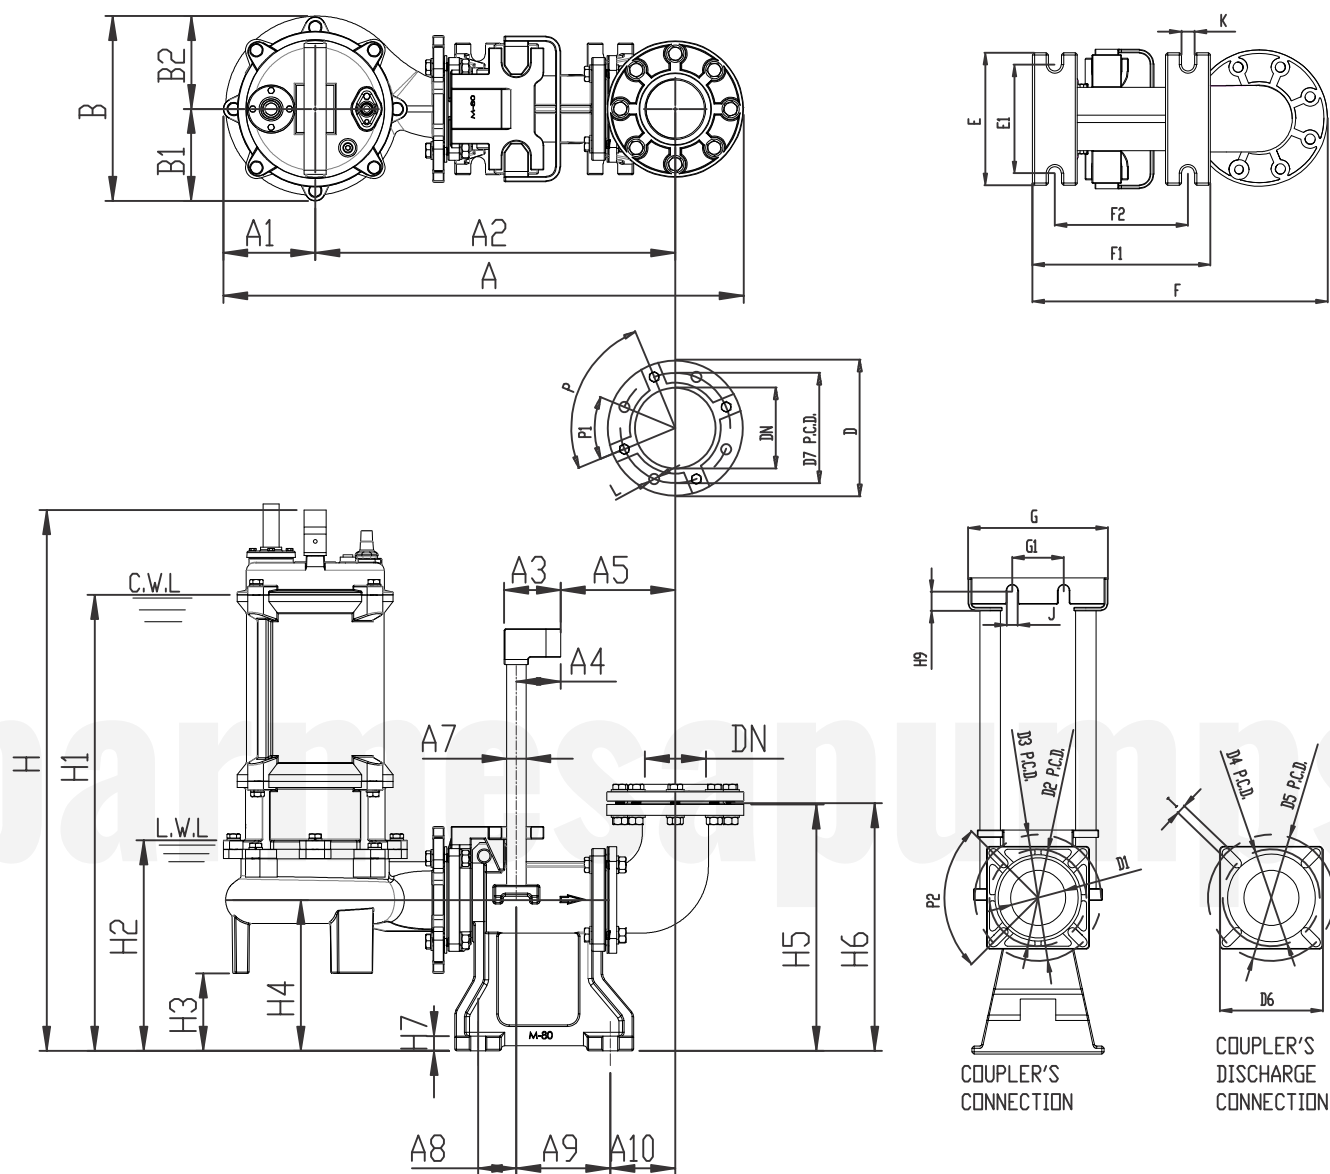

| A    | A1  | A2   | A3  | A4  | A5  | A6  | A7 | A8  | A9  | A10 | B   | B1  | B2 | D   | D1  |
|------|-----|------|-----|-----|-----|-----|----|-----|-----|-----|-----|-----|----|-----|-----|
| 27.8 | 4.9 | 19.2 | 3.1 | 2.5 | 5.7 | 8.1 | 1  | 2.8 | 4.3 | 3.5 | 9.9 | 4.9 | 5  | 7.2 | 2.9 |

| D2  | D3  | D4  | D5  | D6  | D7  | DN  | P   | P1  | P2  | E   | E1  | F    | F1  | F2  | G   |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|-----|-----|-----|
| 5.3 | 6.8 | 5.3 | 6.8 | 5.5 | 5.9 | 3.9 | 90° | 45° | 90° | 7.1 | 5.9 | 15.9 | 9.5 | 7.1 | 7.5 |

| G1  | H  | H1   | H2   | H3  | H4  | H5   | H6   | H7  | H8  | H9 | I   | J   | K   | L   | WT    | WT1  |
|-----|----|------|------|-----|-----|------|------|-----|-----|----|-----|-----|-----|-----|-------|------|
| 2.8 | 29 | 24.4 | 11.3 | 4.1 | 8.1 | 12.4 | 12.5 | 0.4 | 8.7 | 1  | 0.6 | 0.6 | 0.7 | 0.6 | 156.5 | 30.6 |

- Dimensions in inches.

\* WT = Weight in pounds, without cable.

\* WT1 = Slide Rail Coupling weight.

## ► Receiving inspection

Upon receiving the pump, it should be inspected for damage or shortages. If damage has occurred, file a claim immediately with the company that delivered the pump. If the manual is removed from the packaging, do not lose or misplace.

## ► Storage

Any product that is stored for a period longer than six (6) months from the date of purchase should be bench tested prior to installation. A bench test consists of, checking the impeller to assure it is free turning and a run test to assure the motor (and switch if provided) operate properly.

## ► Before Installation

### Insulation resistance measurement

With the motor and cable (excluding the power supply cable) immersed in water, use a megger to measure the insulation resistance between ground and each phase of the motor, and again between each phase of the motor. The megger should indicate an insulation resistance of not less than 20 mega ohms. While making the measurement, keep the power supply cable off the ground. **We recommend that an auxiliary pump be kept on hand in case of emergency.**

## ► Installation

**⚠ WARNING** Under no circumstances should cable be pulled while the pump is being transported or installed. Attach a chain or rope to the grip and install the pump.

1. This pump must not be installed on its side or operated in a dry condition. Ensure that it is installed upright on a secure base.

2. Install the pump at a location in the tank where there is the least turbulence.
3. If there is a flow of liquid inside the tank, support the piping where appropriate. Install piping so that air will not be entrapped. If piping must be installed in such a way that air pockets are unavoidable, install an air release valve wherever such air pockets are most likely to develop.
4. Do not permit end of discharge piping to be submerged, as backflow will result when the pump is shut down.

**⚠ WARNING** Non-automatic pumps do not have an automatic operating system. Do not operate the pump for a long time with the water level near the lowest water level (H1) as shown in Figure 1, as the automatic cut-off switch incorporated inside the motor will be activated.

5. To avoid dry operation, install the floats as shown in Figure 2. The pump may not start if a floats switch touches the wall of the water tank or the piping. Install the floats so that this will not happen.

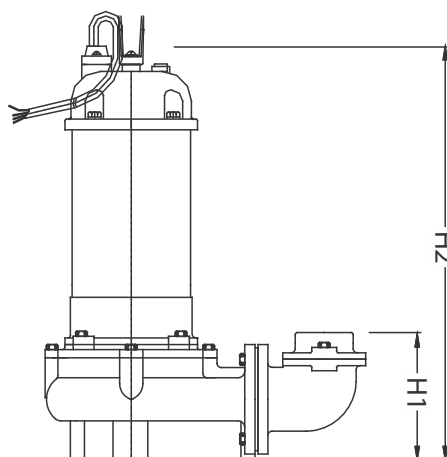


Figure 1

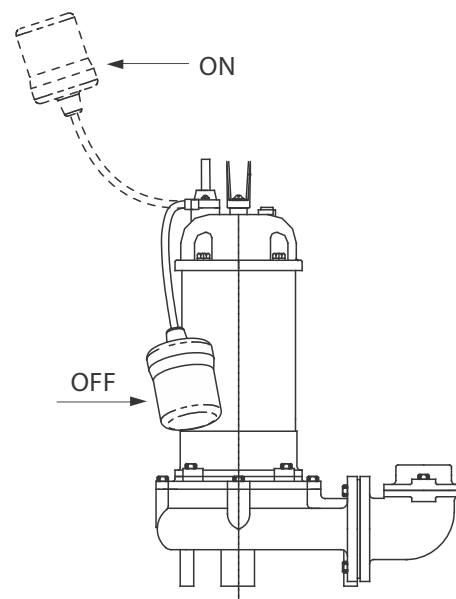


Figure 2

### Wiring:

- a) Wire as indicated for the appropriate start system as shown in figure 3.
- b) Loose connections will stop the pump. Make sure all electrical connections are secure.

### Cable:

- ⚠ WARNING**
- c) Never let the end of the cable contact water.
  - d) If the cable is extended, do not immerse the splice in water.
  - e) Fasten the cable to the discharge piping with tape or vinyl strips.
  - f) Install the cable so that it will not overheat. Overheating caused by coiling the cable and exposing it to direct sunlight.

### Grounding:

Connect the green wire to ground. Under no circumstances should the green wire be connected to the power supply.

**⚠ DANGER** Use short circuit breakers to prevent danger of electrical shock.

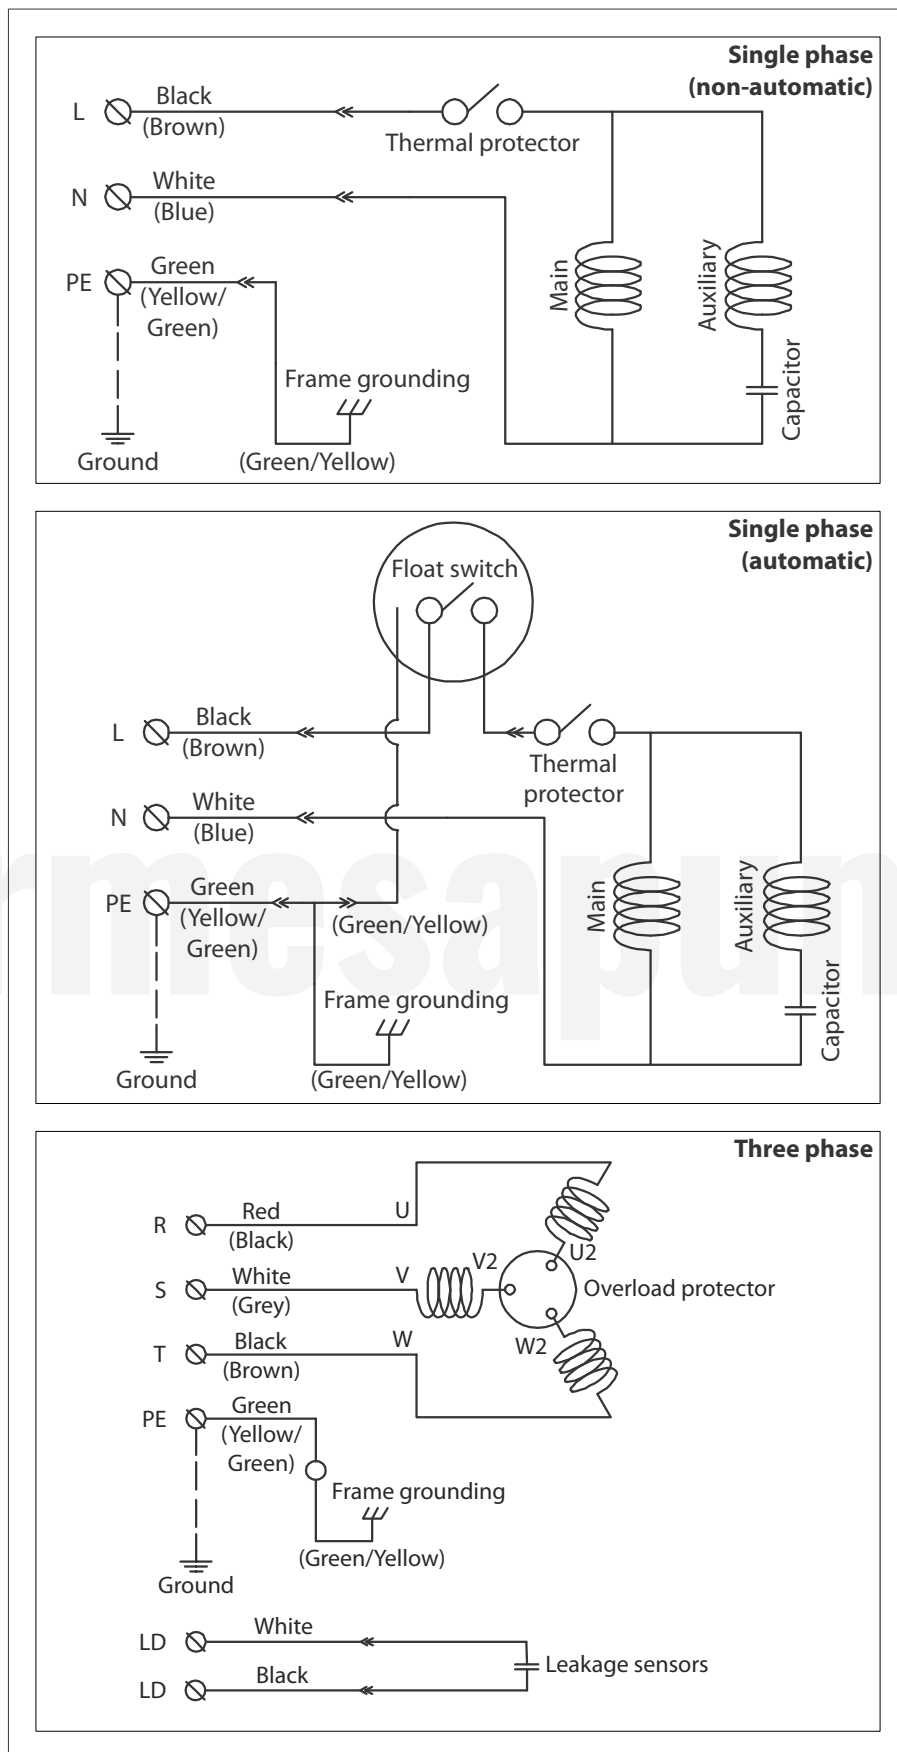


Figure 3

## ► Before Starting the Pump

- 1) After completing installation, measure the insulation resistance again as described in Installation.
- 2) Check water level. If the pump is operated continuously for an extended period of time in a dry condition or at the lowest water level, the motor protector will be activated. Constant repetition of this action will shorten pump service life. Do not start the pump again in such a situation until after the motor has completely cooled.

## ► Test operation

### Automatic and non-automatic pump:

- 1) Turn the operating switch on and off a couple of times to check for normal pump start. Floating switch must be raised for the pump to start.
- 2) Next, check direction and rotation. If discharge volume is low or unusual sounds are heard when the pump is operating, rotation has been reversed. When this happens, reverse two of the wires.

## ► Maintenance



**Check pressure, output, voltage, current and other specifications. Unusual readings may indicate. Refer to Troubleshooting and correct as soon as possible.**

### Daily inspections:

- 1) Check current and ammeter fluctuation daily. If ammeter fluctuation is great, even though within the limits of pump rating, foreign matter may be clogging the pump. If the quantity of liquid discharged falls suddenly, foreign matter may be blocking the suction inlet.

### Monthly inspections:

Measure the insulation resistance. The value should be more than 1M ohm. If resistance starts to fall rapidly even with an initial indication of over 1M ohm, this may be an indication of trouble and repair work is required.

### Annual inspections:

To extend the service life of the mechanical seal, replace the oil in the mechanical seal chamber once a year. Water mixed with the oil or cloudy textures are indications of a defective mechanical seal requiring replacement. When replacing the oil, lay the pump on its side with filler plug on top. Inject suitable amount turbine oil no. 32 (ISO VG-32).

### Inspections at 3-5 year intervals:

Conduct an overhaul of the pump. These intervals will preclude the possibility of future trouble.

### Parts that will need to be replaced:

Replace the appropriate part when the following conditions are apparent. See figure 4. (Note: replacement schedule is based on normal operating conditions)

### ► Disassembly

When disassembling pump, have a piece of cardboard or wooden board ready to place the different parts on as you work. Do not pile parts on top of each other. They should be laid out neatly in rows. The o-ring and gasket cannot be used again once they are removed. Have replacement parts ready. Disassemble in the following order, referring to the sectional view.

### ⚠ WARNING

Be sure to cut off power source before disassembly.

1. Remove pump casing bolts, raise the motor section and remove pump casing.
2. Remove shaft head bolt and impeller.
3. Remove oil filler plug and drain lubricating oil.
4. Remove intermediate casing bolts and intermediate oil chamber. (Remember that any lubricating oil remaining in the mechanical seal chamber will flow out.)
5. Carefully remove mechanical seal, taking care not to scratch sliding surface or motor shaft.

### ► Assembly

Re-assemble in reverse order of disassembly. Be careful of the following points:


6. During re-assembly, rotate the impeller by hand and check for smooth rotation. If rotation is not smooth, perform steps (3) through (5) again.
7. Upon completion of re-assembly step 1 rotate the impeller by hand from the suction the suction inlet and check that it rotates smoothly without touching the suction cover before operating the pump.

Please obtain o-rings, packing, shaft seals and other parts from pump dealer.

**Figure 4**

| REPLACEABLE PART  | Mechanical seal                                    | Oil filler plug gasket                | Lubricating oil           | O-ring                      |
|-------------------|----------------------------------------------------|---------------------------------------|---------------------------|-----------------------------|
| REPLACEMENT GUIDE | Whenever oil in mechanical seal chamber is clouded | Whenever oil is replaced or inspected | Whenever clouded or dirty | Whenever pump is overhauled |
| FREQUENCY         | Annually                                           | Every 6 months                        | Every 6 months            | Annually                    |

## ► 0.5-1 HP

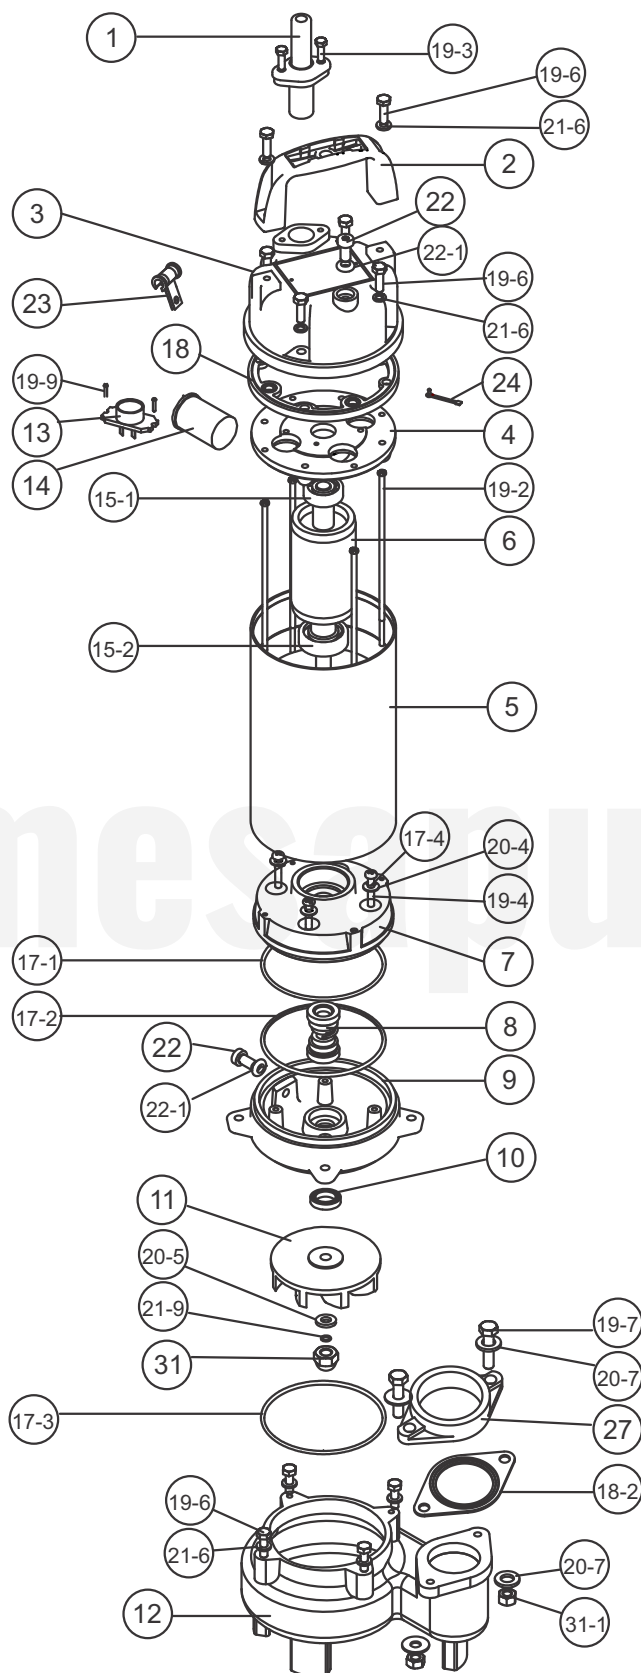

For repair part please supply: Model Number and Serial as shown on Name Plate, and Part Description and Part Number as shown on Parts List.


| ITEM | NAME             | MATERIAL         | PHOTO                                                                               | ITEM         | NAME                | MATERIAL | PHOTO                                                                                 |
|------|------------------|------------------|-------------------------------------------------------------------------------------|--------------|---------------------|----------|---------------------------------------------------------------------------------------|
| 2    | HANDLE           | NYLON 6          |    | 12           | PUMP CASING         | SUS 316  |    |
| 3    | MOTOR COVER      | SUS 316          |    | 13           | PROTECTOR (3 PHASE) |          |    |
| 4    | BRACKET          | EN-GJL-200       |    | 14           | CAPACITOR (1 PHASE) |          |    |
| 6    | SHAFT WITH ROTOR | SUS 316          |    | 15-1<br>15-2 | BEARINGS            |          |    |
| 7    | OIL CHAMBER      | EN-GJL-200       |    | 17-1<br>17-2 | O-RINGS             | VITON    |    |
| 8    | MECHANICAL SEAL  | CA/CE<br>SIC/SIC |   | 17-3         | VOLUTE O-RING       | VITON    |   |
| 9    | SEAL HOUSING     | SUS 316          |  | 18           | MOTOR GASKET        | VITON    |  |
| 10   | OIL SEAL         | VITON            |  | 18-2         | FLANGE GASKET       | VITON    |  |
| 11   | IMPELLER         | SUS 316          |  | 27           | FLANGE              | SUS 316  |  |

| ITEM | NAME                      | MATERIAL   |
|------|---------------------------|------------|
| 1    | CABLE                     | SJTOW-STOW |
| 5    | STATOR WITH MOTOR HOUSING | SUS 316    |
| 17-4 | O-RING OF OIL CHAMBER     | NBR        |
| 19-2 | LONG SCREW OF MOTOR       | STEEL      |
| 19-3 | SCREW OF CABLE GLAND      | SUS 316    |
| 19-4 | SCREW                     | STEEL      |
| 19-6 | SCREW                     | SUS 316    |
| 19-7 | SCREW OF FLANGE           | SUS 316    |
| 19-9 | SCREW OF PROTECTOR        | STEEL      |
| 20-4 | WASHER                    | STEEL      |


| ITEM | NAME                       | MATERIAL     |
|------|----------------------------|--------------|
| 20-5 | WASHER OF IMPELLER         | SUS 316      |
| 20-7 | WASHER                     | SUS 316      |
| 21-6 | SPRING WASHER              | SUS 316      |
| 21-9 | SPRING WASHSER OF IMPELLER | SUS 316      |
| 22   | OIL FILLER PLUG            | SUS 316      |
| 22-1 | O-RING OF OIL FILLER PLUG  | VITON        |
| 23   | CABLE SEAT                 | NBT/AISI 304 |
| 24   | WIRE AND SCREW             | STEEL        |
| 31   | NUT OF IMPELLER            | SUS 316      |
| 31-1 | NUT OF FLANGE              | SUS 316      |

For repair part please supply: Model Number and Serial as shown on Name Plate, and Part Description and Part Number as shown on Parts List.

► 2-3 HP

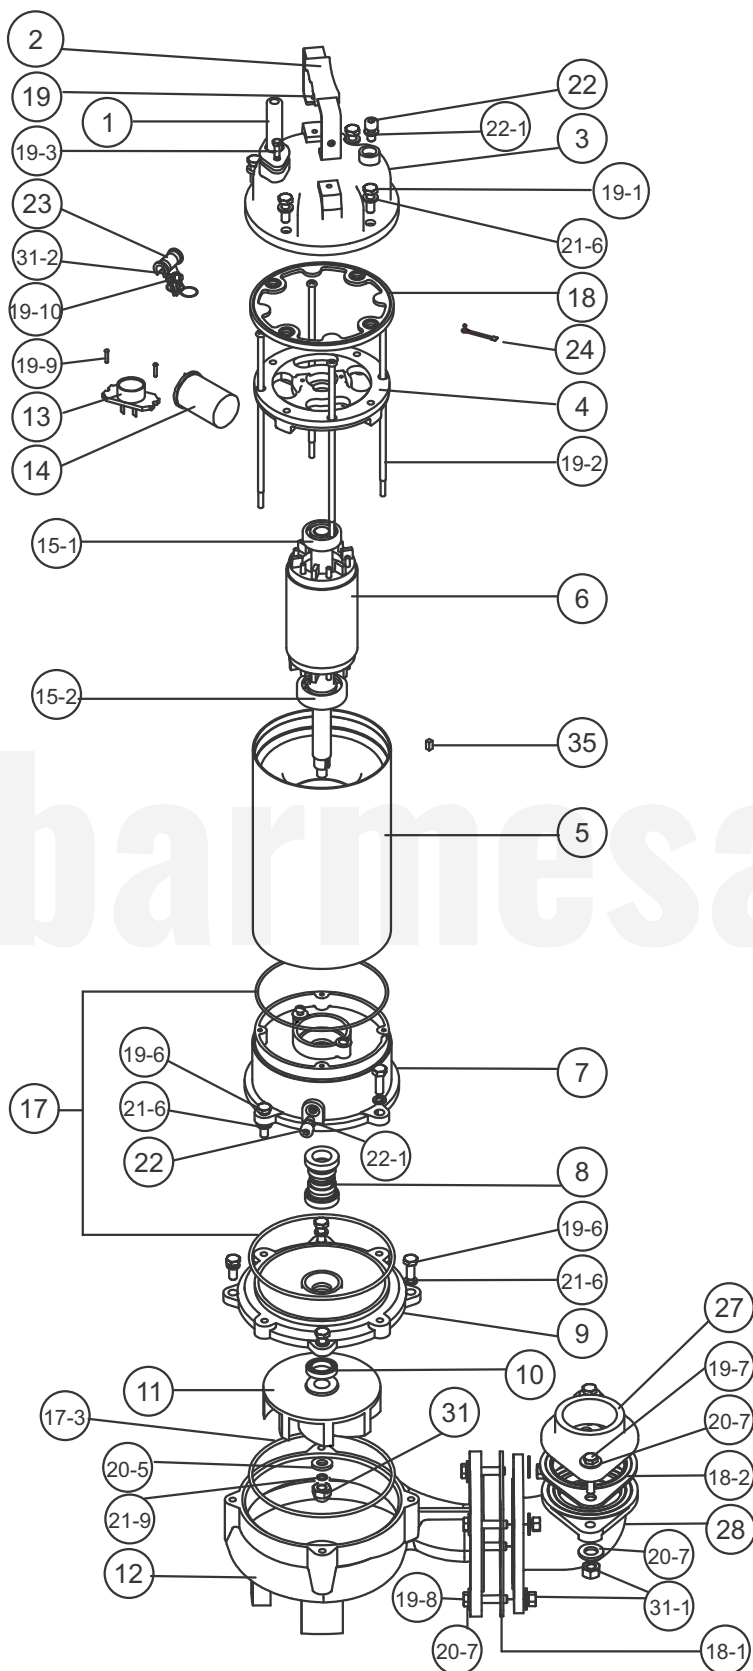

► 5-7.5 HP

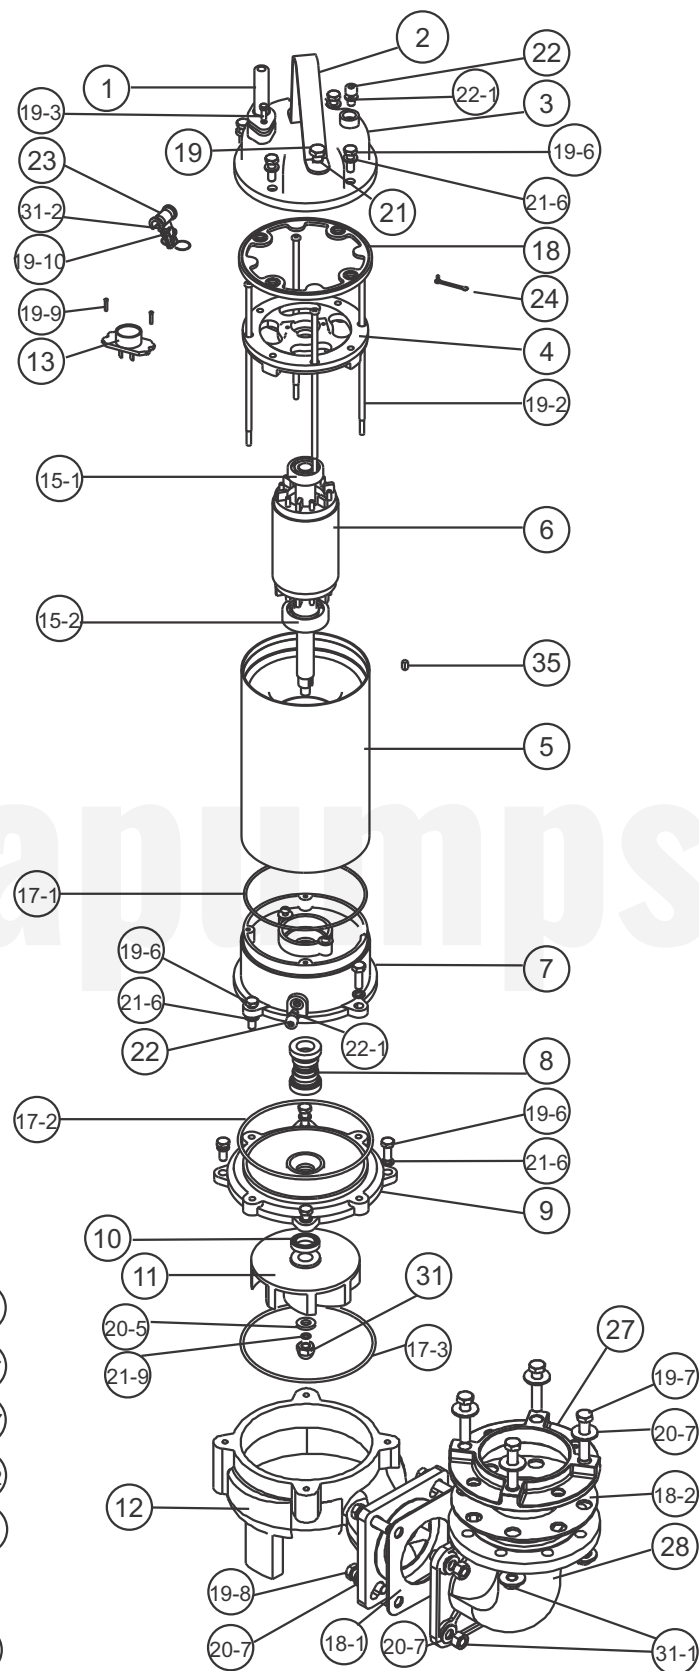

For repair part please supply: Model Number and Serial as shown on Name Plate, and Part Description and Part Number as shown on Parts List.


| ITEM | NAME                     | MATERIAL         | PHOTO                                                                               | ITEM | NAME                        | MATERIAL | PHOTO                                                                                 |
|------|--------------------------|------------------|-------------------------------------------------------------------------------------|------|-----------------------------|----------|---------------------------------------------------------------------------------------|
| 2    | HANDLE<br>(2-3 HP)       | SUS 316          |    | 12   | PUMP CASING                 | SUS 316  |    |
| 2    | LIFTING BAIL<br>(5-7 HP) | SUS 316          |    | 13   | PROTECTOR<br>(3 PHASE)      |          |    |
| 3    | MOTOR COVER              | SUS 316          |    | 18   | MOTOR GASKET                | VITON    |    |
| 4    | BRACKET                  | EN-GJL-200       |    | 18-1 | ELBOW GASKET                | VITON    |    |
| 6    | SHAFT WITH<br>ROTOR      | SUS 316          |    | 18-2 | FLANGE GASKET<br>(2-3 HP)   | VITON    |    |
| 7    | OIL CHAMBER              | SUS 316          |    | 18-2 | FLANGE GASKET<br>(5-7.5 HP) | VITON    |    |
| 8    | MECHANICAL<br>SEAL       | CA/CE<br>SIC/SIC |    | 27   | FLANGE<br>(2-3 HP)          | SUS 316  |    |
| 9    | SEAL HOUSING             | SUS 316          |  | 27   | FLANGE<br>(5-7.5 HP)        | SUS 316  |  |
| 10   | OIL SEAL                 | VITON            |  | 28   | ELBOW<br>(2-3 HP)           | SUS 316  |  |
| 11   | IMPELLER                 | SUS 316          |  | 28   | ELBOW<br>(5-7.5 HP)         | SUS 316  |  |

| ITEM | NAME                      | MATERIAL   | ITEM  | NAME                      | MATERIAL     |
|------|---------------------------|------------|-------|---------------------------|--------------|
| 1    | CABLE                     | SJTOW-STOW | 19-10 | SCREW                     | SUS 316      |
| 5    | STATOR WITH MOTOR HOUSING | SUS 316    | 20-5  | WASHER OF IMPELLER        | SUS 316      |
| 14   | CAPACITOR (1 PHASE)       |            | 20-7  | WASHER                    | SUS 316      |
| 15-1 | BEARINGS                  | -          | 21    | SPRING WASHER OF HANDLE   | SUS 316      |
| 15-2 |                           |            | 21-6  | SPRING WASHER             | SUS 316      |
| 17-1 | O-RINGS                   | VITON      | 21-9  | SPRING WASHER OF IMPELLER | SUS 316      |
| 17-2 |                           |            | 22    | OIL FILLER PLUG           | SUS 316      |
| 17-3 | O-RING OF VOLUTE          | VITON      | 22-1  | O-RING OF OIL FILLER PLUG | VITON        |
| 19   | SCREW                     | SUS 316    | 23    | CABLE SEAT                | NBR/AISI 304 |
| 19-1 | SCREW OF TOP COVER        | SUS 316    | 24    | WIRE AND SCREW            | STEEL        |
| 19-2 | LONG SCREW OF MOTOR       | STEEL      | 31    | NUT OF IMPELLER           | SUS 316      |
| 19-3 | SCREW OF CABLE GLAND      | SUS 316    | 31-1  | NUT OF FLANGE & ELBOW     | SUS 316      |
| 19-6 | SCREW                     | SUS 316    | 31-2  | NUT                       | SUS 316      |
| 19-7 | SCREW OF FLANGE           | SUS 316    | 35    | KEY                       | SUS 316      |
| 19-8 | SCREW                     | SUS 316    |       |                           |              |
| 19-9 | SCREW OF PROTECTOR        | STEEL      |       |                           |              |

Item 17-2 only for 5 - 7.5 HP models

For repair part please supply: Model Number and Serial as shown on Name Plate, and Part Description and Part Number as shown on Parts List.

► 10 HP

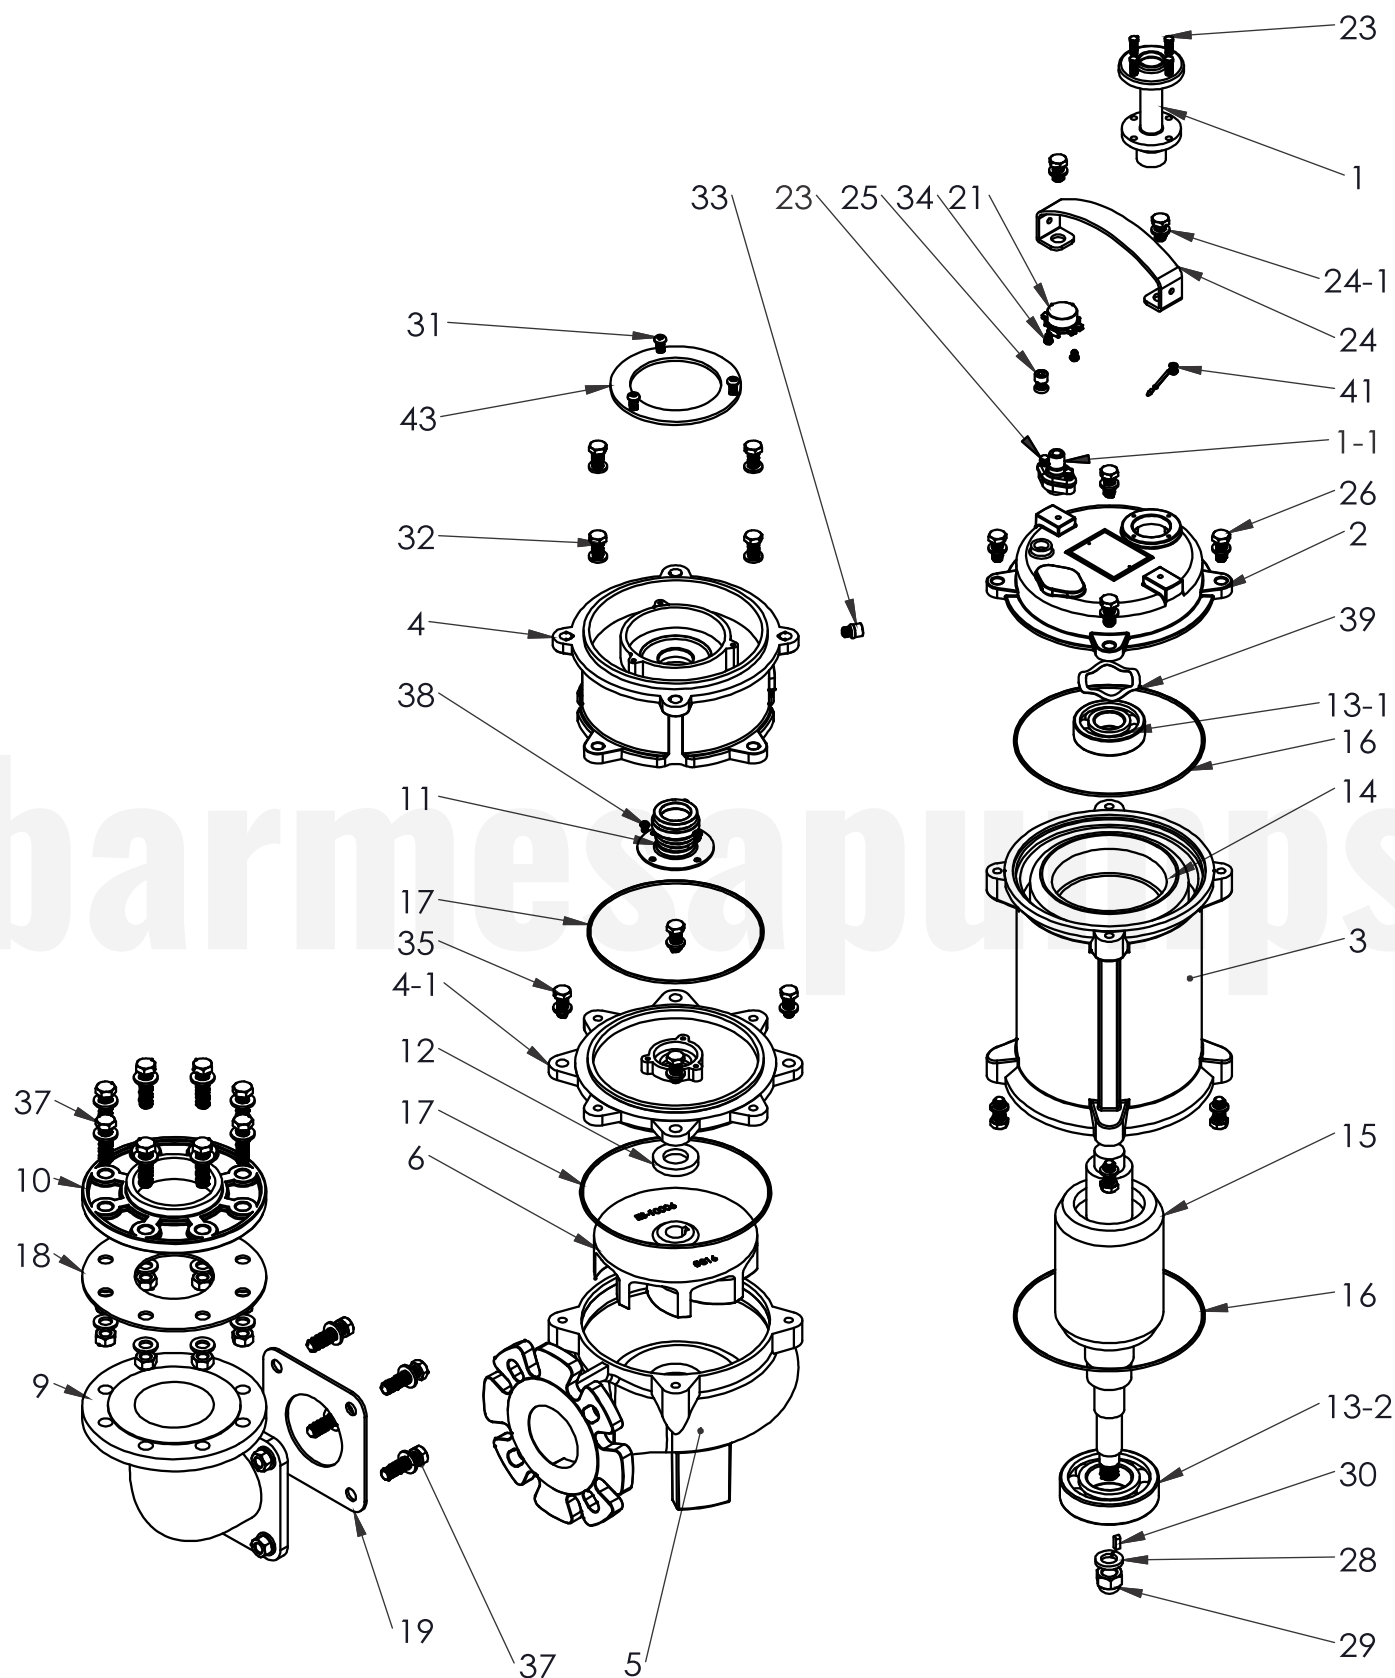

For repair part please supply: Model Number and Serial as shown on Name Plate, and Part Description and Part Number as shown on Parts List.

## ► 10 HP

| ITEM | NAME                               | MATERIAL         |
|------|------------------------------------|------------------|
| 1    | CABLE                              | STOW             |
| 1-1  | LEAK DETECTOR CABLE                | SJTOW            |
| 2    | MOTOR COVER                        | AISI 316         |
| 3    | MOTOR HOUSING                      | AISI 316         |
| 4    | OIL CHAMBER                        | AISI 316         |
| 4-1  | SEAL BRACKET                       | AISI 316         |
| 5    | VOLUTE                             | AISI 316         |
| 6    | IMPELLER                           | AISI 316         |
| 9    | DISCHARGE ELBOW                    | AISI 316         |
| 10   | FLANGE                             | AISI 316         |
| 11   | MECHANICAL SEAL                    | SIC/SIC CA/CE    |
| 12   | LIP SEAL                           | VITON            |
| 13-1 | 6306 BEARING                       | NTN/TPI          |
| 13-2 | 6309 BEARING                       | NTN/TPI          |
| 14   | STATOR                             | -                |
| 15   | ROTOR WITH SHAFT                   | AISI 316         |
| 16   | O-RING                             | VITON            |
| 17   | O-RING                             | VITON            |
| 18   | FLANGE GASKET                      | VITON            |
| 19   | ELBOW GASKET                       | VITON            |
| 21   | OVERLOAD PROTECTOR                 | KLIXON           |
| 23   | SCREW OF CABLE GLAND               | AISI 316         |
| 24   | HANDLE                             | AISI 316         |
| 24-1 | HEX. BOLT / SPRING WASHER          | AISI 316         |
| 25   | SOCKET SCREW / O-RING              | AISI 316 / VITON |
| 26   | HEX. BOLT / SPRING WASHER          | AISI 316         |
| 28   | SPRING WASHER                      | AISI 316         |
| 29   | HEX. NUT                           | AISI 316         |
| 30   | KEY                                | AISI 316         |
| 31   | HEX. BOLT                          | SC               |
| 32   | HEX. BOLT / SPRING WASHER          | AISI 316         |
| 33   | SOCKET SCREW / O-RING              | AISI 316 / VITON |
| 34   | PHILLIPS SCREW                     | SC               |
| 35   | HEX. BOLT / SPRING WASHER          | AISI 316         |
| 37   | HEX. BOLT / FLAT WASHER / HEX. NUT | AISI 316         |
| 38   | TRUSS BOLT                         | SC               |
| 39   | WAVE WASHER                        | SC               |
| 41   | GROUND LEAD                        | -                |
| 43   | BEARING HOLDER                     | SC               |

For repair part please supply: Model Number and Serial as shown on Name Plate, and Part Description and Part Number as shown on Parts List.



**Risk of electric shock. Always disconnect the pump from the power source before handling inspections or repairs.**

| Symptom                                        | Possible Cause(s)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Corrective Action                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Does not start. Starts, but immediately stops. | (1) Power failure.<br>(2) Large discrepancy between power source and voltage.<br>(3) Significant drop in voltage.<br>(4) Motor phase malfunction.<br>(5) Electric circuit connection faulty.<br>(6) Faulty connection of control circuit.<br>(7) Fuses are blown.<br>(8) Faulty magnetic switch.<br>(9) Water is not at level indicated by float.<br>(10) Float is not in appropriate level.<br>(11) Float is not effective.<br>(12) Short circuit breaker is functioning.<br>(13) Foreign matter clogging pump.<br>(14) Motor burned out.<br>(15) Motor bearing broken. | (1)~(3) Contact electric power company and devise counter-measures.<br>(4) Inspect electric circuit.<br>(5) Correct wiring.<br>(6) Inspect connections and magnetic coil.<br>(7) Check circuit then replace fuse.<br>(8) Replace with correct one.<br>(9) Raise water level.<br>(10) Adjust the position of float.<br>(11) Repair or replace.<br>(12) Repair location of short circuit.<br>(13) Remove foreign matter.<br>(14) Repair or replace.<br>(15) Repair or replace. |
| Operates, but stops after a while.             | (1) Prolonged dry operation has activated motor protector and caused pump to stop.<br>(2) High liquid temperature has activated motor protector and caused pump to stop.<br>(3) Reverse rotation.                                                                                                                                                                                                                                                                                                                                                                        | (1) Raise water level to C.W.L.<br>(2) Lower liquid temperature.<br>(3) Correct rotation.                                                                                                                                                                                                                                                                                                                                                                                    |
| Does not pump. Inadequate volume.              | (1) Reverse rotation.<br>(2) Significant drop in voltage.<br>(3) Operating a 60 Hz pump with 50 Hz.<br>(4) Discharge head is high.<br>(5) Large piping loss.<br>(6) Low operating water level causes air suction.<br>(7) Leaking from discharge piping.<br>(8) Clogging of discharge piping.<br>(9) Foreign matter in suction inlet.<br>(10) Foreign matter clogging pump.<br>(11) Worn impeller.                                                                                                                                                                        | (1) Correct rotation (see Operation).<br>(2) Contact electric power company.<br>(3) Check nameplate.<br>(4) Recalculate and adjust.<br>(5) Recalculate and adjust.<br>(6) Raise water level or lower pump.<br>(7) Inspect, repair.<br>(8) Remove foreign matter.<br>(9) Remove foreign matter.<br>(10) Remove foreign matter.<br>(11) Replace impeller.                                                                                                                      |
| Overcurrent.                                   | (1) Unbalanced current and voltage.<br>(2) Significant voltage drop.<br>(3) Motor phase malfunction.<br>(4) Operating 50 Hz pump on 60 Hz.<br>(5) Reverse rotation.<br>(6) Low head. Excessive volume of water.<br>(7) Foreign matter clogging pump.<br>(8) Motor bearing is worn out or damaged.                                                                                                                                                                                                                                                                        | (1) Contact electric power company.<br>(2) Contact electric power company and devise counter-measure.<br>(3) Inspect connections and magnetic switch.<br>(4) Check nameplate.<br>(5) Correct rotation (see Operation 2).<br>(6) Replace pump with high head pump.<br>(7) Remove foreign matter.<br>(8) Replace bearing.                                                                                                                                                      |
| Pump vibrates; excessive operating noise.      | (1) Reverse rotation.<br>(2) Pump clogged with foreign matter.<br>(3) Piping resonates.<br>(4) Strainer is closed too far.                                                                                                                                                                                                                                                                                                                                                                                                                                               | (1) Correct rotation.<br>(2) Disassemble and remove foreign matter.<br>(3) Improve piping.<br>(4) Open strainer.                                                                                                                                                                                                                                                                                                                                                             |

**NOTE:** Barmesa Pumps assumes no responsibility for damage or injury due to disassembly in the field. Disassembly of the pumps or supplied accessories other than at Barmesa Pumps or its authorized service centers, automatically voids warranty.

# BARMESA PUMPS FACTORY WARRANTY

Barmesa Pumps warrants that products of our manufacture will be free of defects in material and workmanship under normal use and service for 18 months from date of manufacture or 12 months from installation date whichever occurs first. This warranty gives you specific legal rights, which vary from state to state.

This warranty is a limited warranty, and no warranty related claims of any nature whatsoever shall be made against Barmesa Pumps, until the ultimate consumer or his/her successor notifies us in writing of the defect and delivers the product and/or defective part(s) freight prepaid to our factory or nearest authorized service station as instructed by Barmesa Pumps. THERE SHALL BE NO FURTHER LIABILITY, WHETHER BASED ON WARRANTY, NEGLIGENCE OR OTHERWISE. PRODUCT SHALL BE EITHER REPLACED OR REPAIRED AT THE ELECTION OF BARMESA PUMPS. Guarantees relating to performance specifications provided in addition to the foregoing material and workmanship warranties on a product manufactured by Barmesa Pumps, if any, are subject to possible factory testing. Any additional guarantees, in the nature of certified performance specifications or time frame must be in writing and such writing must be signed by our authorized factory manager at time of order placement and/or at time of quotation. Due to inaccuracies in field testing and should a conflict arises between the results of field testing conducted by or for the user, Barmesa Pumps reserves the right to have the product returned to our factory for additional testing.

This warranty shall not apply when damage is caused by (1) improper installation, (2) improper voltage, (3) lightning, (4) excessive sand or other abrasive material, (5) corrosion build-up due to excessive chemical content or (6) uncontrollable acts of god. Any modification of the original equipment will also void the warranty. We will not be responsible for loss, damage or labor cost due to interruption of service caused by defective pumps, parts or systems. Barmesa Pumps will not accept charges incurred by others without our prior written approval.

This warranty is void if our inspection reveals the product was used in a manner inconsistent with normal industry practice and/or our specific recommendations. The purchaser is responsible for communication of all necessary information regarding the application and use of the product. UNDER NO CIRCUMSTANCES WILL WE BE RESPONSIBLE FOR ANY OTHER DIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO TRAVEL EXPENSES, CONTRACTOR FEES, UNAUTHORIZED REPAIR SHOP EXPENSES, LOST PROFITS, LOST INCOME, LABOR CHARGES, DELAYS IN PRODUCTION, IDLE PRODUCTION, WHICH DAMAGES ARE CAUSED BY ANY DEFECTS IN MATERIAL AND/OR WORKMANSHIP AND/OR DAMAGE OR DELAYS IN SHIPMENT. THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER EXPRESS OR IMPLIED WARRANTY. No rights extended under this warranty shall be assigned to any other person, whether by operation of law or otherwise, without our prior written approval.

## IMPORTANT!

If you have a claim under the provision of the warranty, contact Barmesa Pumps or your authorized Barmesa Pumps Distributor:  
[warranty@barmesapumps.com](mailto:warranty@barmesapumps.com)  
[www.barmesapumps.com](http://www.barmesapumps.com)

