



# ELBA

## TOASTER

MODEL: ET-Q2785(GN)

**Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.**




## IMPORTANT SAFEGUARDS

When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions before using.
2. Never immerse the toaster in water or any other liquids.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to manufacturer or the nearest authorized service agent for examination, repair or electrical or mechanical adjustment.
4. Do not let the power cord hang over edge of table or counter or hot surface.
5. To disconnect the plug from wall outlet, grasp the plug and not the cord.
6. Do not leave the appliance unattended while it is operating.
7. Always use the appliance on a flat, stable and heat resistant surface.
8. While operating the appliance, do not touch the product body.
9. Note: Oversize food, metal foil packages or utensils must not be inserted into the toaster as they may cause fire, burnt or electrical shock.
10. Place the appliance away from curtains, and other combustible material.
11. Never use any accessories or parts from other manufacturers or that ELBA does not specifically recommend.
12. Do not attempt to dislodge food when toaster is in operation.
13. Do not use the toaster without its crumb tray in place. The crumb tray should be cleaned regularly.
14. Be careful when removing the bread from the toaster to avoid injuries.
15. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
16. Children should be supervised to ensure that they do not play with the appliance.
17. Unplug the plug from wall outlet when not in use, before putting on or taking off parts and before cleaning.
18. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
19. The product has been designed for domestic and household use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the warranty will not apply.
20. Don't use the appliance outdoors.
21. Save these instructions.

## PRODUCT DESCRIPTIONS

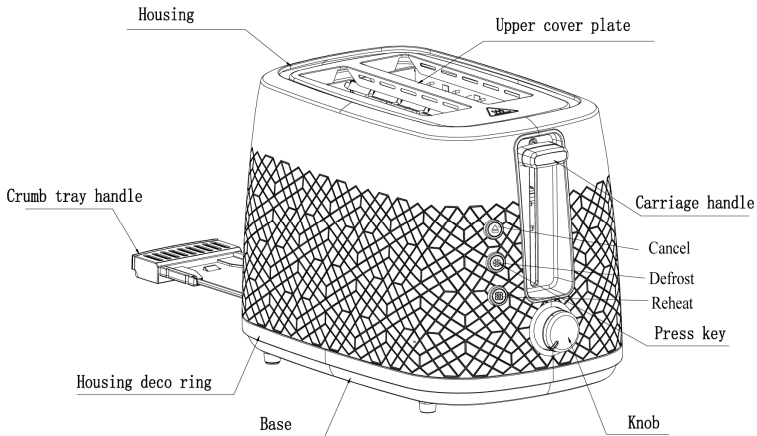

## BEFORE THE FIRST USE

As there is residue or oil remained in the toaster or heating element, it usually will emit the odour for the first use. It is normal and will not occur after several times use. For the first use it is suggested to operate according to the below steps, except without bread. Then let the toaster cool down and begin toasting the first slice.

## OPERATING THE APPLIANCE

1. Remove all packaging and place the toaster on a flat, stable and heat resistant surface.
2. To check crumb tray is completely position in place before using.
3. Check inside the bread slots to ensure everything has been removed.
4. Connect the plug to the wall outlet and power on the toaster.
5. Do not place bread in the toaster for the first use. Instead, lower the bread carriage handle to allow the heating elements to preheat and burn off any dust and residues which may have accumulated during manufacturing or assembly.
6. Once the above is completed, do not operate the toaster when empty.
7. Insert two slices of bread into the bread slots. The bread carriage handle must be in the up position when inserting the bread slices.
8. Set the browning level for the bread by adjusting the browning control knob according to your desired degree of browning. There are 7 levels the lowest brownish is at "1". The position "3" can toast the bread to golden colour. Respectively, position "7" delivers the darkest colour result. It is always advisable to start the toasting at lowest level first and then adjust accordingly.

**Note:** Browed colour of single bread is darker than that of double bread at the same level. Always try from the lower level to the higher level to avoid over toasted.

9. Press the bread carriage handle down vertically until it is positioned in place, the indicator of **Cancel** will be illuminated and toasting begins. Once the bread has been toasted to the preset colour, the bread carriage handle will be automatically spring up, and you can remove the bread readily.

**Note:** The bread carriage handle can only be latched when the appliance connects to the power supply.

10. During the toasted process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the **"Cancel"** button at any time.
11. If the bread is just taking out from refrigerator, defrost the bread first by pressing **"Defrost"** button and the indicator light above will turn red. Under this mode the bread will be toasted to the preset color.
12. If you want to reheat the cold toasted bread, press the **"Reheat"** button and the indicator light above will turn red. Under this mode the toasting time is fixed. When the time is up, the carriage handle will automatically bounce up to end the reheating process.
13. If the toaster is not plugged, the bread carriage handle will not lock in place.
14. After use, unplug the toaster from wall outlet.
15. Before plugging or unplugging the main plug of the toaster from the wall outlet, make sure the bread carriage handle is set at the OFF position.

## CAUTIONS


1. If the appliance starts to smoke, press the "Cancel" button to stop toasting immediately.
2. Remove all protective wrapping of the bread before placing into bread slot.
3. Avoid toasting the bread with any ingredient or foodstuff such as butter, sugar, etc
4. Never attempt to remove bread jammed in the bread slot without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing the bread.
5. This toaster is only applicable for toasting regular bread slice. Do not uses torn, curled up or mis-shaped slices of bread as this may cause jam inside the toaster.

## CLEANING AND MAINTENANCE

1. Power off the appliance. Disconnect the plug from wall outlet.
2. Wipe the product body with soft dry cloth after the product body cools down. Never use metal polish.
3. Never use a fork or other sharp object to clean the toaster as doing so may damage the toaster.

4. Pull the crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumb should be removed at least once a week. Make sure the crumb tray is position to its original position before using it again.
5. Do not immerse the appliance, cord, plug or any parts of the toaster in water or any other liquids.

## Environment-Friendly Disposal

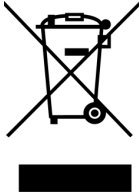

Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



**ELBA**