

**ELBA**



**ELBA**

**CERAMIC COOKER  
MODEL: ECC-J2015(BK)**

**Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.


**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.**

## IMPORTANT SAFEGUARDS

- When using this appliance, basic precautions should always be followed, including the following:
1. Read all instructions before using.
  2. Do not dismantle and refit parts or repair the appliance on your own.
  3. Do not contact the plug with wet hands.
  4. Do not let the power cord remains plugged when not in use.
  5. Do not use the appliance when the power cord is damaged or the plug is not properly inserted.
  6. Never bend or bind the power cord or apply by excessive force, otherwise it may cause damage. If power cord is damaged, it must be replaced by the manufacturer or its service center or a similarly qualified person in order to avoid hazards.
  7. Place the appliance on a stable surface.
  8. Never use the appliance where it is likely to subject to damp or close to fire.
  9. Never rinse the appliance directly with water to avoid damaging the appliance.
  10. Never use the appliance at the place where it can be reached by children.
  11. Do not cook without load or overload of food. Otherwise it will cause deformation of the pot and appliance.
  12. Metallic objects such as knife, forks, spoons, lids should not be placed on the cooking plate as it may conduct heat and get hot.
  13. Do not carry the appliance during operation.
  14. Do not drop objects onto the cooking plate, in case it cracks, immediately turn off the power supply and unplug the plug from the power socket and send it for repair.
  15. The content of the food loaded in the pot should not be exceeding 4 kg; otherwise it will cause damage and malfunction of the appliance.
  16. After cooking, high heat temperature that produced from the pot will conduct onto the appliance, NEVER touch the cooking plate immediately after used.
  17. When using high frequency, noise will be heard as it is the result of the cookware, it is not malfunction. While operating the appliance, the running sound of fan will be heard as the fan will rotate for quite sometimes to reduce the inner heat.
  18. Do not place a sheet of paper between the pot and the cooking plate. The paper may get burnt.
  19. Do not place the appliance near objects which will be affected by magnet; such as: radios, televisions, automatic-banking cards and cassette tapes.
  20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
  21. Children should be supervised to ensure that they do not play with the appliance.
  22. This appliance is intended to be used in household and similar applications.
  23. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
  24. Save these instructions for future reference.

## PRODUCT DESCRIPTION

1. Cooking Plate
2. Safety Lock Function
3. Timer Function
4. Power or Temperature Level Decrease
5. Power or Temperature Level Increase
6. Cooking Function Selection
7. On / Off
8. Hot Surface Warning Indicator Light

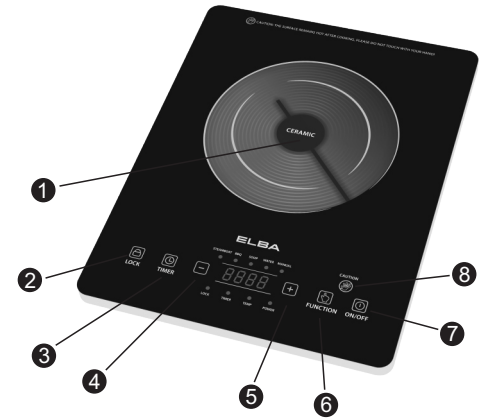

## CONTROL PANEL



## SUITABLE UTENSIL



Cast Iron Cookware



Stainless Steel Cookware



Glass or Ceramic Cookware

## UNSUITABLE UTENSIL



Pottery Pot



Anti-heating Glass Pan/Pot



Pot with Curve Bottom



Pot with Legs



Outer Bottom Less than 12cm



Copper Alloy Pot with Low Iron Content

## OPERATING THE APPLIANCE

- Place the suitable utensil at the centre of the cooking plate.

Warning:

- ❖ Please do not power on the appliance with an empty pot as this will cause damage and deformation to the pot.
- ❖ The cooking plate surface remains hot after cooking, please do not touch with you hand.

- Touch the “On/Off” icon and then followed by the function icon to select desire cooking program, cooking power or temperature.

- Touch the “Function” icon, the red light indicator for “STEAMBOAT” function will light up. The display screen will show 1000. The default operating power level is at 1000W. The power level can be adjusted by touching “Up” or “Down” for desired level.

Power settings: From 200 watt to 2000 watt

- Touch the “Function” icon, until the red light indicator turn to “BBQ” function. The display screen will show 350. The default operating temperature level is at 350°C. The temperature level can be adjusted by touching “Up” or “Down” for desired temperature.

Temperature settings: From 50°C to 500°C

- Touch the “Function” icon, until the red light indicator turn to “SOUP” function. The display screen will show 1200. The default operating power level is at 1200W. The power level can be adjusted by touching “Up” or “Down” for desired level.

Power settings: From 200 watt to 2000 watt

- Touch the “Function” icon, until the red light indicator turn to “WATER” function. The display screen will show 1400. The default operating power level is at 1400W. The power level can be adjusted by touching “Up” or “Down” for desired level.

Power settings: From 200 watt to 2000 watt

- Touch the “Function” icon, until the red light indicator turn to “MANUAL” function. The display screen will show 1400. The default operating power level is at 1400W. The power level can be adjusted by touching “Up” or “Down” for desired level.

Power settings: From 200 watt to 2000 watt

- After selecting the desired cooking function, continue to touch the “Timer” icon, the red light indicator for “Timer” will light up and the display screen will flash and show “00:00”. Adjust the desired minutes by touching “Up” or “Down” for timer settings from “0:01” minute to “3:00” hours.

- To prevent children from adjusting the appliance accidentally or changing cooking settings, touch the lock function icon, the red light indicator for “Lock” will light up and the appliance will not respond to any touch on the Function and Timer, except the on/off. To turn off the “Lock” function, touch and hold for 3 seconds.

Note: You can activate the “Lock” function when the ceramic cooker is switched off.

If you activate the “Lock” function while the ceramic cooker is working, it can still be switched off. But all other functions are blocked.

- To cancel any of the selected cooking function, touch the “ON/OFF” icon.

- After cooking has finished, power off the appliance and unplug the appliance.

## TROUBLESHOOTING GUIDE

TROUBLESHOOTING	GUIDE
After you have connected the plug to the wall outlet and switched on the power button, no beep sound and indicators do not light up	Please check if the plug is well connected to the wall outlet
	Please check whether the power switch or fuse in your home is cut-off
	Please check whether the power is cut-off
While operating the appliance suddenly stop functioning	Please check whether the appliance has reached the preset temperature setting.
	Due to overheating protection, please turn off and leave the appliance for a while. After the appliance is cooling down, you may turn on the appliance and continue cooking.

## TROUBLESHOOTING CODE

SCREEN DISPLAY	FAULT DEFECTED
E1	Short circuit or open circuit / damage of thermistor
E2	Temperature sensor at fault
E3	Voltage is too high
E4	Voltage is too low
E5	Over temperature protection of thermocouple
E6	Cooling or exhaust fan at fault
<p><b>Solution:</b> Power off the appliance and unplug from the wall outlet. Connect the plug to the wall outlet again and power on. If the display screen show E3 or E4, pls help double check your voltage. If the display screen show either “E1”, E2, “E5” or “E6”, please send the appliance to the nearest service centre or a similar qualified person for checking.</p>	

## MAINTENANCE AND CARE

- Please unplug the plug from the power socket after use.
- Wait until the appliance completely cools down and wipe the appliance body, cooking plate and control panel with soft and damp cloth. Neutral cleanser may use for firm oil stain, and then wipe the remained residue with soft and damp cloth.
- Never rinse the appliance directly with water or immerse it in water.

### NOTICE

This product must not be disposed together with domestic waste. It has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help to save natural resources and make sure the product is disposed in an environmental friendly and healthy way.

