

ELBA

TUMBLE DRYER
MODEL: ED-H9151C(WH)

Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

For The Warranty Terms & Conditions, Please Refer To Warranty Certificate

REMOVE ALL PACKING MATERIALS FROM THIS PRODUCT BEFORE USING IT. THIS APPLIANCE MUST BE INSTALLED IN LEVEL. PLEASE ENSURE THE ELECTRICITY SUPPLY TO THIS APPLIANCE IS DISCONNECTED BEFORE INSTALLING.

Please read this instruction carefully. It is advisable to keep this instruction manual in a safe place for future reference.

SAFETY PRECAUTIONS

1. Keep this appliance out of reach from children. Do not let them to operate the appliance without supervision.
2. Check the current rating on the rating plate and make sure the current supplied is matched with the appliance before using.
3. This product is for household and indoor use only.
4. This product is not intended for use by person (including children) with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. If the power cord or plug is damaged, it must be replaced by the service centre or a qualified service technician to avoid hazard.
6. Any electrical work required to install this appliance should be carried out by a qualified technician or competent personnel.

WARNING - to reduce the risk of fire or injury to persons or property, please read and follow below instructions carefully:


- Do not operate this appliance if it has malfunctioned, damaged or appears damaged in any way. Make enquiry to our service centre and return the complete set to the place of purchase for inspection, repair or replacement.
- This appliance must be grounded and the ground wire should not be connected to any heating pipe and gas pipe.
- Avoid placing any objects into the appliance such as coins, nails, screws, or objects which may cause severe damage to the drum.
- Objects made with rubber or any latex material such as hand gloves and shower caps should not be dried in the tumble dryer at any time.
- Laundry which has been contaminated with flammable substance such as petrol, kerosene, cooking oil or turpentine should be washed in hot water with detergent before drying with this appliance. Only tumble dry laundry washed with water.
- If the tumble dryer is place on top of a washing machine, it is compulsory to use the stacking kit (optional accessory) to hold the appliance.
- Do not overload the appliance. Laundry which is dripping wet should not be dried with the appliance.

1. INSTALLATION


Position the tumble dryer so that the plug remains accessible after installation. Do not block the back of the dryer, as this will impair the working of the dryer. Leave a space of 10cm between the rear of the tumble dryer to the wall.

This appliance must not be installed behind a lockable door, a sliding door or a door with hinges on the opposite side to that of the tumble dryer.

Your tumble dryer will release warm, damp air during operation.

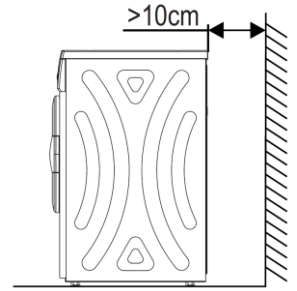

OPTIONAL WATER DRAIN OUTLET INSTALLATION (DRAIN HOSE)

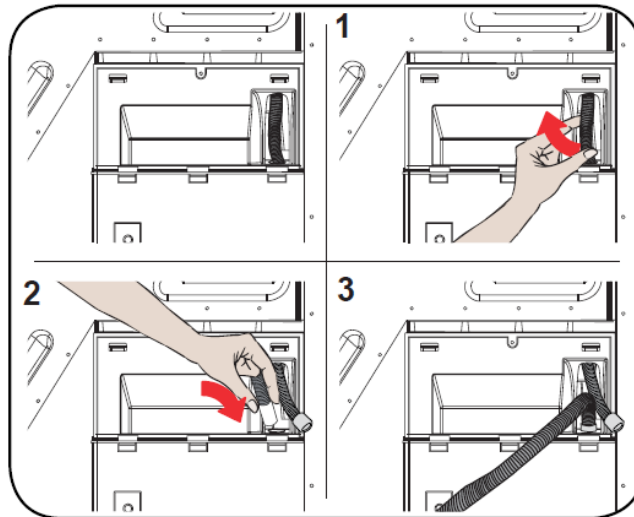

In product with a condenser unit, water accumulates in the water tank during the drying process. You must empty the accumulated water after each drying process. Instead of periodically emptying the water tank, you can also use the water drain hose provided with the product to directly drain the water outside.

1. Pull and take out the end of the hose at the back of the dryer. Do not use any tools to take out the hose.
2. Fit one end of the water discharge hose, which is provided with the product, to the slot from which you have removed the hose.
3. Fix the other end of the water discharge hose directly to the water outlet or sink.

NOTE:


The hose must be connected in a manner that it cannot be displaced. If the hose comes out during water discharge, there might be flooding in your house.

TRANSPORT

Move the dryer cautiously. Do not grasp any salient parts of dryer when moving. The dryer door cannot be used as the handle for delivery.


INSTALLATION POSITION

1. It is recommended to position close next to the washing machine for your convenience.
2. The dryer must be installed in a clean place where dirt does not built up. Air must be able to circulate all around the appliance. Do not obstruct the front air inlet or the air intake grilles at the back of the dryer.
3. To keep vibration and noise to a minimum when the dryer is in used and it should be placed on a level surface.
4. Never remove the feet and do not restrict the floor clearance through deep pile carpets, strips of wood or similar surface. This might cause heat built up which would interfere with the operation of the appliance.

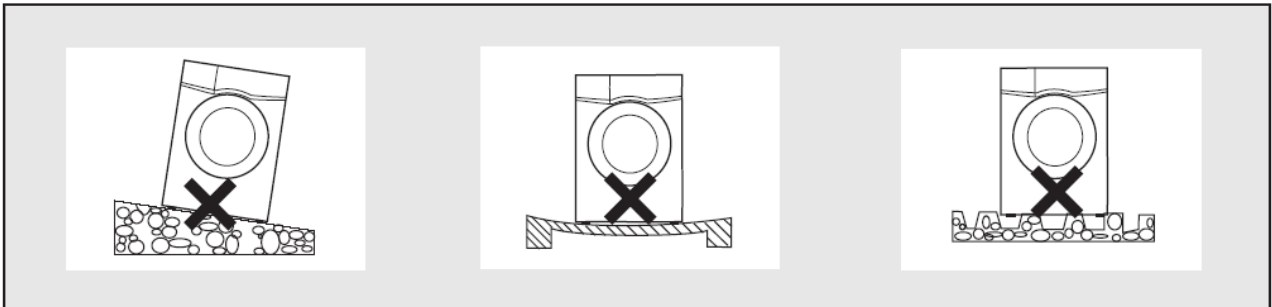

LEVEL ADJUSTING

Once the appliance is done installation, adjust the level to the right level to avoid the appliance to move easily when operating.

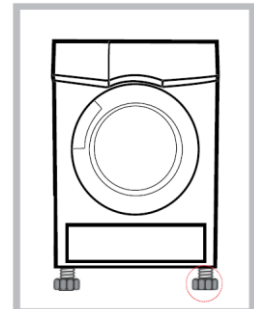

FINAL INSTALLATION


Push the filter into its operating position located under the door. Remove any dust by wiping the drum and door with a damp cloth. Any initial smell of burning will be caused by dust on the heater for the first use and will quickly disappear.

2. SAFETY PRECAUTIONS

Install or store the appliance where it will not be direct exposed to water or sun, this may cause permanent damage or malfunction of the appliance.




Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust and dirt. An obstructed port might reduce the airflow.

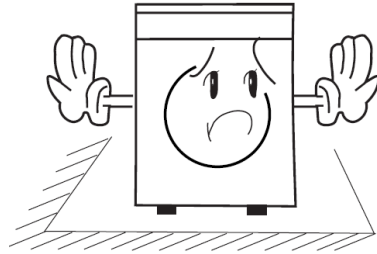


Do not store plastic, paper or clothing that may burn or melt on the top of the appliance during operation.




It is prohibited to open the door before the drying program had finished as it will cause injury from being scalded by hot steam or over heated by the appliance.

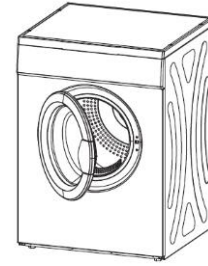


Do not dry the laundry that have been cleaned in, washed in, soaked in or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) as it will damage the appliance.

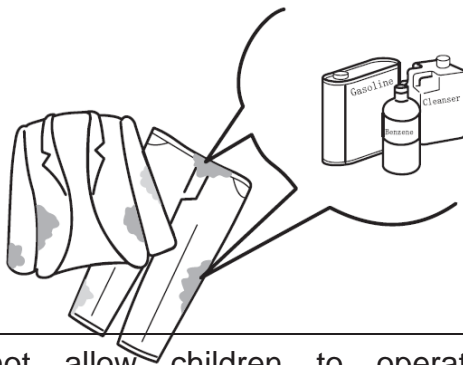


Never attempt to operate this appliance if it is damaged, malfunctioning, or broken parts such as a damaged on power cord or plug.

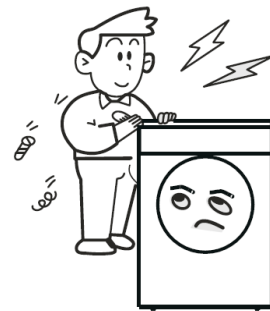

Do not allow children to operate this appliance. Close supervision of children is necessary when the appliance is used.

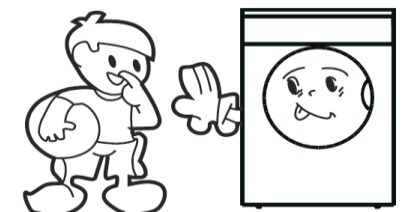


Please do not reach the appliance when your foot or hand is wet.

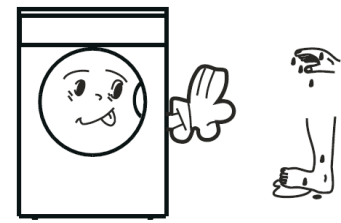

Do not dry laundry that contain rubber, plastic or similar materials such as padded bras, tennis shoes, galoshes, bath mats, rugs, bibs, baby pants, raincoat, plastic bags or pillows that may cause melt or burn. Some of the rubber materials will cause fire when heated and will permanently damage the appliance.



Please do not operate the appliance without the lint filter as it might cause the damage to appliance.

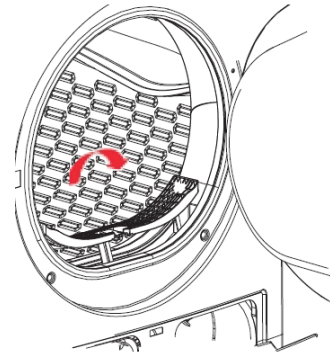













This product belongs to type I electronic products and please take note of safety problem accordingly:

1. It is always beware of the power which is buried in the earth and will not touch any social equipment such as gas pipe or water pipe etc. Make sure the difference of different lines and they are not connected.
2. When you are using the appliance, please make sure the maximum current will reach 16A. Therefore, please make sure the power supply units (current, voltage and cable) can meet the normal load requirements for the dryer.












3. PREPARATION

Please pay attention to use the appliance if the labels inside the garments cannot be dried or contain the symbols as follows:

 Dry	 Normal	 Do not tumble dry	 Do not dry
 Line dry / Hang to dry	 Drip dry	 Dry flat	 Dry in shade
 Dry clean	 Do not dry clean	 Dry clean, Any solvent	 Dry clean, Petroleum solvent only

1. To avoid the need to iron easy-care polyester / cotton items, it is better to only dry small loads (half fill drum) with small and large articles together.
2. Do not overload the dryer or dry large bulky items such as duvets, quilt, curtain or sleeping bags as it is important to make sure the air flow through the dryer is not obstructed.
3. Before drying, thoroughly spin the laundry in washing machine. Higher spin speed can reduce the drying cycle time and save energy consumption.
4. Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
5. Do not over dry the clothes. This will cause over dried clothes easily creases.
6. Do not dry the articles containing rubber or similar elastic materials.
7. The door can be opened only once the program of the drying completed.
8. Clean the lint filter and empty container after each use to avoid extension of drying time and energy use.


The reference weight of laundry.

 Mixed-fabric clothes (about 800g)	 Jacket (about 800g cotton)	 Jeans (about 800g)	 Towel quilt (about 900g cotton)
 Single bedsheet (about 600g cotton)	 Work clothes (about 1120g)	 Sleepwear (about 200g)	 Long sleeve shirt (about 300g cotton)
 Short sleeve shirt (about 180g cotton)	 Short pants (about 70g cotton)	 Socks (about 50g mixed-weave)	

NOTE:


It is not recommended to load the dryer with more laundry than the amount shown in the figure. When overloaded, the drying performance of the dryer will decrease and the dryer and laundry might be damaged

4. PRODUCT DESCRIPTION

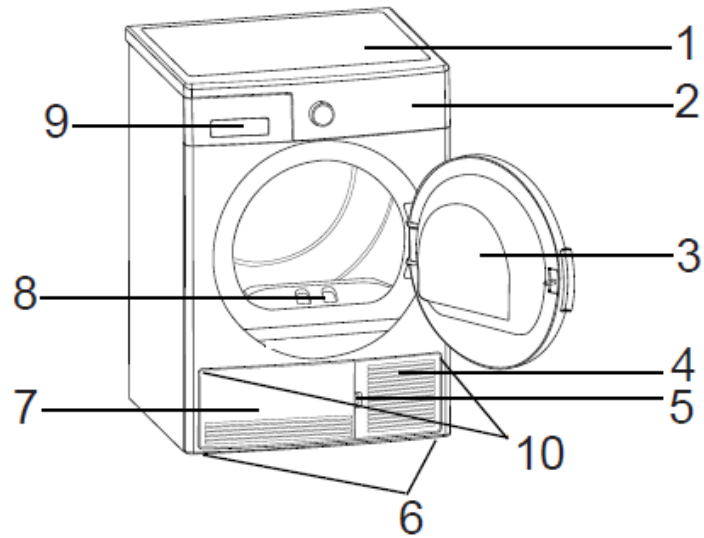


1. Top Board
2. Control Panel
3. Door
4. Plinth Opening Slot
5. Plinth
6. Adjustable Feet
7. Plinth Cover
8. Lint Filter
9. Water Container
10. Ventilation Grills

4.1 CONTROL PANEL DESCRIPTIONS

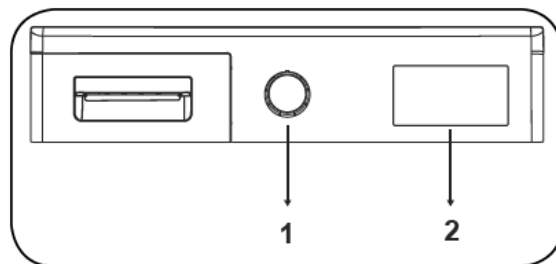

- 1. Program Knob**
Turn the program knob to select the drying program.
- 2. Display**
The display shows the setting and status of dryer.

4.2 INDICATOR AND ADDITIONAL FUNCTIONS

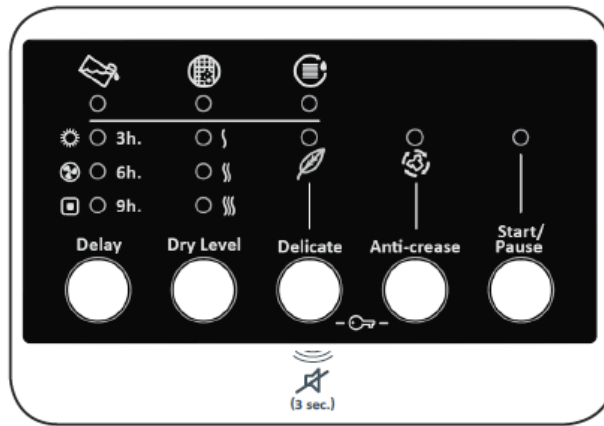

Delay Timer

You can delay the start time of the programme by selecting the 3-hour, 6-hour or 9-hour option. You can activate the desired delay time by pressing the Start/Pause button. When the time is up, the selected programme will start automatically. During the delay time, options compatible with the programme can be activated / deactivated.

Dry Level

Press the Dry Level button to select the dryness level of the laundry. The level has three level.

- ☐ Dry Level 1
- ☐☐ Dry Level 2
- ☐☐☐ Dry Level 3

Dry Level 1 "☐": Recommended for laundry that will be ironed before using. To select the "☐" drying option, press the drying option button until the "☐" symbol is displayed.

Dry Level 2 "☐☐": Recommended for laundry that requires hanging. To select the "☐☐" drying option, press the drying option button until the "☐☐" symbol is displayed.

Dry Level 3 "☐☐☐": Recommended for laundry that will be folded and put into a wardrobe at the end of the programme. To select the "☐☐☐" drying option, press the drying option button until the "☐☐☐" symbol is displayed.

Delicate

Delicate fabrics are dried for a longer time at a low temperature.

NOTE:

If delicate function is activated, the dry level function is unable to activate. Both function cannot activate at the same time.

Buzzer Cancel

The dryer gives an audible warning when program selection knob is turned, buttons are pressed and at the end of programme. To cancel the buzzer, press and hold the "Delicate" button for 3 seconds. When you press the button, you will hear an audible warning that the option has been cancelled.

Anti-Crease

If you select the "Anti-Crease" option and do not open the door of the dryer at the end of the programme, the 1-hour anti-crease phase will extend to 2 hours. After selecting the Anti-crease option, you will hear an audible warning. You can press the same button again to cancel the option. If you open the door or press the Start/Pause key while the anti-crease step is in progress, the anti-crease programme will be cancelled.




Child Lock

There is a child lock option to avoid changes in the programme when keys are pressed during the programme. To activate the child lock, press and hold the "Anti-crease" and "Delicate" keys for 3 seconds. When the child lock is active, all keys will be deactivated. Child lock will be deactivated automatically at the end of the programme. When activating/deactivating the child lock, the indicator light of the "Anti-crease" and "Delicate" options will flash and an audible warning will be heard. When the product is running or the child lock is active, if you turn the programme selection knob, you will hear an audible warning. Even if you set the programme knob to another programme, the previous programme will continue running. To select a new programme, you need to deactivate the child lock and then set the programme selection knob to "OFF" position. Then, you can select and start the desired programme.


4.2.1 ADDITIONAL FUNCTIONS PROGRAMME

PROGRAMME	OPTIONS			
	Delicate	Delay Timer	Buzzer	Child Lock
Cotton Extra Dry	✓	✓	✓	✓
Cotton Cupboard Dry	✓	✓	✓	✓
Cotton Iron Dry	✓	✓	✓	✓
Synthetics Cupboard Dry	✓	✓	✓	✓
Synthetics Iron Dry	✓	✓	✓	✓
Delicate	✓	✓	✓	✓
Mix	✓	✓	✓	✓
Baby Care	✓	✓	✓	✓
Refresh	X	✓	✓	✓
Jeans	✓	✓	✓	✓
60 min	X	✓	✓	✓
30 min	X	✓	✓	✓
10 min	X	✓	✓	✓
Express 29'	X	✓	✓	✓
Shirts 12'	X	✓	✓	✓


4.3 DISPLAY SYMBOLS:

Water tank warning indicator	
Lint filter cleaning warning indicator	
Condenser cleaning warning indicator	




Water Container Full

Dryer will stop operate once the link filter is full. Please empty the water container when the “” light is on.

Lint Filter Full

Dryer will stop operate once the link filter is full. Please clean the link filter when the “” light is on.

4.4 DRYING STAGES INDICATOR:

Drying	
Cooling	
End	

The electronic indicators show the progress of a running programme. At the beginning of each programme step, the relevant indicator light comes on and the light of the completed stages will turn off.

Drying

It remains on during the whole drying process until the drying level reaches "Cooling".

Cooling

It lights up when the drying level reaches "Cooling" and remains on until the next stage.

End

It lights up at the end of the programme.

During the Programme

If you open the door when the programme is running, the dryer will switch to standby mode. Once the door has been closed, press the Start/Pause key to resume the programme.

Do not open the loading door when the programme is running.


Programme End

Once the programme is over, the indicator light for Start/Pause, water tank, filter cleaning and condenser cleaning will turn on and the buzzer will be active. You can remove the laundry from dryer.

NOTE:

Clean the lint filter after every programme. Empty the water tank after every programme. If you do not take out the laundry after the programme has ended, the 1-hour Anti-crease programme will automatically be activated.

5.0 PROGRAMME SETTING

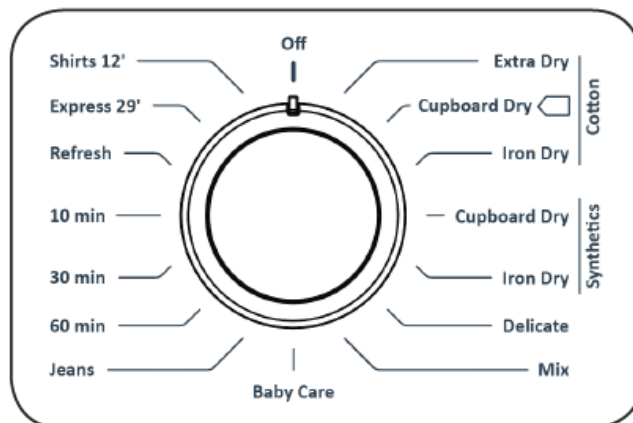

Cotton Extra Dry

This programme dries thick and multi-layer fabrics, such as cotton towels, bedsheets, pillowcases, bathrobes, at a high temperature to allow you to place them in a closet.

Cotton Cupboard Dry

This programme dries cotton pyjamas, underwear, table cloths etc. to allow you to place them in a closet.

Cotton Iron Dry

This programme dries cotton laundry to prepare it for ironing. Laundry removed from the dryer will be damp.

Synthetics Cupboard Dry

This programme dries synthetics, such as shirts, t-shirts, blouses, at a lower temperature compared to the cottons programme to allow you to place them in a closet.

Synthetics Iron Dry

This programme dries synthetics, such as shirts, t-shirts, blouses, at a lower temperature compared to the cottons programme to prepare them for ironing. Laundry removed from the dryer will be damp.

Delicate

This programme dries thin clothes like shirts, blouses and silk garments at a low temperature to make them ready to wear.

Mix

This programme dries cotton-synthetic mixed garments that do not discolour to make them ready to wear.

Baby Care

This programme dries delicate infant clothes at a low temperature to make them ready to wear.

Jeans

This programme is used to dry jeans.

Time Programmes

To reach the required drying level at a low temperature, you can use the timed programmes of 10 minutes, 30 minutes and 60 minutes. Regardless of the drying level, the programme stops at the desired time.

Refresh

This programme provides ventilation for 10 minutes without applying heat to help fresh up your garments.

Express 29'

2 kg of cotton shirts spin at a high speed and dried in 29 minutes. The data will vary based on the garments loading and conditions.

Shirts 12'

2 to 3 shirts are ready for to be ironed in 12 minutes. The data will vary based on the garments loading and conditions.

5.1 PROGRAMME TABLE AND DURATIONS

Programme	Load (kg)	Spin speed	Approximate amount of remaining humidity	Duration (minutes)
Cotton Extra Dry	9	1000	60%	155
Cotton Cupboard Dry	9	1000	60%	149
Cotton Iron Dry	9	1000	60%	126
Synthetics Cupboard Dry	4.5	800	40%	56
Synthetics Iron Dry	4.5	800	40%	49
Delicate	2	600	50%	39
Mix	4	1000	60%	75
Baby Care	3	1000	60%	60
Jeans	4	800	60%	85
60 min	-	-	-	60
30 min	-	-	-	30
10 min	-	-	-	10
Refresh	-	-	-	10
Express 29'	2	1200	50%	29
Shirts 12'	0.5	1200	50%	12

NOTE:

The above program is for reference only. Users may choose the appropriate programme according to their needs and the condition of laundry. The actual time may be vary from the time above as the humidity sensor will adjust the time accordingly base on the dryness of the garments.

5.2 OPERATION


1. Press On/Off button to activate the dryer.
2. Open the door and insert the laundry. Close the door once all the laundry had been inserted.
3. Turn the program knob and select the right program to dry the laundry. (Please refer to 5.1 program table)
4. Select the intensity level if you wish to have better drying result.
5. Select the anti-crease program if you wish to activate the anti-crease feature after drying.
6. Select the delay start if you wish to have the delay start function. (delay up to 9 hours)
7. Press the Start/Pause button to start the program.
8. Once the drying cycle has completed, please turn off the power from the plug before removing the laundry from dryer.

NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM DUE TO THE RISK OF FIRE.

6.0 CLEANING AND MAINTENANCE

Do not use industrial chemicals to clean your dryer. Do not use a dryer that has been cleaned with industrial chemicals.


6.1 CLEANING THE LINT FILTER

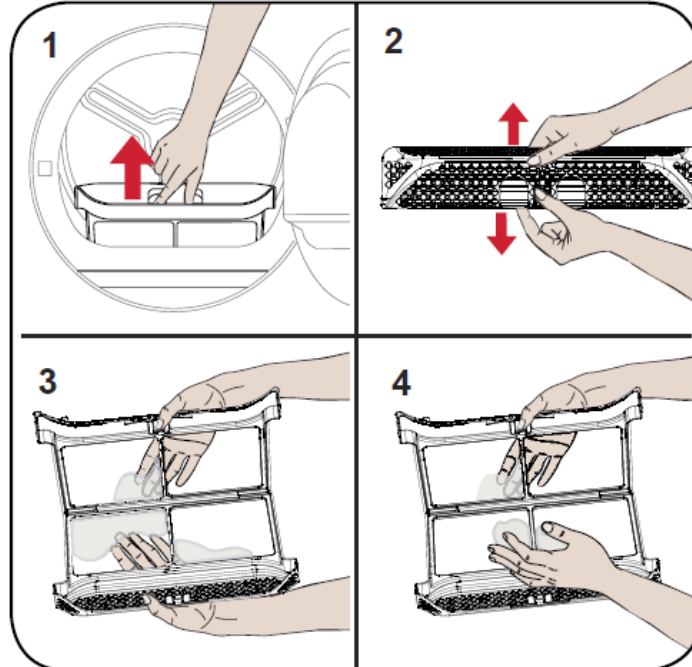


1. Pull the lint filter upwards and away from the appliance.
2. Open the lint filter.
3. Wash the lint filter occasionally in detergent solution using a soft brush to remove small particles.
4. Close and refit the lint filter.

NOTE:

If your lint filter has damaged, replace it to ensure no damage is caused to the dryer. Do not use chemical, steel, wooden or abrasive cleaners to clean the appliance. After the dryer has been used for a certain period of time, if you encounter a layer that will cause obstruction on the filter surface, wash the filter with warm water to clean the layer. Dry the filter thoroughly before reinstalling it again.

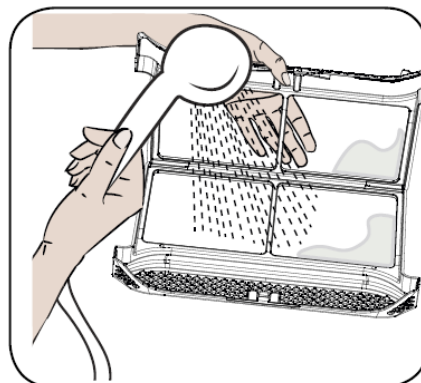

6.2 EMPTYING THE WATER TANK

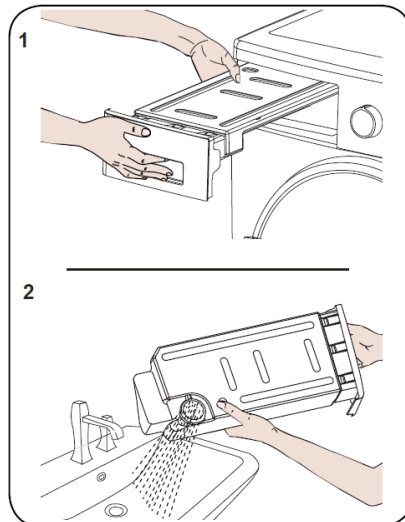


1. Pull the drawer cover and carefully take out the tank.
2. Empty the water in the tank.
3. Refit the water tank.

NOTE:

Never remove the water tank when the programme is running. The water condensed in the water tank is not suitable for human consumption. Do not forget to empty the water tank after each time use.

6.3 CLEANING THE CONDENSER

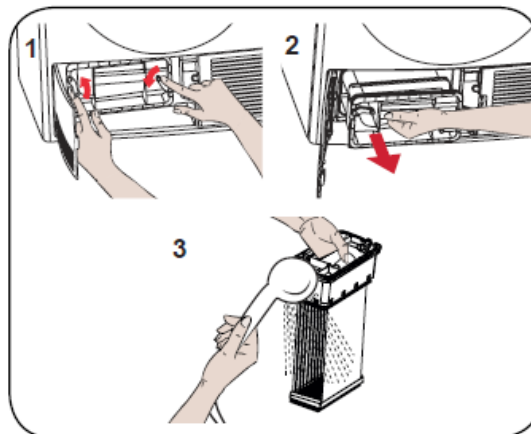

Clean the condenser when you see the warning “Condenser Cleaning” or after every 30 drying processes or once a month.


1. If the drying process is completed, open the loading door and wait for it to cool down.
2. Open the plinth and release the 2 cover locks of the condenser.
3. Hold the condenser by the plastic part and pull it out.
4. Clean it with a showerhead and wait for the water to drain off.

5. Fully insert the condenser into its seat and lock the 2 locks.
6. Close the plinth cover

NOTE:

Do not operate the dryer without the air condenser.

6.4 CLEANING THE HUMIDITY SENSOR

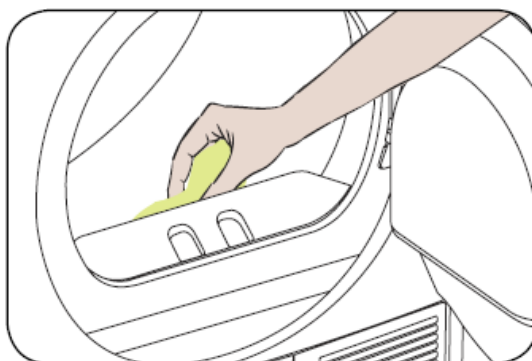

Inside the dryer, there are humidity sensors that detect whether the laundry is dry or not.

To clean the sensors:

1. Open the loading door of the dryer.
2. If the dryer is still hot due to the drying process, wait for it to cool down.
3. Using a soft cloth soaked in vinegar, wipe the metal surfaces of the sensor and dry them.


NOTE:

Clean the metal sensor surface 4 times a year. Do not use metal tools to clean the metal surfaces of the sensor.

6.5 CLEANING THE INNER SURFACE OF THE LOADING DOOR

Clean the inner surface of the loading door after each time use.

Open the loading door of the dryer and clean all of the inner surfaces and the gasket with a soft, damp cloth.

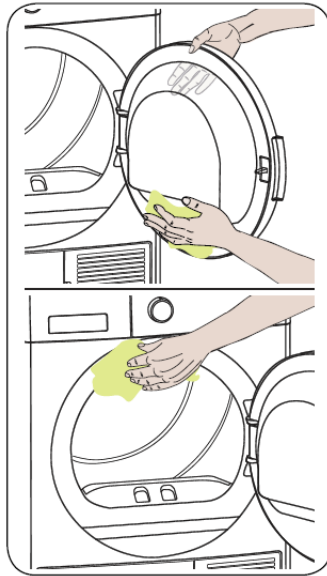


6.6 CLEANING THE CABINET AND DRUM

Use a soft damp cloth wipe when cleaning the cabinet and drum.

1. Not to rinse with water directly.
2. Not to use scouring pad to clean the drum.
3. Not to use any abrasive powders or corrosive substances which could damage the surface.

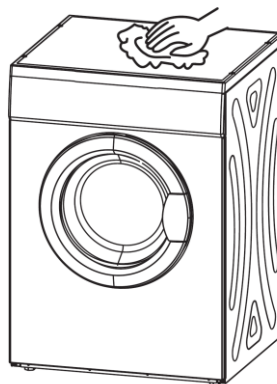

✘ Make sure to open the front door for airing after cleaning the drum.








7.0 TROUBLESHOOTING

If the laundry is not dried after normal drying program.

1. Check that the lint filter has been cleaned. A blocked filter will restrict the airflow.
2. If the cut-out continues to operate after checking the above points, you should contact the after sales service centre. Do not attempt to repair the unit.
3. Check that the appliance has the correct weight load in the drum before starting the appliance.
4. If your appliance does not work properly, check the following before calling the after sales service centre:-
 - a) Check that there is a supply of electricity.
 - b) Check that the door has been properly closed.
 - c) Check the fuse in the moulded plug.
 - d) Check that the lint filter has inserted properly in place.
 - e) Check that the safety cut-out has been operated. Press the reset button at the rear of the appliance to reset.

Trouble	Cause	Solution
Dryer not able to start	<ul style="list-style-type: none"> • The power plug is not plug in proper way. • Dry clothes exceed the capacity. • The temperature fuse is cut. • Program not selected. 	<ul style="list-style-type: none"> • Check the power socket, make sure power plug insert properly to power socket. • Make sure the drying clothes cannot exceed 9kg. • Please contact the service centre to replace the temperature fuse. • Set the right program.
The programme has been interrupted for no reason	<ul style="list-style-type: none"> • The door might not be closed properly. • There might have been a power failure. • The water container might be full. 	<ul style="list-style-type: none"> • Make sure that the door is properly closed. • Press the Start/Pause key to start the programme. • Empty the water container
Laundry comes out damp at the end of the drying process.	<ul style="list-style-type: none"> • The programme used might not be suitable for the type of laundry. • The surface of the lint filter might be clogged. • The condenser might be clogged. • The dryer might be overloaded with laundry. • The laundry might be insufficiently spin. 	<ul style="list-style-type: none"> • Check the care labels on the laundry items, select a suitable programme for the type of laundry and additionally, use the time programmes. • Wash the filter with lukewarm water. • Wash the condenser. • Do not overload the dryer. • Select a higher spin speed on your washing machine after that put into dryer for dry.
 is lighting	<ul style="list-style-type: none"> • Empty the water container 	<ul style="list-style-type: none"> • Make sure pour out condensate water. • If the light still on, please contact the service centre.
 is lighting	<ul style="list-style-type: none"> • The lint filter is almost full. 	<ul style="list-style-type: none"> • Make sure clean the lint filter all the time.

7.1 ERROR CODE

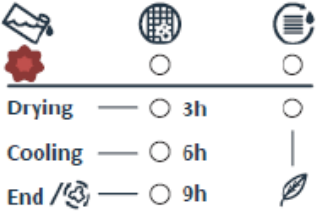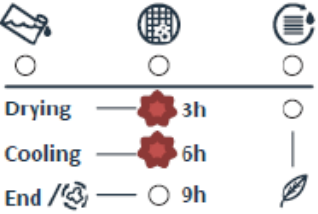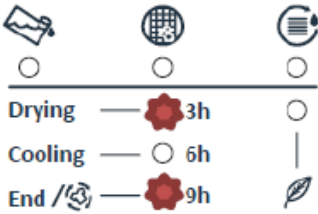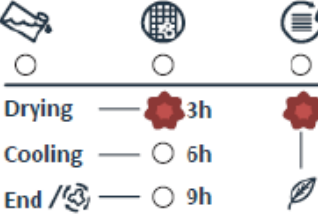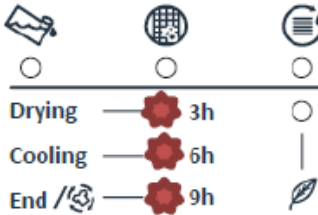Error code	Action
 <p>E03</p>	<p>Empty the water tank. If problem does not solved, please contact technician for service.</p>
 <p>E04</p>	<p>Please contact technician for service.</p>
 <p>E05</p>	<p>Please contact technician for service.</p>
 <p>E06</p>	<p>Please contact technician for service.</p>
 <p>E08</p>	<p>There may be voltage fluctuation in mains. Wait until voltage is appropriate for working range then restart again. If problem does not solved, please contact technician for service.</p>

8.0 TECHNICAL SPECIFICATION

Model	ED-H9151C(WH)
Drying Capacity	9.0KG
Voltage	220–240V~
Frequency	50Hz
Rated Power	2,700W
Maximum Current	16A
Product Dimension (mm)	596 (W) x 845 (H) x 609 (D)
Carton Dimension (mm)	655 (W) x 890 (H) x 662 (D)
Net / Gross Weight	38.5 KGS / 41.0 KGS

IMPORTANT USER INFORMATION

This tumble dryer is intended for **DOMESTIC USE ONLY**.

- Adequate ventilation must be provided to avoid back flow of gases into the room from appliances burning other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuel.
- It is not recommended that the dryer is placed directly next to ovens, cookers or other heating appliances as the performance of the dryer may be affected.
- A carpet must not obstruct the ventilation openings in the base of the dryer.
- Do not stack the tumble dryer on top of other appliances without the correct stacking kit.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- It is important to clean the lint filter after each drying cycle or the restrictions to airflow will extend drying times and could cause the safety cut-out to trip.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer.
- The dryer should be serviced by an authorized service centre and only genuine parts used.
- Do not attempt to alter or modify the product in any way.
- We recommend that the appliance is unplugged each time after use. It should always be disconnected from the electricity supply if not in use for long periods.

- The rear of the dryer gets hot during use. Position the dryer so that the back is not accessible while in operation, but ensure that the sides have a space available to allow airflow.
- The special mains cable and plug assembly must only be replaced with a genuine part from the manufacturer or authorized service centre.
- It is important to clean fluff from the window of the dryer and around the door seal after each drying cycle.
- Children should be supervised to ensure they do not play with the appliance.

WARNING: Never stop a tumble dryer before the end of a drying cycle unless all items are quickly removed and spread out so that heat is dissipated. Remove all objects from pockets such as lighters and matches.

DO NOT use a two-way adaptor, or extension lead. The dryer must be connected to its own socket.

DO NOT block the air inlets at the front, base, rear and side of your dryer.

DO NOT allow fluff to accumulate around the tumble dryer.

DO NOT exceed the recommended maximum load.

DO NOT dry unwashed items in the tumble dryer

DO NOT place articles in the dryer if anything other than a water solution has been used in the cleaning process.

DO NOT tumble dry anything other than water washed laundry.

DO NOT attempt to dry dripping wet articles.

DO NOT use the tumble dryer if you suspect that it is damaged in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury. Consult your local authorized service centre and insist on genuine spare parts.

NOTICE

This product must not be disposed together with domestic waste. It has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help to save natural resources and make sure the product is disposed in an environmental friendly and healthy way.



ELBA