 


# ELBA

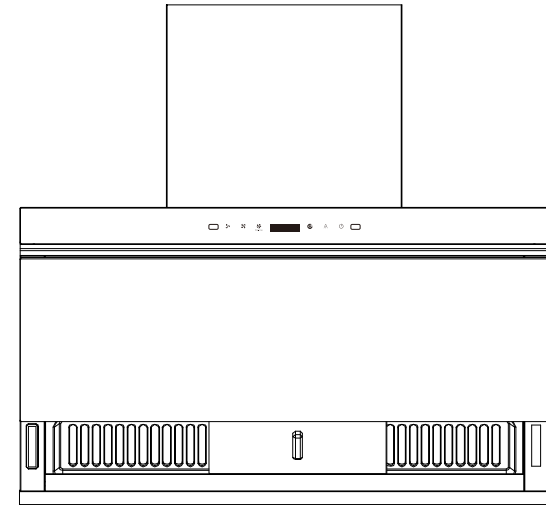

# ELBA

**DESIGNER HOOD**  
**MODEL: EH-Q9690DC(BK)**

### **Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

 
**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate**



## MAIN SPECIFICATION

Rated Voltage	: 220-240V~, 50/60Hz
LED Light	: 1.5W x 2
Suction Power	: 2,200m <sup>3</sup> /h
Rated Power	: 210W DC
Product Dimension	: 900mm(W)x850-1181mm(H)x360mm(D)

## PRODUCT DIMENSION

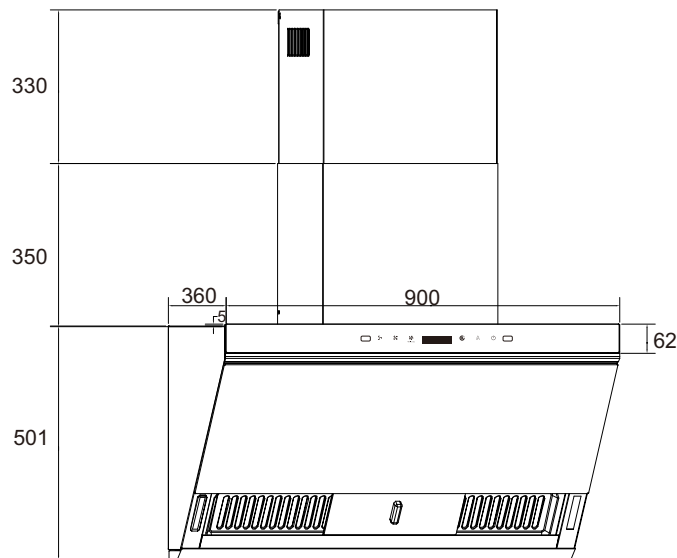

### NOTICE

This product must not be disposed together with domestic waste. It has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help to save natural resources and make sure the product is disposed in an environmental friendly and healthy way.



Please read this instruction carefully. It is advisable to keep this instruction manual in a safe place for future reference.

 
## SAFETY PRECAUTIONS

1. Keep electrical appliances out of reach from children. Do not let them to operate the appliances without supervision.
2. To protect against the risk of electrical shock, do not immerse the product, power cord or plug into water or any other liquid.
3. This product is for household and indoor use only.
4. This product is not intended for use by person (including children) with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. If the power cord or plug is damaged, it must be replaced by the service centre or a qualified service technician to avoid hazard.
6. Before installation, check if the mains supply voltage is matched with the voltage stated on the rating plate of the cooker hood.
7. There must be adequate air ventilation of the room when the cooker hood is used with the cooking appliances with burning gas or other fuels.
8. Ensure that the installation of exhaust complies with the standard of local building, gas and electrical authorities.
9. Do not ignite flames in the pans.
10. There is a risk of fire if cleaning is not carried out in accordance with this instruction.


## ASSEMBLY INSTRUCTIONS

Please check the following before installation:

- Installation of cooker hood must be carried out by an authorized or qualified technician.
- Remove all packaging materials from the cooker hood. Check and make sure that the cooker hood is not damaged.
- Please ensure the power supply has switched OFF when installing the cooker hood.
- For optimum air extraction, avoid having too many windows surrounding the cooker hood which will cause air convection.
- The optimum height for the installation is between 350 to 450mm which is measured from the bottom of the cooker hood to the top of the hob.
- Make sure the hood is in level after installation to avoid oil spill over from the oil cup.

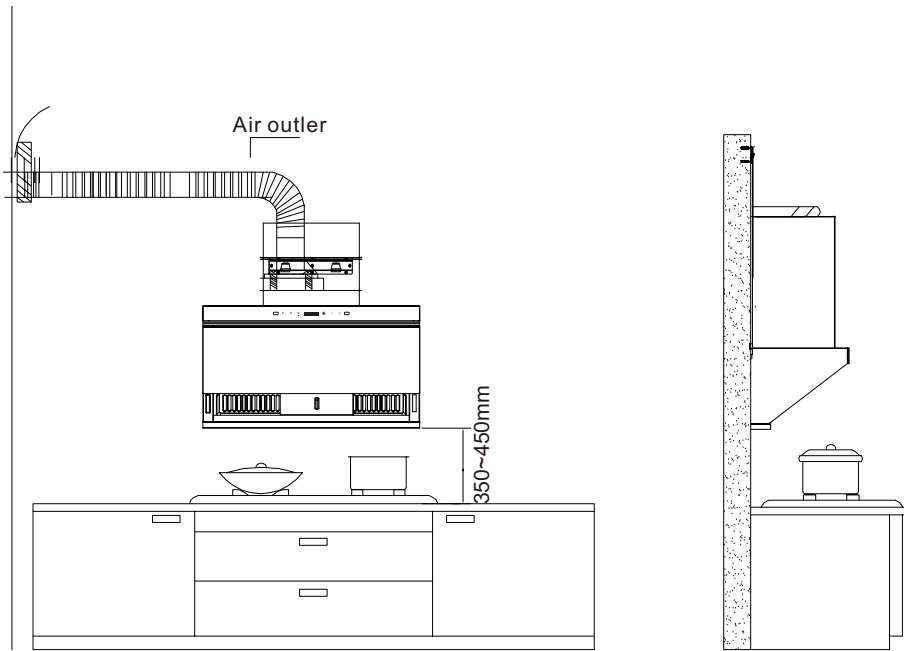

 - Before installing, determine the height between the bottom of the cooker hood to the top of the hob. Mark on the wall to suit the bracket locations.
- Drill holes with diameter of  $\varnothing 8$  mm. Insert the screw anchors into the holes. Fix the mounting bracket and tighten the screws.

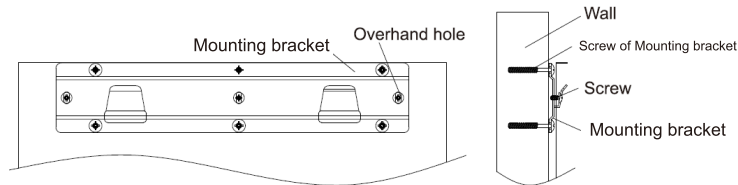

- Hang the cooker hood on the mounting bracket and make sure the cooker hood is in level.
- Fix the exhaust ducting on the cooker hood. Install the oil cup on the cooker hood.

## CLEANING AND MAINTENANCE

- The cooker hood must always be disconnected from the electricity supply before carrying out any maintenance.
- Clean the cooker hood with damp cloth, hot water and mild detergent. Do not use chemical, steel, wooden or abrasive cleaners to clean the cooker hood.
- Remove the oil cup in horizontal direction, wash in hot soapy water, dry and fit back into the cooker hood. Do not use the cooker hood without the oil cup installed.
- Avoid spilling water into the motor and electronic component.









## CLEANING THE GREASE FILTER AND OIL CUP

- Disconnect the power supply. Gently push the clip on the grease filter to eject and use both hands to remove it carefully.
- Remove the oil cup on the motor for cleaning.
- Clean the grease filter with household cleaning detergent to ensure the filters are free from dirt (clean the filter once every month).
- After cleaning, install back the oil cup to its original position and put the grease filter in place.

## TROUBLESHOOTING






Malfunctions	Possible Root Cause	Checking
Weak Suction	The distance is too far between the cooker hood and cooking appliance	Lower down the cooker hood installation height but within the safety guideline
	Strong convection due to too much ventilation	Shut off some of the windows or doors
Cooker hood and light not function	The power supply is not connected	Check if the plug is well connected and the power is on
	Power cord is damaged	Contact technicians for repair
Motor functions but light not works	Light bulb is damaged	Contact technicians to replace a new light bulb
Light works but motor not function	The bearing may be damaged	Contact technicians for repair
	The internal wires or motor capacitor may be burnout	
Vibration on the cooker hood	The screw is loosen	Tighten the screws
The cooker hood is noisy	Exhaust pipe surface is distorted	Contact technicians to reinstall the exhaust pipe

## OPERATING INSTRUCTIONS

 
1. Touch the  button and touch the  to operate the cooker hood in low fan speed.Touch the  to operate the cooker hood in medium fan speed.Touch the  to operate the cooker hood in high fan speed.Touch the  to operate the cooker hood in 5 minutes Turbo Boost + function.
2. When the motor is running in low,medium and high fan speed,touch  button to schedule one minute delay timer to turn off the cooker hood.Cooker Hood will be turn off after one minute.Touch  again when the cooker hood is in delay off timer to turn off cooker hood.
3. Touch the  to turn on the LED light.Touch again to turn off.(This function does not relate to the cooker hood motor).

**NOTE:When the cooker hood is operating,do not perform any of the maintenance or service the cooker hood.Avoid touching the inside of cooker hood to avoid hazard.**


## HEAT CLEANING FUNCTION

1. Touch and hold the  for 3 seconds to activate the  heat cleaning function.
2. The cooker hood will operate the heat cleaning function for 15 minutes.
3. The indicator light will keep blinking,heating cleaning process will start and run for 14 minutes.After that cooker hood will stop for heating function and operate the final cool down.
4. The final cool down process will operate for 1 minute.The cooker hood will be running in high fan speed for final cooling down process and turn off the cooker hood upon completed.
5. Touch and hold the  button to deactivate the  heat cleaning function or touch the  button to deactivate.


**NOTE:During the heating cleaning process,only  button or  button can be functional.**

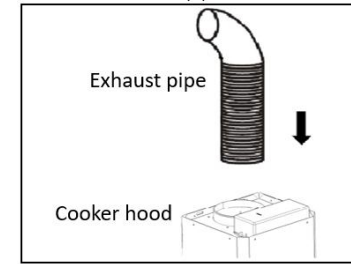

 - Install the exhaust cover to the height required.
- Pull the upper exhaust cover upwards then install the fixing bracket to fix the exhaust cover position.

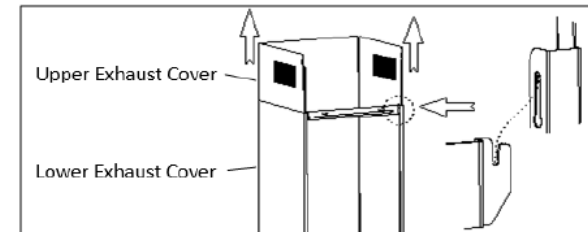

 
- Drill 2 holes with diameter of Ø8mm. Insert the screw anchors into the holes. Fix the mounting bracket and tighten the screws.

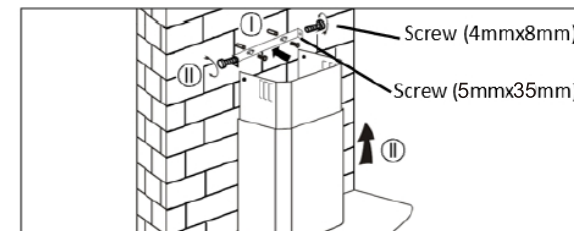


- Before connecting to the mains supply, ensure that the mains voltage corresponds to the voltage on the rating plate of the cooker hood.

## INSTALL THE CHARCOAL FILTER

 
- Disconnect the power supply. Lift the glass upwards. (Please do not open the glass while the cooker hood is operate or connecting the power supply).

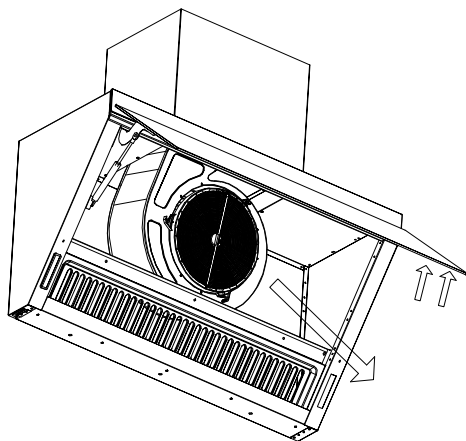

 - Install the charcoal filter and lock the position by turning clockwise direction to tighten.

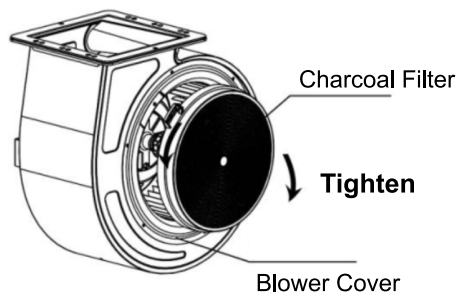

 - To remove the charcoal filter, turn anti-clockwise direction to loosen.

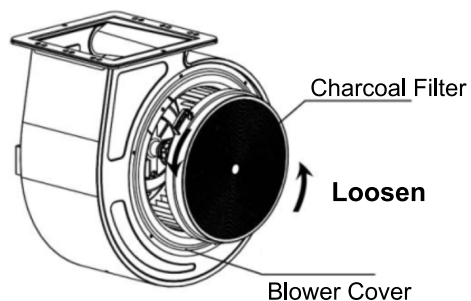

## PRODUCT DESCRIPTIONS



After plugging in the power-on self-test for 1 second, all the indicator lights are off, the cooker hood enters the sensory (OFF state).

### Instructions:

**1. ON/OFF / gesture motion sensor / delay-timer control:** In the OFF state, this button indicator light is off.

- ① If the cooker hood is OFF state, touch this button to enter the standby mode and all buttons are function. Touch this button again to OFF the cooker hood directly.
- ② When the motor is running, touch this button enter the 60 seconds delay-off, and cooker hood will turn off automatically after 60 seconds. During the 60 seconds delay-off is running, touch this button again to turn off the cooker hood directly.
- ③ In OFF state, touch and hold this button for 2 seconds to turn off the gesture motion sensor function. Touch and hold for 2 seconds again to turn on the gesture motion sensor function.

### 2. High speed / Heat cleaning control:

- ① In the standby mode, touch this button to operate high fan speed, touch this button again, the motor stop running and return to standby mode.
- ② In the standby mode, touch and hold for 3 seconds to activate the heat cleaning function (one round is 15 minutes), touch and hold for 3 seconds again or touch ON/OFF button to deactivate the heat cleaning function.

**3. Medium speed control:** In the standby mode, touch this button to operate medium fan speed, touch this button again, the motor stop running and return to standby mode.

**4. Low speed control:** In the standby mode, touch this button to operate low fan speed, touch this button again, the motor stop running and return to standby mode.

### 5. Turbo Boost + Function / clock setting:

- ① In the standby mode, touch this button to operate turbo boost+ function, after 5 minutes, return to previous mode; Touch again to stop the turbo boost+ function. When the cooker hood is running other mode, touch this button to operate turbo boost+ 5 minutes, after that return to previous mode.
- ② In the standby mode, touch this button and hold for 2 seconds to enter clock setting, press "High speed / Low speed" button to adjust clock "+/-".

**6. LED light control:** In the standby mode, touch this button to turn on / turn off the LED light.

### 0. Gesture motion control:

- ① **Turn on / Increase fan speed:** After power-on, wave your hand from left to right to turn on the cooker hood, the cooker hood starts operate with low fan speed and LED light turn on, digital screen displays "F1". Wave your hand from left to right again to increase fan speed in turns and in cycle (F2, F3 - F1, F2, F3, F1...). Turbo Boost+ mode is not included in gesture motion control, touch Turbo Boost+ button to activate.
- ② **Turn off / decrease fan speed:** In the current operating fan speed function, wave your hand from right to left to decrease fan speed in turns. When in low fan speed (F1) operating, wave your hand from right to left to enter 60 seconds delay off. When in delay off countdown state, wave your hand from right to left to turn off the cooker hood directly.

**NOTE:** The ideally gesture motion speed from left to right or right to left shall within 2 seconds. The ideally distance of gesture motion from control panel is form 5-10cm.