



ELBA

OVEN TOASTER MODEL: EOT-D0989(BK)

Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

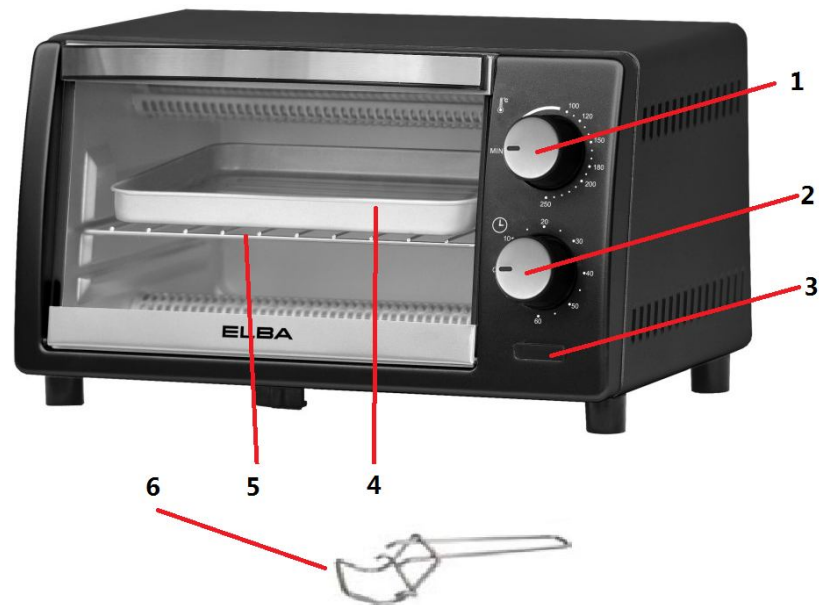 
For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

IMPORTANT SAFEGUARDS

When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not operate the appliance with a damaged power cord or plug or after the appliance malfunctions, or it is dropped or damaged in any manner. Return the appliance to the nearest authorized dealer or after-sales service centre for examination, repair or mechanical adjustment.
3. Do not let the power cord hang over edge of table or hot surface.
4. To protect against electric shock, do not immerse power cord, plug, or the product body of the appliance in water or any other liquids.
5. Unplug the plug from wall outlet when not in use.
6. Do not place the appliance on or near the gas or electric burner, or in a heated oven.
7. Never use any accessories or parts that ELBA does not specifically recommend.
8. While operating the appliance, the product surface will be very hot, use only the door handle or knobs. Let the appliance to cool down before removing any parts of the appliance for cleaning.
9. Be careful when moving the appliance especially when it contains hot oil or other hot liquids.
10. Always wear protective insulated oven gloves when inserting and removing foods from the appliance.
11. Never leave the appliance unattended while toasting.
12. Oversized foods or metal utensils must not be inserted into the appliance as it may cause fire or the risk of electric shock.
13. Do not store any items such as cardboard, plastic, paper, etc. into the inner oven other than its recommended accessories.
14. Do not cover any parts of the oven with metal foil curtains, cloths, wall as it will cause fire easily.
15. Do not clean the appliance with metal scouring pads as it may cause electric shock if touching the electric parts.
16. Do not use this appliance outdoors.
17. Do not operate the appliance for other than its intended use.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. While operating the appliance, keep the appliance out of reach of children.
21. Save these instructions for future reference.

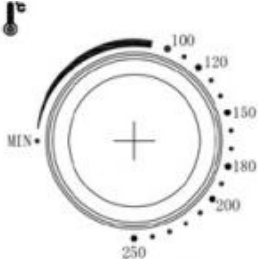 
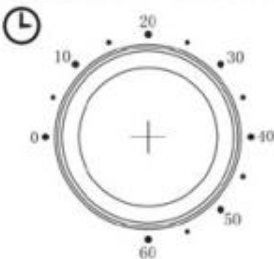 
PRODUCT DESCRIPTION



1. Temperature knob
2. Timer knob
3. Indicator light
4. Food tray
5. Wire rack
6. Tray handle

Note: The food tray is not designed to hold on to the level of rack support

CONTROL KNOB

<p>Temperature knob : 100- 250°C</p> 	<p>Set the temperature that suits the foods by turning the knob clockwise.</p>
<p>Timer knob: 0 – 60 minutes</p> 	<p>Set the timer according to your desired toasting time.</p> <p>Caution: Do not open the glass door while the oven is operating!</p>

OPERATING THE APPLIANCE FOR THE FIRST TIME

1. Unpack the appliance and place it on a flat horizontal counter top. Check all the accessories whether all in good condition.
2. For correct operation, the oven must have sufficient airflow. Allow at least 10cm distance at both sides of the oven and 15cm on top of the oven to be free from any obstacle.
3. For initial use, please clean the wire rack, food tray and tray handle with mild detergent and water. Wipe the inner oven with dry cloth.
4. Re-assemble the accessories into the inner oven and insert the plug into the wall outlet.

Note: Ensure the timer knob is switched to “0” sign position.

5. Turn the temperature knob to max level 250°C and set the timer button approximately 15 minutes to eliminate any protective substance that still remain in the inner oven.

Caution: The body and inner oven can be very hot after preheating.

6. Do not worry about the smoke as it is normal for the first time heating. The smoke will be disappear after about 20 minutes.
7. Insert foods that need to be preheat or toasted and adjust the temperature and timer knobs to desired level and time that suit the food.

OPERATING THE APPLIANCE

1. In general, it is not necessary to preheat the oven but for better cooking result, complete step 5 (under operating the appliance for the first time) every time before inserting food into the oven.

Caution: The body oven can be very hot after preheating.

8. Insert foods that need to be preheat or toasted and adjust the temperature and timer knobs to desired level and time type that suit the food.

Warning: At this stage, the heaters have started to preheat and it might be very hot at the surface. Do not touch the body while operating the oven.

CLEANING AND MAINTENANCE

1. After use, power off the switch and unplug the plug from the wall outlet. Allow the appliance to cool down before cleaning.
2. Wipe the food tray, wire rack and tray handle with towel or soft cloth. **WARNING:** Never immerse the appliance in water or any other liquids for cleaning.
3. Store the appliance in a safe clean place.

ENVIRONMENT-FRIENDLY DISPOSAL



You can help to protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.



ELBA